SERVICE BULLETIN

Original Issue Date: 2/01

Model: Kohler Generator Sets Using K and M Series Kohler Engines Market: Mobile, Portable, Residential/Commercial, and RV

Subject: Valve Stem Greasing

Introduction

To prevent premature valve guide wear at initial startup, apply assembly grease to the valve stems of all K and M series Kohler engines.

Service Procedure

Any time the valves are removed, apply a light coating of grease to the stems before reinstalling the valves onto the engine. The recommended grease type is Dow Corning G-N Metal Assembly Paste, Kohler Part No. 25 357 12-S (2.8 oz. tube).

Safety Precautions


Observe the following safety precautions while servicing the unit.



Accidental starting. Can cause severe injury or death.

Disconnect the battery cables before working on the generator set. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery. **Disabling the generator set.** Accidental starting can cause severe injury or death. Before working on the generator set or connected equipment, disable the generator set as follows: (1) Move the generator set master switch to the OFF position. (2) Disconnect the power to the battery charger. (3) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent starting of the generator set by an automatic transfer switch, remote start/stop switch, or engine start command from a remote computer.

Disabling the generator set. Accidental starting can cause severe injury or death. Before working on the generator set or equipment connected to the set, disable the generator set as follows: (1) Disconnect the power to the battery charger, if equipped. (2) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent the starting of the generator set by the remote start/stop switch.

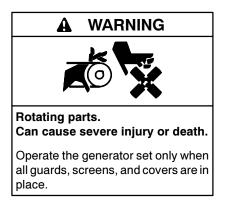

Routing	Service	Sales	Parts	Technician	Technician	Technician	Return
	Manager	Manager	Manager	No. 1	No. 2	No. 3	This to
Initial Here							

Tightening the hardware. Flying projectiles can cause severe injury or death. Loose hardware can cause the hardware or pulley to release from the generator set engine and can cause personal injury. Retorque all crankshaft and rotor hardware after servicing. Do not loosen the crankshaft hardware or rotor thrubolt when making adjustments or servicing the generator set. Rotate the crankshaft manually in a clockwise direction only. Turning the crankshaft bolt or rotor thrubolt counterclockwise can loosen the hardware.

Servicing the generator set when it is operating. Exposed moving parts can cause severe injury or death. Keep hands, feet, hair, clothing, and test leads away from the belts and pulleys when the generator set is running. Replace guards, screens, and covers before operating the generator set.