


# Installation

## Residential Generator Sets

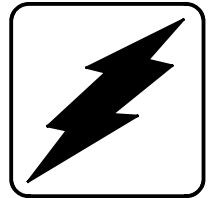

Models:

**15RES**

**30RES**

**ISO 9001**  
**KOHLER**  
POWER SYSTEMS  
NATIONALLY REGISTERED

**KOHLER**<sup>®</sup>  
POWER SYSTEMS

TP-6341 3/09d



# Table of Contents

|  |           |
|--|-----------|
| <b>Product Identification Information</b> .....                  | <b>2</b>  |
| <b>Safety Precautions and Instructions</b> .....                 | <b>5</b>  |
| <b>Introduction</b> .....  | <b>9</b>  |
| <b>Service Assistance</b> .....                                  | <b>10</b> |
| <b>Section 1 General</b> .....                                   | <b>11</b> |
| 1.1 Introduction .....   | 11        |
| 1.2 Enclosed Generator Sets .....                                | 11        |
| 1.3 Unit-Mounted Radiator Cooling .....                          | 11        |
| 1.3.1 Cooling System Features .....                              | 11        |
| 1.3.2 Recommended Coolant .....                                  | 11        |
| 1.4 Fuel Supply .....  | 11        |
| 1.5 Electrical System .....                                      | 11        |
| 1.5.1 Line Circuit Breakers .....                                | 11        |
| 1.5.2 Electrical Connections .....                               | 12        |
| 1.5.3 Load Lead Connections .....                                | 12        |
| 1.5.4 Ground and Neutral Connections .....                       | 12        |
| 1.5.5 Terminal Connector Torque .....                            | 13        |
| 1.5.6 Battery Chargers .....                                     | 14        |
| 1.5.7 Alternator Factory Connection .....                        | 14        |
| 1.5.8 Automatic Transfer Switches .....                          | 14        |
| <b>Section 2 Installation Instructions</b> .....                 | <b>15</b> |
| 2.1 Introduction .....   | 15        |
| 2.1.1 Location Factors .....                                     | 15        |
| 2.1.2 Mounting Surface .....                                     | 16        |
| 2.1.3 Vibration Isolation .....                                  | 16        |
| 2.1.4 Lifting Generator Set .....                                | 16        |
| 2.2 Installation Procedure .....                                 | 16        |
| 2.2.1 Prepare Site .....   | 17        |
| 2.2.2 Mount and Ground Generator Set .....                       | 17        |
| 2.2.3 Exhaust Pipe Orientation (Dropover Sound Enclosures) ..... | 18        |
| 2.2.4 Connect AC and DC Wiring .....                             | 18        |
| 2.2.5 Install Engine Starting Battery .....                      | 19        |
| 2.2.6 Install and Connect Fuel Supply .....                      | 20        |
| 2.2.7 Fuel Conversion Procedures .....                           | 22        |
| 2.2.8 Add Coolant .....  | 23        |
| 2.2.9 Check and Adjust Fuel System .....                         | 23        |
| 2.2.10 Operation Tests .....                                     | 25        |
| <b>Section 3 Accessories</b> .....                               | <b>27</b> |
| 3.1 Introduction .....   | 27        |
| 3.2 Common Fault and Run Relay Board .....                       | 27        |
| 3.3 Remote Digital Gauge .....                                   | 28        |
| 3.4 Block Heaters .....  | 28        |
| 3.5 Oil Makeup/Low Level Shutdown Kit .....                      | 28        |
| <b>Section 4 Controller</b> .....                                | <b>29</b> |
| 4.1 Advanced Digital Control (ADC 2100) .....                    | 29        |
| 4.2 Controller Automatic Power Down .....                        | 29        |
| 4.3 Controller Configuration .....                               | 29        |
| 4.4 Voltage Adjustments .....                                    | 33        |
| <b>Section 5 Dimension Drawings</b> .....                        | <b>37</b> |
| Appendix A Abbreviations .....                                   | 43        |



# Safety Precautions and Instructions

IMPORTANT SAFETY INSTRUCTIONS. Electromechanical equipment, including generator sets, transfer switches, switchgear, and accessories, can cause bodily harm and pose life-threatening danger when improperly installed, operated, or maintained. To prevent accidents be aware of potential dangers and act safely. Read and follow all safety precautions and instructions. **SAVE THESE INSTRUCTIONS.**

This manual has several types of safety precautions and instructions: Danger, Warning, Caution, and Notice.

## DANGER

Danger indicates the presence of a hazard that **will cause severe personal injury, death, or substantial property damage.**

## WARNING

Warning indicates the presence of a hazard that **can cause severe personal injury, death, or substantial property damage.**

## CAUTION

Caution indicates the presence of a hazard that **will or can cause minor personal injury or property damage.**

## NOTICE

Notice communicates installation, operation, or maintenance information that is safety related but not hazard related.

Safety decals affixed to the equipment in prominent places alert the operator or service technician to potential hazards and explain how to act safely. The decals are shown throughout this publication to improve operator recognition. Replace missing or damaged decals.

## Accidental Starting

### WARNING



**Accidental starting.  
Can cause severe injury or death.**

Disconnect the battery cables before working on the generator set. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery.

**Disabling the generator set. Accidental starting can cause severe injury or death.** Before working on the generator set or connected equipment, disable the generator set as follows: (1) Move the generator set master switch to the OFF position. (2) Disconnect the power to the battery charger. (3) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent starting of the generator set by an automatic transfer switch, remote start/stop switch, or engine start command from a remote computer.

## Battery

### WARNING



**Sulfuric acid in batteries.  
Can cause severe injury or death.**

Wear protective goggles and clothing. Battery acid may cause blindness and burn skin.

### WARNING



**Explosion.  
Can cause severe injury or death.  
Relays in the battery charger  
cause arcs or sparks.**

Locate the battery in a well-ventilated area. Isolate the battery charger from explosive fumes.


**Battery gases. Explosion can cause severe injury or death.** Battery gases can cause an explosion. Do not smoke or permit flames or sparks to occur near a battery at any time, particularly when it is charging. Do not dispose of a battery in a fire. To prevent burns and sparks that could cause an explosion, avoid touching the battery terminals with tools or other metal objects. Remove all jewelry before servicing the equipment. Discharge static electricity from your body before touching batteries by first touching a grounded metal surface away from the battery. To avoid sparks, do not disturb the battery charger connections while the battery is charging. Always turn the battery charger off before disconnecting the battery connections. Ventilate the compartments containing batteries to prevent accumulation of explosive gases.

**Battery electrolyte is a diluted sulfuric acid. Battery acid can cause severe injury or death.** Battery acid can cause blindness and burn skin. Always wear splashproof safety goggles, rubber gloves, and boots when servicing the battery. Do not open a sealed battery or mutilate the battery case. If battery acid splashes in the eyes or on the skin, immediately flush the affected area for 15 minutes with large quantities of clean water. Seek immediate medical aid in the case of eye contact. Never add acid to a battery after placing the battery in service, as this may result in hazardous spattering of battery acid.

**Battery short circuits. Explosion can cause severe injury or death.** Short circuits can cause bodily injury and/or equipment damage. Disconnect the battery before generator set installation or maintenance. Remove all jewelry before servicing the equipment. Use tools with insulated handles. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery. Never connect the negative (-) battery cable to the positive (+) connection terminal of the starter solenoid. Do not test the battery condition by shorting the terminals together.

**Battery acid cleanup. Battery acid can cause severe injury or death.** Battery acid is electrically conductive and corrosive. Add 500 g (1 lb.) of bicarbonate of soda (baking soda) to a container with 4 L (1 gal.) of water and mix the neutralizing solution. Pour the neutralizing solution on the spilled battery acid and continue to add the neutralizing solution to the spilled battery acid until all evidence of a chemical reaction (foaming) has ceased. Flush the resulting liquid with water and dry the area.

## Engine Backfire/Flash Fire


|  |
|--|
| <b>⚠ WARNING</b>   |
|   |
| <p><b>Fire.</b><br/><b>Can cause severe injury or death.</b></p> <p>Do not smoke or permit flames or sparks near fuels or the fuel system.</p> |

**Servicing the fuel system. A flash fire can cause severe injury or death.** Do not smoke or permit flames or sparks near the carburetor, fuel line, fuel filter, fuel pump, or other potential sources of spilled fuels or fuel vapors. Catch fuels in an approved container when removing the fuel line or carburetor.

**Servicing the air cleaner. A sudden backfire can cause severe injury or death.** Do not operate the generator set with the air cleaner removed.

**Combustible materials. A fire can cause severe injury or death.** Generator set engine fuels and fuel vapors are flammable and explosive. Handle these materials carefully to minimize the risk of fire or explosion. Equip the compartment or nearby area with a fully charged fire extinguisher. Select a fire extinguisher rated ABC or BC for electrical fires or as recommended by the local fire code or an authorized agency. Train all personnel on fire extinguisher operation and fire prevention procedures.

## Exhaust System

|   |
|---|
| <b>⚠ WARNING</b>  |
|    |
| <p><b>Carbon monoxide.</b><br/><b>Can cause severe nausea, fainting, or death.</b></p> <p>The exhaust system must be leakproof and routinely inspected.</p> |

**Generator set operation. Carbon monoxide can cause severe nausea, fainting, or death.** Carbon monoxide is an odorless, colorless, tasteless, nonirritating gas that can cause death if inhaled for even a short time. Avoid breathing exhaust fumes when working on or near the generator set. Never operate the generator set inside a building. Never operate the generator set where exhaust gas could seep inside or be drawn into a potentially occupied building through windows, air intake vents, or other openings.

**Carbon monoxide detectors. Carbon monoxide can cause severe nausea, fainting, or death.** Install carbon monoxide detectors on each level of any building adjacent to the generator set. Locate the detectors to adequately warn the building's occupants of the presence of carbon monoxide. Keep the detectors operational at all times. Periodically test and replace the carbon monoxide detectors according to the manufacturer's instructions.

**Carbon monoxide symptoms. Carbon monoxide can cause severe nausea, fainting, or death.** Carbon monoxide is a poisonous gas present in exhaust gases. Carbon monoxide is an odorless, colorless, tasteless, nonirritating gas that can cause death if inhaled for even a short time. Carbon monoxide poisoning symptoms include but are not limited to the following:

- Light-headedness, dizziness
- Physical fatigue, weakness in joints and muscles
- Sleepiness, mental fatigue, inability to concentrate or speak clearly, blurred vision
- Stomachache, vomiting, nausea

If experiencing any of these symptoms and carbon monoxide poisoning is possible, seek fresh air immediately and remain active. Do not sit, lie down, or fall asleep. Alert others to the possibility of carbon monoxide poisoning. Seek medical attention if the condition of affected persons does not improve within minutes of breathing fresh air.

## Fuel System

|   |
|---|
| <b>⚠ WARNING</b>  |
|  |

**Explosive fuel vapors. Can cause severe injury or death.**

Use extreme care when handling, storing, and using fuels.

**The fuel system. Explosive fuel vapors can cause severe injury or death.** Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel

lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the generator set in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming generator set operation.

**Explosive fuel vapors can cause severe injury or death.** Take additional precautions when using the following fuels:

**Propane (LP)**—Adequate ventilation is mandatory. Because propane is heavier than air, install propane gas detectors low in a room. Inspect the detectors per the manufacturer's instructions.

**Natural Gas**—Adequate ventilation is mandatory. Because natural gas rises, install natural gas detectors high in a room. Inspect the detectors per the manufacturer's instructions.

**Gas fuel leaks. Explosive fuel vapors can cause severe injury or death.** Fuel leakage can cause an explosion. Check the LP vapor gas or natural gas fuel system for leakage by using a soap and water solution with the fuel system test pressurized to 6–8 ounces per square inch (10–14 inches water column). Do not use a soap solution containing either ammonia or chlorine because both prevent bubble formation. A successful test depends on the ability of the solution to bubble.

## Hazardous Noise

### CAUTION



**Hazardous noise.**  
**Can cause hearing loss.**

Never operate the generator set without a muffler or with a faulty exhaust system.

**Engine noise. Hazardous noise can cause hearing loss.** Generator sets not equipped with sound enclosures can produce noise levels greater than 105 dBA. Prolonged exposure to noise levels greater than 85 dBA can cause permanent hearing loss. Wear hearing protection when near an operating generator set.

## Hazardous Voltage/ Moving Parts

### DANGER



**Hazardous voltage.**  
**Will cause severe injury or death.**

Disconnect all power sources before opening the enclosure.

### WARNING



**Hazardous voltage. Moving parts.**  
**Can cause severe injury or death.**

Operate the generator set only when all guards and electrical enclosures are in place.

### WARNING



**Hazardous voltage.**  
**Backfeed to the utility system can cause property damage, severe injury, or death.**

If the generator set is used for standby power, install an automatic transfer switch to prevent inadvertent interconnection of standby and normal sources of supply.

### CAUTION



**Welding the generator set.**  
**Can cause severe electrical equipment damage.**

Never weld components of the generator set without first disconnecting the battery, controller wiring harness, and engine electronic control module (ECM).

**Grounding electrical equipment. Hazardous voltage can cause severe injury or death.** Electrocutation is possible whenever electricity is present. Ensure you comply with all applicable codes and standards. Electrically ground the generator set, transfer switch, and related equipment and electrical circuits. Turn off the main circuit breakers of all power sources before servicing the equipment. Never contact electrical leads or appliances when standing in water or on wet ground because these conditions increase the risk of electrocution.

**Disconnecting the electrical load. Hazardous voltage can cause severe injury or death.** Disconnect the generator set from the load by turning off the line circuit breaker or by disconnecting the generator set output leads from the transfer switch and heavily taping the ends of the leads. High voltage transferred to the load during testing may cause personal injury and equipment damage. Do not use the safeguard circuit breaker in place of the line circuit breaker. The safeguard circuit breaker does not disconnect the generator set from the load.

**Welding on the generator set. Can cause severe electrical equipment damage.** Before welding on the generator set perform the following steps: (1) Remove the battery cables, negative (-) lead first. (2) Disconnect all engine electronic control module (ECM) connectors. (3) Disconnect all generator set controller and voltage regulator circuit board connectors. (4) Disconnect the engine battery-charging alternator connections. (5) Attach the weld ground connection close to the weld location.

**Installing the battery charger. Hazardous voltage can cause severe injury or death.** An ungrounded battery charger may cause electrical shock. Connect the battery charger enclosure to the ground of a permanent wiring system. As an alternative, install an equipment grounding conductor with circuit conductors and connect it to the equipment grounding terminal or the lead on the battery charger. Install the battery charger as prescribed in the equipment manual. Install the battery charger in compliance with local codes and ordinances.


**Connecting the battery and the battery charger. Hazardous voltage can cause severe injury or death.** Reconnect the battery correctly, positive to positive and negative to negative, to avoid electrical shock and damage to the battery charger and battery(ies). Have a qualified electrician install the battery(ies).

**Short circuits. Hazardous voltage/current can cause severe injury or death.** Short circuits can cause bodily injury and/or equipment damage. Do not contact electrical connections with tools or jewelry while making adjustments or repairs. Remove all jewelry before servicing the equipment.


**Engine block heater. Hazardous voltage can cause severe injury or death.** The engine block heater can cause electrical shock. Remove the engine block heater plug from the electrical outlet before working on the block heater electrical connections.


**Electrical backfeed to the utility. Hazardous backfeed voltage can cause severe injury or death.** Install a transfer switch in standby power installations to prevent the connection of standby and other sources of power. Electrical backfeed into a utility electrical system can cause severe injury or death to utility personnel working on power lines.


## Heavy Equipment

|  |
|--|
| <b>⚠ WARNING</b>   |
|   |
| <p><b>Unbalanced weight. Improper lifting can cause severe injury or death and equipment damage.</b></p> <p>Do not use lifting eyes.<br/>Lift the generator set using lifting bars inserted through the lifting holes on the skid.</p> |

## Hot Parts

|  |
|--|
| <b>⚠ WARNING</b>   |
|   |
| <p><b>Hot coolant and steam. Can cause severe injury or death.</b></p> <p>Before removing the pressure cap, stop the generator set and allow it to cool. Then loosen the pressure cap to relieve pressure.</p> |

|  |
|--|
| <b>⚠ WARNING</b>   |
|   |
| <p><b>Hot engine and exhaust system. Can cause severe injury or death.</b></p> <p>Do not work on the generator set until it cools.</p> |

|   |
|---|
| <b>⚠ WARNING</b>  |
|   |
| <p><b>Hot engine oil. Can cause severe injury or death.</b></p> <p>Avoid skin contact with hot oil. Do not start or operate the generator set with the engine oil filler cap removed, as hot oil can spray out. Ensure that the lubrication system is not under pressure when servicing. Do not work on the generator set until it cools.</p> |

**Servicing the exhaust system. Hot parts can cause severe injury or death.** Do not touch hot engine parts. The engine and exhaust system components become extremely hot during operation.

## Notice

### NOTICE

**Canadian installations only.** For standby service connect the output of the generator set to a suitably rated transfer switch in accordance with Canadian Electrical Code, Part 1.



This manual provides installation instructions for 15 and 30 kW residential generator sets equipped with ADC 2100 controls. Operation manuals are available separately.

Information in this publication represents data available at the time of print. Kohler Co. reserves the right to change this publication and the products represented without notice and without any obligation or liability whatsoever.

Read this manual and carefully follow all procedures and safety precautions to ensure proper equipment operation and to avoid bodily injury. Read and follow the Safety Precautions and Instructions section at the beginning of this manual. Keep this manual with the equipment for future reference.

## List of Related Materials

Figure 1 identifies related literature available for the generator sets covered in this manual. Only trained and qualified personnel should install or service the generator set.

| Literature Type  | Part Number |
|--|-------------|
| Operation Manual (Generator)                                   | TP-6344     |
| Parts Catalog*   | TP-6319     |
| Service Manual (Engine)  | TP-6362     |
| Service Manual (Generator Set)                                 | TP-6198     |
| Wiring Diagram Manual (Generator Set)                          | TP-6437     |
| * One Parts Catalog combines generator and engine information. |             |

**Figure 1** Related Literature

## Warranty Registration

Complete the startup and installation checklists supplied with the startup notification form. Complete and sign the startup notification form and return copies to an authorized Kohler distributor/dealer as instructed on the form.

# Service Assistance

---

For professional advice on generator power requirements and conscientious service, please contact your nearest authorized Kohler distributor/dealer.

- Consult the Yellow Pages under the heading Generators—Electric.
- Visit the Kohler Power Systems website at KohlerPower.com.
- Look at the labels and stickers on your Kohler product or review the appropriate literature or documents included with the product.
- Call toll free in the US and Canada 1-800-544-2444.
- Outside the US and Canada, call the nearest regional office.

## **Headquarters Europe, Middle East, Africa (EMEA)**

Kohler Power Systems  
3 rue de Brennus  
93200 Saint Denis  
France  
Phone: (33) 1 49 178300  
Fax: (33) 1 49 178301

## **Asia Pacific**

Power Systems Asia Pacific Regional Office  
Singapore, Republic of Singapore  
Phone: (65) 6264-6422  
Fax: (65) 6264-6455

## **China**

North China Regional Office, Beijing  
Phone: (86) 10 6518 7950  
(86) 10 6518 7951  
(86) 10 6518 7952  
Fax: (86) 10 6518 7955

East China Regional Office, Shanghai  
Phone: (86) 21 6288 0500  
Fax: (86) 21 6288 0550

## **India, Bangladesh, Sri Lanka**

India Regional Office  
Bangalore, India  
Phone: (91) 80 3366208  
(91) 80 3366231  
Fax: (91) 80 3315972

## **Japan, Korea**

North Asia Regional Office  
Tokyo, Japan  
Phone: (813) 3440-4515  
Fax: (813) 3440-2727

## **Latin America**

Latin America Regional Office  
Lakeland, Florida, USA  
Phone: (863) 619-7568  
Fax: (863) 701-7131

## 1.1 Introduction

Review this section and the Safety Precautions before starting the installation procedure. The generator set specification sheet also contains data that may be required during the installation process.

The generator set and accessories must be installed by an authorized Kohler distributor/dealer or authorized representative. The installation must comply with all applicable national and local codes.

## 1.2 Enclosed Generator Sets

Install the generator set outdoors. Enclosed generator sets include a factory-supplied sound enclosure. The exhaust systems of enclosed units are complete for outdoor installations. Review Section 1 and then refer to Section 2 for the outdoor installation of enclosed units.

**Note: DO NOT install enclosed units inside a building.**

## 1.3 Unit-Mounted Radiator Cooling

The generator set is equipped with a unit-mounted radiator common cooling system.

### 1.3.1 Cooling System Features

The system's major components include an engine-driven fan and circulating water pump, a radiator, and a thermostat. The pump circulates water through the engine until it reaches operating temperature. Then the engine thermostat opens, allowing water circulation through the radiator. The thermostat restricts water flow as necessary to prevent overcooling. The fan blows air from the engine side of the radiator across the cooling surface.

### 1.3.2 Recommended Coolant

Add antifreeze before starting the generator set or energizing the block heater.

The generator set manufacturer recommends a solution of 50% ethylene glycol and 50% clean, softened water to provide freezing protection to  $-37^{\circ}\text{C}$  ( $-34^{\circ}\text{F}$ ) and boiling protection to  $129^{\circ}\text{C}$  ( $256^{\circ}\text{F}$ ). A 50/50 solution also inhibits corrosion. Consult the engine manufacturer's instructions for engine coolant specifications. See the List of Related Materials in the Introduction.

## 1.4 Fuel Supply

Gas fuel systems operate on either LP (liquefied petroleum) or natural gas. Refer to the the instructions in Section 2.2.6 for more detailed information on fuel requirements.

**Note:** Design and install gas fuel systems in accordance with NFPA-54, National Fuel Gas Code, and applicable local codes.

**Gas lines.** Never use fuel piping to ground electrical equipment. The gas supplier is responsible for installation, repair, and alteration to gas piping.

Use Schedule 40 black-iron pipe for gas piping. Copper tubing may be used if the fuel does not contain hydrogen sulfide or other ingredients that react chemically with copper.

**Line size.** Size piping according to the requirements of the equipment. Refer to the the instructions in Section 2.2.6. In addition to actual fuel consumption, consider the following pressure loss factors:

- Pipe length
- Other appliances on the same fuel supply
- Number of fittings

**Flexible connections.** Rigid mount the piping but protect it from vibration. Use flexible connections spanning a minimum of 152 mm (6 in.) between the stationary piping and the engine fuel inlet connection.

## 1.5 Electrical System

Before installing the generator set, provide for electrical connections through conduit to the transfer switch and other accessories for the generator set. Route DC leads in separate conduit from AC conductors. Carefully install the selected generator set accessories. Route wiring to the generator set through flexible connections. Comply with all applicable codes when installing a wiring system.

### 1.5.1 Line Circuit Breakers

**AC circuit protection.** All AC circuits must include circuit breaker or fuse protection. If the generator set is not equipped with a factory-installed circuit breaker, select a circuit breaker for up to 125% of the rated generator set output current. The circuit breaker must open all ungrounded connectors. The circuit breaker or fuse must be mounted within 7.6 m (25 ft.) of the alternator output terminals.

## 1.5.2 Electrical Connections

Several electrical connections must be made between the generator set and other components of the system for proper operation. Most field-installed accessory kits include installation instructions. Comply with applicable national and local codes when installing a wiring system.

Size the wire according to the length of run and 115% of the circuit current (amperage) as directed by the National Electrical Code® (NEC) in ANSI/NFPA 70.


For Canadian installations, refer to the Canadian Electrical Code (CEC).

## 1.5.3 Load Lead Connections


Feed load leads to the generator set junction box through the nonservice side of the box. See Figure 1-1. Route DC leads in separate conduit from AC conductors.

## 1.5.4 Ground and Neutral Connections

Ground the generator set. The grounding method must comply with NEC and local codes. Connect the grounding strap to the generator set ground lug. See Figure 1-2.

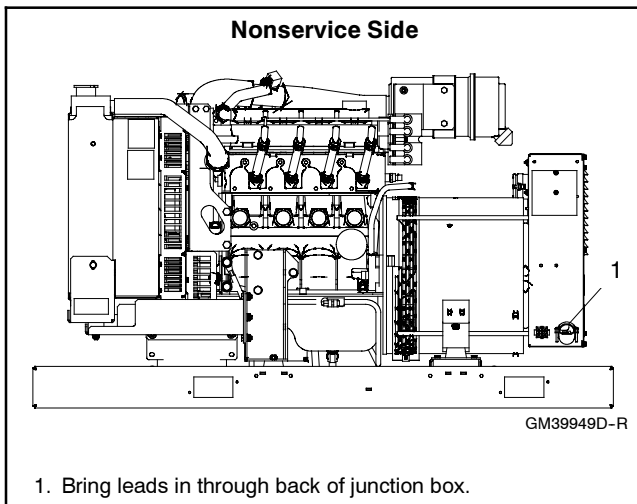

**Figure 1-1** Load Lead Access

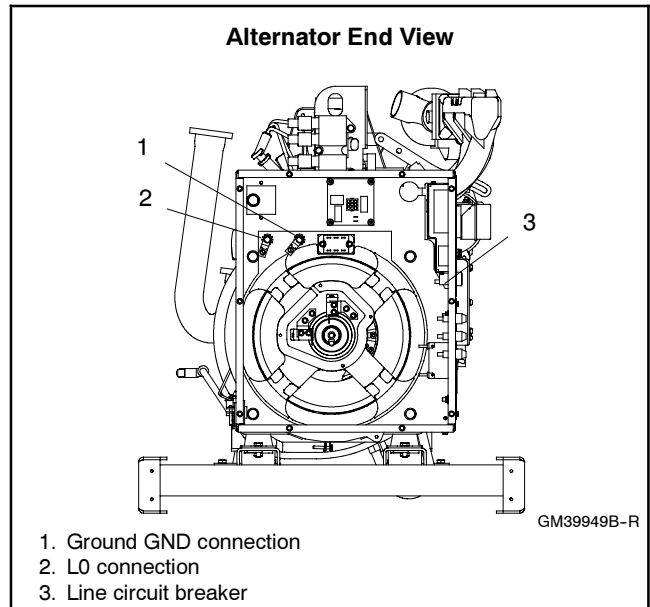

**Figure 1-2** Generator Set Equipment Ground Connection (inside junction box)

Various regulations and site configurations including the National Electrical Code (NEC), local codes, and the type of transfer switch used in the application determine the grounding of the neutral at the generator. NEC 2002 Section 250.20 is one example that has a very good explanation of the neutral grounding requirements for generators.

Generator sets are shipped with the generator neutral attached to the generator in the junction box. At installation, the neutral can be grounded at the generator set or lifted from the ground stud and isolated if the installation requires an ungrounded neutral connection at the generator. The generator set will operate properly with the neutral either bonded to ground or isolated from ground at the generator.

### 1.5.5 Terminal Connector Torque

Use the torque values shown in Figure 1-3 or Figure 1-4 for terminal connectors. Refer to UL-486A, UL-486B, and UL-486E for information on terminal connectors for aluminum and/or copper conductors. Comply with applicable national and local codes when installing a wiring system.

**Note:** If a connector has a clamp screw such as a slotted, hexagonal head screw with more than one means of tightening, test the connector using both applicable torque values provided in Figure 1-4.

| Socket Size Across Flats, mm (in.) | Tightening Torque, Nm (in. lb.) |
|------------------------------------|---------------------------------|
| 3.2 (1/8)                          | 5.1 (45)                        |
| 4.0 (5/32)                         | 11.4 (100)                      |
| 4.8 (3/16)                         | 13.8 (120)                      |
| 5.6 (7/32)                         | 17.0 (150)                      |
| 6.4 (1/4)                          | 22.6 (200)                      |
| 7.9 (5/16)                         | 31.1 (275)                      |
| 9.5 (3/8)                          | 42.4 (375)                      |
| 12.7 (1/2)                         | 56.5 (500)                      |
| 14.3 (9/16)                        | 67.8 (600)                      |

**Note:** For values of slot width or length not corresponding to those specified, select the largest torque value associated with the conductor size. Slot width is the nominal design value. Slot length is to be measured at the bottom of the slot.

**Figure 1-3** Tightening Torque for Pressure Wire Connectors with Internal-Drive Socket-Head Screws

| Wire Size for Unit Connection | Tightening Torque, Nm (in. lb.)                                  |  |   |                   |
|-------------------------------|--|--|---|-------------------|
|                               | Slot Head 4.7 mm (No. 10) or Larger*                             |  | Hexagonal Head—External Drive Socket Wrench |                   |
|                               | Slot Width <1.2 mm (0.047 in.)<br>Slot Length <6.4 mm (0.25 in.) | Slot Width >1.2 mm (0.047 in.)<br>Slot Length >6.4 mm (0.25 in.) | Split-Bolt Connectors                       | Other Connections |
| 18-10 (0.82-5.3)              | 2.3 (20)   | 4.0 (35)   | 9.0 (80)                                    | 8.5 (75)          |
| 8 (8.4)                       | 2.8 (25)   | 4.5 (40)   | 9.0 (80)                                    | 8.5 (75)          |
| 6-4 (13.3-21.2)               | 4.0 (35)   | 5.1 (45)   | 18.6 (165)                                  | 12.4 (110)        |
| 3 (26.7)                      | 4.0 (35)   | 5.6 (50)   | 31.1 (275)                                  | 16.9 (150)        |
| 2 (33.6)                      | 4.5 (40)   | 5.6 (50)   | 31.1 (275)                                  | 16.9 (150)        |
| 1 (42.4)                      | —  | 5.6 (50)   | 31.1 (275)                                  | 16.9 (150)        |
| 1/0-2/0 (53.5-67.4)           | —  | 5.6 (50)   | 43.5 (385)                                  | 20.3 (180)        |
| 3/0-4/0 (85.0-107.2)          | —  | 5.6 (50)   | 56.5 (500)                                  | 28.2 (250)        |
| 250-350 (127-177)             | —  | 5.6 (50)   | 73.4 (650)                                  | 36.7 (325)        |
| 400 (203)                     | —  | 5.6 (50)   | 93.2 (825)                                  | 36.7 (325)        |
| 500 (253)                     | —  | 5.6 (50)   | 93.2 (825)                                  | 42.4 (375)        |
| 600-750 (304-380)             | —  | 5.6 (50)   | 113.0 (1000)                                | 42.4 (375)        |
| 800-1000 (406-508)            | —  | 5.6 (50)   | 124.3 (1100)                                | 56.5 (500)        |
| 1250-2000 (635-1016)          | —  | —  | 124.3 (1100)                                | 67.8 (600)        |

\* For values of slot width or length not corresponding to those specified, select the largest torque value associated with the conductor size. Slot width is the nominal design value. Slot length is to be measured at the bottom of the slot.

**Note:** If a connector has a clamp screw such as a slotted, hexagonal head screw with more than one means of tightening, test the connector using both applicable torque values.

**Figure 1-4** Tightening Torque for Screw-Type Pressure Wire Connectors

## 1.5.6 Battery Chargers


An engine-driven, battery-charging alternator charges the battery whenever the generator set operates. Engine-driven systems can quickly restore the charge used in a normal cranking cycle.

When the engine is not operating, a very low charge rate from an AC-powered battery charger is usually sufficient to maintain a full charge on the batteries. Select an automatic float/equalize battery charger with a 3 amp or greater rating.

Use separate, self-contained battery chargers or units built into the automatic transfer switch. Run leads from a transfer switch-mounted battery charger in conduit separate from the conduit that holds the generator load cables or remote engine-start circuits.

## 1.5.7 Alternator Factory Connection

Figure 1-5 shows the factory connection for the single-phase 120/240 V 60 Hz generator set. The generator set is not reconnectable.

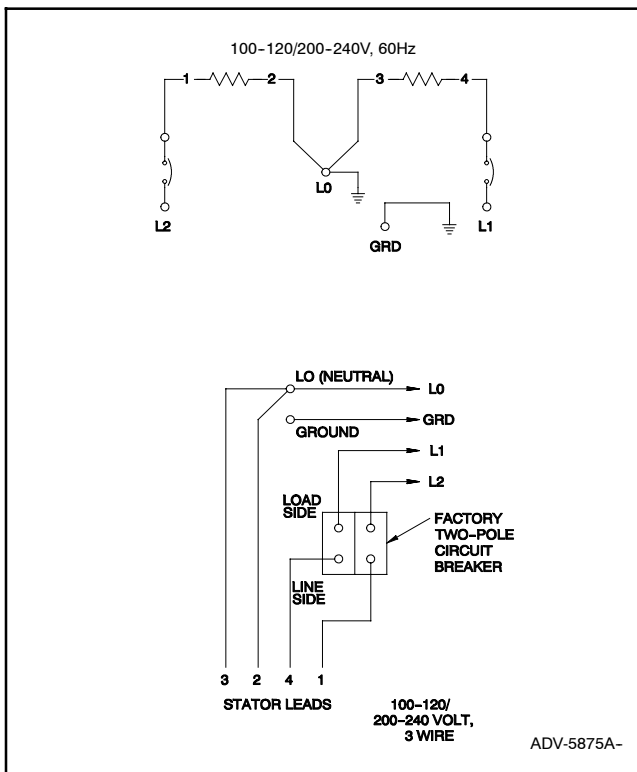

**Figure 1-5** Single-Phase Factory Connection, 120/240 V 60 Hz

## 1.5.8 Automatic Transfer Switches

A typical standby system has at least one automatic transfer switch connected to the generator set output to automatically transfer the electrical load to the generator set if the normal source fails. When normal power returns, the switch transfers the load back to the normal power source and then signals the generator set to stop.

The transfer switch uses a set of contacts to signal the engine/generator to start. When the normal source fails and the generator set master switch is in the AUTO position, the transfer switch contacts close to start the generator set.

The engine start terminals are usually located near the transfer switch contactor with an engine start decal identifying the terminals. Use the transfer switch wiring diagrams to identify the engine start terminals prior to making connections.

Connect the transfer switch engine-start contacts or a remote manual engine-start switch to the engine start connectors on the generator set. Use the remote harness with pigtail to connect to leads 3 and 4 from the ADC 2100 generator set controller to the engine-start leads from the ATS. Size the wire according to the transfer switch connection and the length of run. Use separate conduit for the DC engine-start leads and the AC generator set load cables and battery charger leads.

## Section 2 Installation Instructions

### 2.1 Introduction

Have the generator set installed by an authorized Kohler distributor/dealer or authorized representative. Install the equipment in compliance with the National Electrical Code (NEC) and local codes. For Canadian installations, refer to the Canadian Electrical Code (CEC).

**Note:** These instructions outline one procedure for installing the generator set. Local codes may require different procedures.


The generator set must be installed outdoors. The exhaust systems on enclosed units are designed for outdoor installation only. Review the information in Section 1, General, before beginning the installation procedure.

**Note:** **DO NOT** install enclosed generator sets inside a building.


**Note:** Install carbon monoxide (CO) detector(s) on each level of any building adjacent to a generator set. Locate the detectors to adequately warn the building's occupants of the presence of carbon monoxide.

Read and follow the safety precautions in this manual and observe the decals on the equipment. Refer to the diagrams and drawings in Section 5 for dimensions and electrical connections during the installation procedure. Read the entire installation procedure and obtain the accessories and tools needed before beginning installation. Perform the steps in the order shown.

To install optional accessories, follow the instructions provided with each kit.

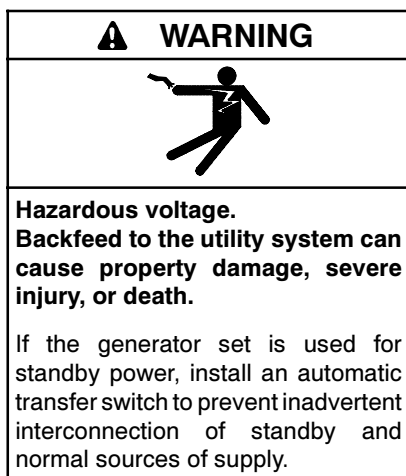

**Grounding electrical equipment. Hazardous voltage can cause severe injury or death.** Electrocuting is possible whenever electricity is present. Ensure you comply with all applicable codes and standards. Electrically ground the generator set, transfer switch, and related equipment and electrical circuits. Turn off the main circuit breakers of all power sources before servicing the equipment. Never contact electrical leads or appliances when standing in water or on wet ground because these conditions increase the risk of electrocution.

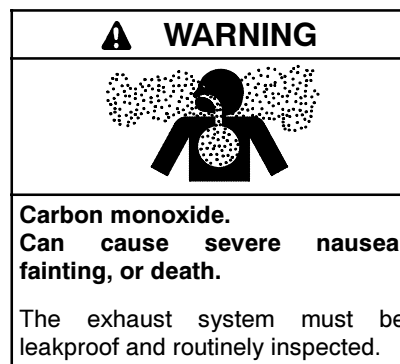

**Generator set operation. Carbon monoxide can cause severe nausea, fainting, or death.** Carbon monoxide is an odorless, colorless, tasteless, nonirritating gas that can cause death if inhaled for even a short time. Avoid breathing exhaust fumes when working on or near the generator set. Never operate the generator set inside a building. Never operate the generator set where exhaust gas could seep inside or be drawn into a potentially occupied building through windows, air intake vents, or other openings.

**Carbon monoxide detectors. Carbon monoxide can cause severe nausea, fainting, or death.** Install carbon monoxide detectors on each level of any building adjacent to the generator set. Locate the detectors to adequately warn the building's occupants of the presence of carbon monoxide. Keep the detectors operational at all times. Periodically test and replace the carbon monoxide detectors according to the manufacturer's instructions.

#### 2.1.1 Location Factors

Ideally, the generator set should be mounted on concrete at ground level. For above-ground installations, including roof installations, weight considerations are especially important. The building engineer must determine whether the structure can support the weight of the generator set.

The location of the generator set must:

- Support the weight of the generator set and related equipment such as batteries, radiators, and mounting pad(s). Keep in mind that the mounting pad weight may exceed the weight of the generator set.

- Meet applicable fire rating codes and standards.
- Position the generator set over a noncombustible surface. **DO NOT** allow accumulation of combustible materials under or around the generator set.
- Permit vibration isolation to reduce noise and prevent damage.
- Not be subject to flooding.
- Provide clearance for cooling air flow and access for service. See Section 2.2 for required clearances from obstructions and combustible materials.
- Allow safe expulsion of exhaust.
- Minimize the risk of public or unauthorized access.

### Notice

**DO NOT** locate the generator set near patios, decks, play areas, or animal shelters. Keep items such as lawn furniture, toys, sports equipment, and all combustible materials away from the generator set exhaust outlet.

Remind family members, children, and visitors to use caution near the generator set. Generator sets connected to automatic transfer switches start automatically during exercise periods and power outages. Some generator set components become hot when the generator set is running and remain hot for a time after the generator set shuts down.

### 2.1.2 Mounting Surface


The manufacturer recommends a single, level concrete mounting pad. This method provides maximum stability for the generator set. The recommended mounting pad dimensions are shown in the dimension drawings in Section 5.

Refer to the generator set dimension drawings for conduit and fuel-line placement. The drawings give dimensions for electrical and fuel connection rough-ins and stub-ups.

### 2.1.3 Vibration Isolation

The generator set is equipped with neoprene vibration isolators. Connections between the generator set or its mounting base and any conduits or fuel lines must include flexible sections to prevent breakage and to isolate vibration.

### 2.1.4 Lifting Generator Set

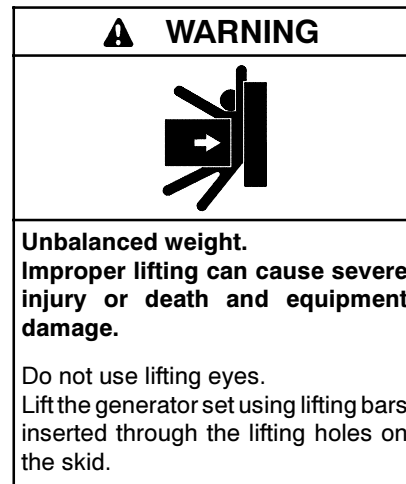

Enclosed units weigh approximately 500 kg (1100 lb.). Use equipment that is rated for the generator set's weight to lift the unit into place. Lift the enclosure and generator set together as one unit.

**DO NOT** lift the generator set using the lifting eyes attached to the engine and/or alternator. These eyes cannot support the generator set's weight. Instead, insert lifting hooks or lifting bars through the four holes in the mounting skid. The placement of the holes maintains balance during lifting.

## 2.2 Installation Procedure

### Tools Required:

- Multimeter (for measuring voltage and current)
- Frequency meter (may be part of multimeter)
- Manometer (for measuring fuel pressure)
- Torque wrench
- Wrenches
- Screwdrivers
- Socket wrenches or nut drivers
- Pliers
- Safety glasses or goggles
- Drill with bits and hole saw



### Installer/Customer-Supplied Items:

- One 12-volt battery with a minimum rating of 525 cold cranking amps (CCA) at 0°F.
- Remote harness with pigtail connector (to connect ATS engine start, if used)
- Gravel or crushed stone
- Concrete mounting pad
- Cables and conduit
- Fuel supply line with shutoff valve and pipe sealant (provided by fuel supplier)
- Carbon monoxide (CO) detector(s)

### Available Accessories:

- Air cleaner restriction indicator
- Battery
- Battery charger
- Battery heater
- Block heater
- Flexible fuel lines
- Maintenance kit (includes filters and belt)
- Natural gas strainer
- Relay kit, includes common fault and auxiliary run relays
- Remote digital gauge
- Remote harnesses
- Rodent guards

## 2.2.1 Prepare Site

Choose a location that is at least 0.9 m (3 ft.) from any building or structure and near the incoming gas service. Allow a minimum of 2.4 m (8 ft.) clearance beyond the exhaust end of the generator set. Plan the installation so that the exhaust end of the generator set is not directed toward the building or any openings where exhaust gas could be drawn into the building.


Install carbon monoxide detectors on each level of any building adjacent to the generator set. Locate the detectors to adequately warn the building's occupants of the presence of carbon monoxide.

1. Obtain a building permit and contact your local utility companies to mark the locations of underground pipes and cables.
2. Prepare an area for mounting the generator set.
  - a. Clear all combustible materials, including plants and shrubs, building materials, and lawn furniture, from an area at least 2.4 m (8 ft.) beyond the exhaust end of the generator set.

- b. Spread a 76 mm (3 in.) thick layer of gravel to support the concrete mounting pad. For the mounting pad dimensions, see Figure 5-2 or for weather enclosures or Figure 5-4 for sound enclosures.
- c. Lay a 100 mm (4 in.) thick concrete pad on the gravel layer. Include mounting bolts and stub-ups for the fuel supply and electrical conduit. See Figure 5-2 or Figure 5-4 for the mounting pad dimensions, mounting bolts, and stub-up locations.

## 2.2.2 Mount and Ground Generator Set

1. Place the generator set on the concrete mounting pad. Secure the generator set with mounting bolts anchored in the concrete pad.
2. Remove the enclosure doors and alternator-end panel to gain access to the junction box and other generator set components during installation.
3. Ground the generator set. The grounding method must comply with NEC and local codes. Connect the grounding strap to the generator set ground lug, terminal GRD inside the junction box. See Figure 2-1.

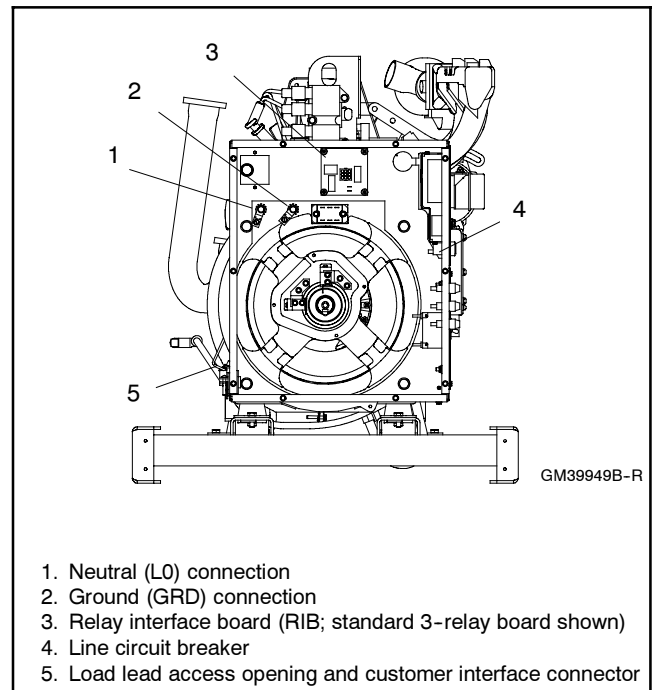


**Figure 2-1** Generator Set Electrical Connections (enclosure not shown)

Generator sets are shipped with the generator set neutral attached to the generator set in the junction box. At installation, the neutral can be grounded at the generator set or lifted from the ground stud and isolated if the installation requires an ungrounded neutral connection at the generator set. The generator set will operate properly with the neutral either bonded to ground or isolated from ground at the generator set.

Various regulations and site configurations including the National Electrical Code (NEC), local codes, and the type of transfer switch used in the application determine the grounding of the neutral at the generator set. NEC 2002 Section 250.20 is one example that has a very good explanation of the neutral grounding requirements for generator sets.

### 2.2.3 Exhaust Pipe Orientation (Dropover Sound Enclosures)

Generator sets equipped with dropover style sound enclosures are shipped with the exhaust pipe disconnected from the silencer. Connect the exhaust pipe after installing the enclosure. Install the exhaust pipe with the opening pointed down and angled toward the center of the generator set at a 45 degree angle. See Figure 2-2 and the decal in the exhaust compartment of the enclosure.

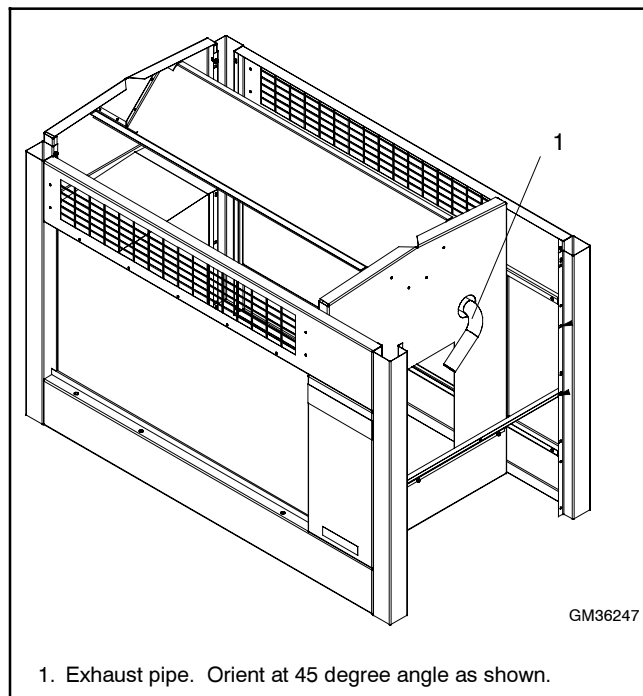

**Figure 2-2** Exhaust Pipe Orientation

### 2.2.4 Connect AC and DC Wiring

**Note:** Have a licensed electrician make the following electrical connections. All connections must comply with state and local codes.

Size the wire according to the length of run and 115% of the circuit current (amperage) as directed by the National Electrical Code® (NEC) in ANSI/NFPA 70. See Figure 2-1 and refer to the wiring diagrams in Section 5, Diagrams and Drawings.

Refer to Section 1.5 for additional information about connecting the electrical system.

#### Load Lead and Engine Start Connections

1. Install a 120 VAC receptacle for the generator set battery charger and block heater, if equipped. Supply power to the receptacle through a circuit that is powered at all times, by the utility and by the generator set during utility power outages.
2. Some codes require the use of a disconnect switch. Check the code requirements for your location and install a disconnect switch, if required.
3. Use separate conduit for the power cables and the low voltage engine start leads. Local codes and the length of run as well as the transfer switch wire size requirements will determine the wire size needed for the AC leads. Route the load leads into the junction box through the access opening in the back of the box.
4. Connect the load leads from the line circuit breaker in the generator set junction box to the transfer switch emergency power connection points. See Figure 2-1 and refer to transfer switch installation manual for ATS connection instructions.
5. Use the remote harness with pigtail connector at the customer interface connector to connect engine start leads 3 and 4 to the engine start terminals on the transfer switch. Refer to the transfer switch installation manual for ATS connection instructions.
6. If an auxiliary fault switch is used, connect it to leads 30 and N at the customer interface connector.

## Optional Run/Common Fault Relay Interface Board (RIB)

The optional Run/Common Fault Relay interface board (RIB) has five relays and a customer connection harness. The standard RIB has three relays with no customer connections required. See Figure 2-1 for the RIB location.


The common fault relay is energized on a fault. The auxiliary run relay is energized when the generator set is running. When a relay is energized, the normally open contacts close and the normally closed contacts open.

Connect customer equipment to connector P24 on the optional relay board harness. Use 16 gauge or larger leads for the relay connections. Connect to each relay's normally open or normally closed contacts depending on the requirements for the connected equipment. See Figure 2-3 and the manufacturer's instructions for the connected equipment.

| Lead Number | P24 Pin Number | Connection                         |
|-------------|----------------|------------------------------------|
| 88          | 6              | Common fault relay normally open   |
| 89          | 2              | Common fault relay common          |
| 90          | 3              | Common fault relay normally closed |
| 91          | 4              | Run relay normally open            |
| 92          | 1              | Run relay common                   |
| 93          | 5              | Run relay normally closed          |

**Figure 2-3** Optional Relay Connections

### 2.2.5 Install Engine Starting Battery

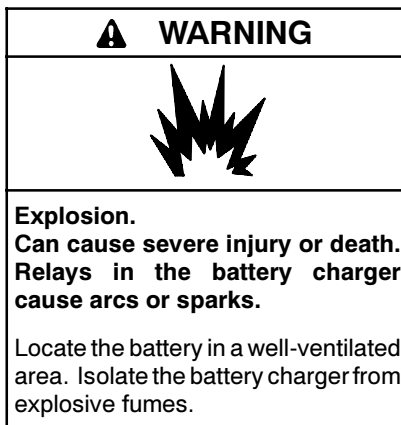


**Battery gases. Explosion can cause severe injury or death.** Battery gases can cause an explosion. Do not smoke or permit flames or sparks to occur near a battery at any time, particularly when it is charging. Do not dispose of a battery in a fire. To prevent burns and sparks that could cause an explosion, avoid touching the battery terminals with tools or other metal objects. Remove all jewelry before servicing the equipment. Discharge static electricity from your body before touching batteries by first touching a grounded metal surface away from the battery. To avoid sparks, do not disturb the battery charger connections while the battery is charging. Always turn the battery charger off before disconnecting the battery connections. Ventilate the compartments containing batteries to prevent accumulation of explosive gases.

Use a 12 VDC battery with a minimum rating of 525 CCA.

1. Verify that the generator set master switch is in the OFF/RESET position.
2. Ensure that the starting battery is fully charged before placing the battery in service.
3. Clean the battery posts and/or adapters if necessary.
4. Install battery post adapters, if needed.
5. See dimension drawing ADV-7000A in Section 5 for the battery rack location. Place the battery on the battery rack on the skid.
6. Connect the red battery cable to the positive (+) battery terminal.
7. Connect the black battery cable to the negative (-) battery terminal.
8. Place the boots over the battery terminals.
9. Plug the battery charger, if equipped, into the 120 VAC power supply.

## 2.2.6 Install and Connect Fuel Supply

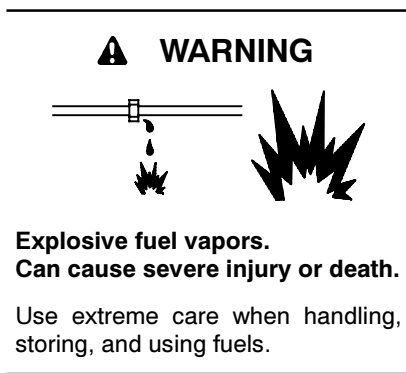

**The fuel system. Explosive fuel vapors can cause severe injury or death.** Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the generator set in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming generator set operation.

**Note:** Have the fuel piping and regulator installed by the fuel supplier. The fuel supply installation must comply with NFPA and local codes.

1. See Figure 2-4, Figure 2-5, and Figure 2-6 for the fuel supply requirements. Add up the fuel requirements for the generator set plus all other gas-fired equipment fueled by the same supply.
2. Check that the primary regulator and gas meter have sufficient capacity for the fuel requirements for the generator set plus all other gas-fired equipment. Have the fuel supplier install a larger gas meter, if necessary.

| Model | Gas Flow Rate, Btu/hr. |
|-------|------------------------|
| 15 kW | 200000                 |
| 30 kW | 450000                 |

**Figure 2-4** Gas Flow Rate (natural gas and LP)

| Fuel Supply Specifications  |                       |
|---|-----------------------|
| Fuel type   | LP Gas or Natural Gas |
| Fuel supply inlet   | 3/4-14 NPT            |
| Fuel supply pressure, oz./in. <sup>2</sup> (in. H <sub>2</sub> O) | 4-6 (7-11)            |
| Nominal Fuel Rating, Btu/ft. <sup>3</sup> :                       |                       |
| Natural gas   | 1000                  |
| LP vapor  | 2500                  |

**Figure 2-5** Fuel Requirements

| Fuel Consumption                                      | 15 kW     | 30 kW      |
|---|-----------|------------|
| <b>Natural Gas, m<sup>3</sup>/hr. (cfh) at % load</b> |           |            |
| 100%  | 5.7 (200) | 12.7 (450) |
| 75%   | 4.5 (160) | 10.6 (375) |
| 50%   | 3.5 (125) | 8.5 (300)  |
| 25%   | 2.5 (90)  | 6.4 (225)  |
| <b>LP Gas, m<sup>3</sup>/hr. (cfh) at % load</b>      |           |            |
| 100%  | 2.4 (85)  | 5.1 (180)  |
| 75%   | 1.8 (65)  | 4.2 (150)  |
| 50%   | 1.4 (51)  | 3.4 (120)  |
| 25%   | 1.0 (37)  | 2.5 (90)   |

**Figure 2-6** Fuel Consumption

3. Measure the pipe length from the primary gas pressure regulator to the pipe connection on the generator set fuel inlet. Add 2.4 m (8 ft.) to the measured length for each 90 degree elbow. Use the pipe size indicated in Figure 2-7 for the total length of pipe.

| Maximum Pipe Length m (ft.) | Pipe Size     |               |
|-----------------------------|---------------|---------------|
|                             | 15 kW         | 30 kW         |
| 6.1 (20)                    | 3/4 in. NPT   | 1 1/4 in. NPT |
| 9.1 (30)                    | 1 in. NPT     | 1 1/4 in. NPT |
| 18.3 (60)                   | 1 in. NPT     | 1 1/2 in. NPT |
| 30.5 (100)                  | 1 1/4 in. NPT | 1 1/2 in. NPT |
| 45.7 (150)                  | 1 1/4 in. NPT | 2 in. NPT     |
| 61.0 (200)                  | 1 1/4 in. NPT | 2 in. NPT     |

**Figure 2-7** Fuel Pipe Sizes


Have your fuel supplier install a manual fuel shutoff valve and rigid gas piping. Bring the pipe to within 254 mm (10 in.) of the generator set fuel inlet location. See Figure 2-8.




**Figure 2-8** Manual Fuel Shutoff Valve (outdoor installation shown)

4. Remove the enclosure door on the service side of the unit.
5. Connect the fuel supply:
  - a. Apply pipe sealant that is approved for fuel connections to the threaded fuel connections.
  - b. Use a section of flexible fuel line to connect the fuel supply to the fuel inlet connection on the generator set. See Figure 2-9 and Figure 2-10 for the fuel inlet connection location.
  - c. Open the manual fuel valves and leak test all fuel connections using soapy water. If a leak is detected, close the fuel valves, disconnect the lines at the location of the leak, clean the fittings, and apply fresh pipe sealant. Reconnect the lines and recheck for leaks.

**Note:** After the system installation is complete, you will be instructed to check for fuel leaks with the generator set running. See Section 2.2.10, Operation Tests.

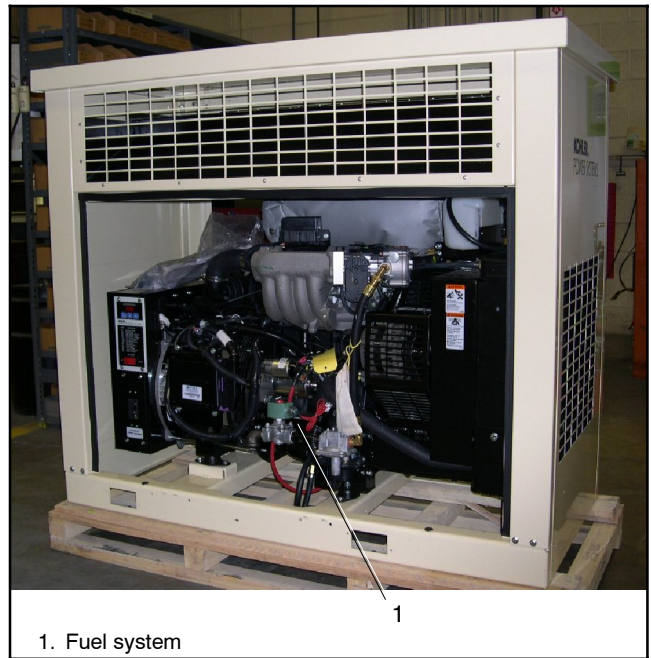

**Figure 2-9** Generator Set Fuel System Location (enclosed unit shown)

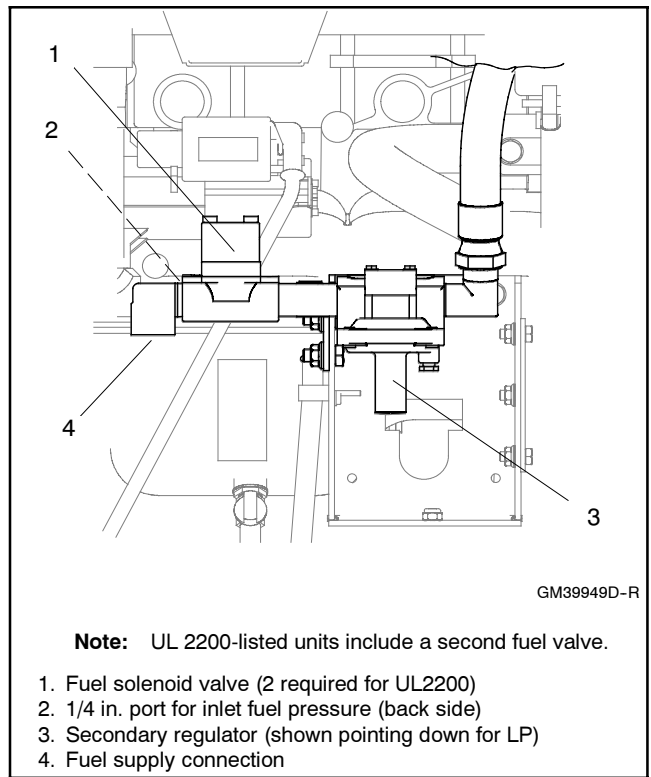


**Figure 2-10** Fuel System (LP gas setup shown)

6. Check that the fuel system is set up for the fuel being used (natural gas or LP).
  - a. Check the orientation of the fuel regulator and check the hang tag attached to the regulator. The fuel regulator is installed pointing up for

natural gas or down for LP gas. See Figure 2-10.

- b. Check fuel select leads 65 and 70A in the wiring harness. See Figure 2-11. The leads are connected for natural gas and disconnected for LP.
- c. Use the procedure in Section 2.2.7 to convert the fuel system, if necessary.

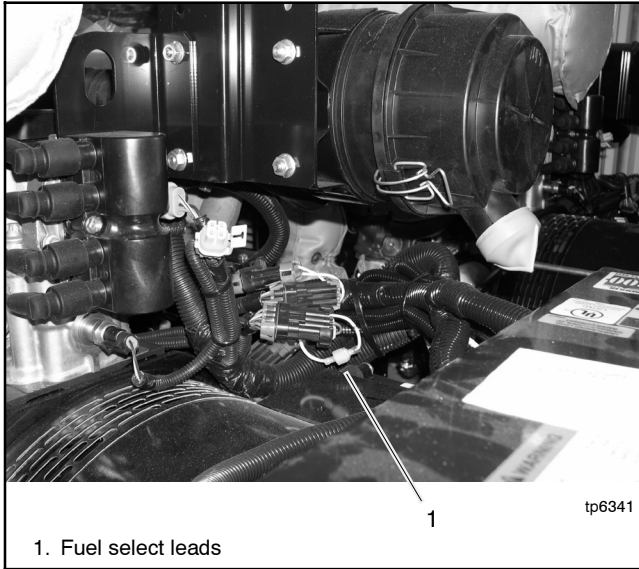

**Figure 2-11** Fuel Select Leads (shown connected for natural gas)

## 2.2.7 Fuel Conversion Procedures

### LP Fuel Conversion Procedure

Use the following steps to convert the fuel system to LP gas, if necessary:


1. Remove the fuel regulator cover plug. See Figure 2-12.
2. Remove the adjustment screw and spring from the fuel regulator. Save the adjustment screw and spring for possible conversion back to natural gas.
3. Reinstall the cover plug.
4. Rotate the regulator to point down as shown in Figure 2-10.

5. Disconnect leads 65 and 70A at the quick connects in the wiring harness. See Figure 2-11.
6. Proceed to Section 2.2.9 to check and adjust the fuel supply pressure.

### Natural Gas Fuel Conversion Procedure

Use the following steps to convert the generator set to natural gas, if necessary:

1. Rotate the regulator so that it is pointing up.
2. Remove the fuel regulator cover plug. See Figure 2-12.

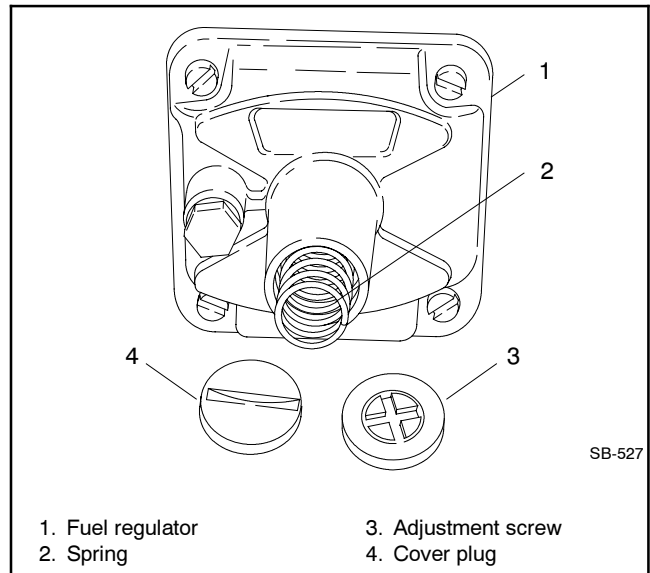

**Figure 2-12** Fuel Regulator, Typical

3. Install the spring and adjustment screw.
4. Adjust the screw 11.1 mm (7/16 in.) down from the top of the regulator.
5. Reinstall the cover plug.
6. Connect leads 65 and 70A at the quick-connects in the wiring harness. See Figure 2-11.
7. Add coolant before running the engine to check and adjust the fuel supply pressure in Section 2.2.9.

## 2.2.8 Add Coolant

Follow the instructions below to fill the cooling system.

1. Close the radiator's coolant drain valve and tighten the hose clamps.

**Note:** Do not add coolant to a hot engine. Adding coolant to a hot engine can cause the cylinder block or cylinder head to crack. Wait until the engine has cooled.


2. Fill the radiator with the recommended coolant mixture of 50% ethylene glycol and 50% clean, softened water to inhibit rust/corrosion and prevent freezing. See Figure 2-13 for coolant capacity Do not replace the pressure cap at this time.

**Note:** A coolant solution of 50% ethylene glycol provides freezing protection to  $-37^{\circ}\text{C}$  ( $-34^{\circ}\text{F}$ ) and overheating protection to  $129^{\circ}\text{C}$  ( $265^{\circ}\text{F}$ ). A coolant solution with less than 50% ethylene glycol may not provide adequate freezing and overheating protection. A coolant solution with more than 50% ethylene glycol can cause engine or component damage. Do not use alcohol or methanol antifreeze or mix them with the specified coolant. Consult the engine manufacturer's operation manual for engine coolant specifications.

| Model | Coolant Capacity, L (Qt.) |
|-------|---------------------------|
| 15 kW | 11.5 (3.0)                |
| 30 kW | 11.5 (3.0)                |


**Figure 2-13** Coolant Capacity

3. Operate the engine with the radiator's pressure cap removed until the thermostat opens and the radiator upper hose becomes hot.
4. Stop the engine and allow it to cool.
5. Add coolant to the radiator to just below the overflow tube on the filler neck. See Figure 2-14 for the overflow tube location.
6. Replace the radiator's pressure cap.
7. Maintain the coolant level in the coolant overflow bottle between the High and Low markings. See Figure 2-14 for the coolant overflow bottle location.

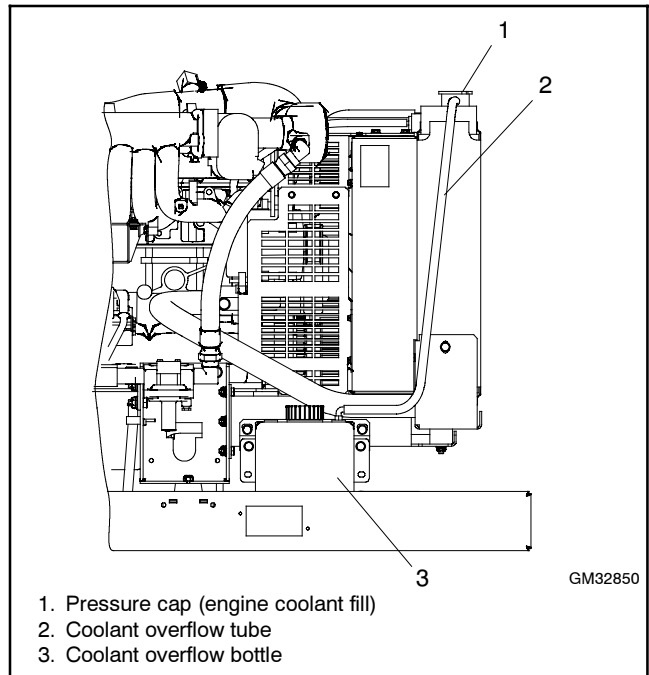

**Figure 2-14** Coolant Fill

## 2.2.9 Check and Adjust Fuel System

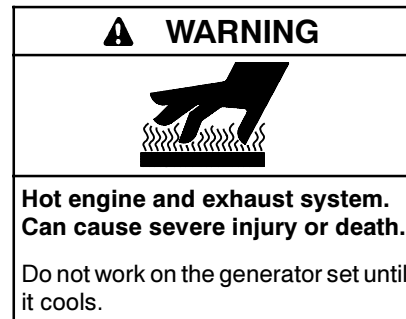


**Servicing the exhaust system. Hot parts can cause severe injury or death.** Do not touch hot engine parts. The engine and exhaust system components become extremely hot during operation.

Use an oxygen sensor to check the fuel system adjustment. Use Oxygen Sensor Service Kit GM29385 or GM58035.

1. Place the generator set master switch in the OFF position.
2. Disconnect power to battery charger, if equipped.
3. Disconnect the generator set engine starting battery, negative (-) lead first.

4. Allow the generator set to cool.
5. Install the oxygen sensor in the exhaust manifold at the location shown in Figure 2-15.

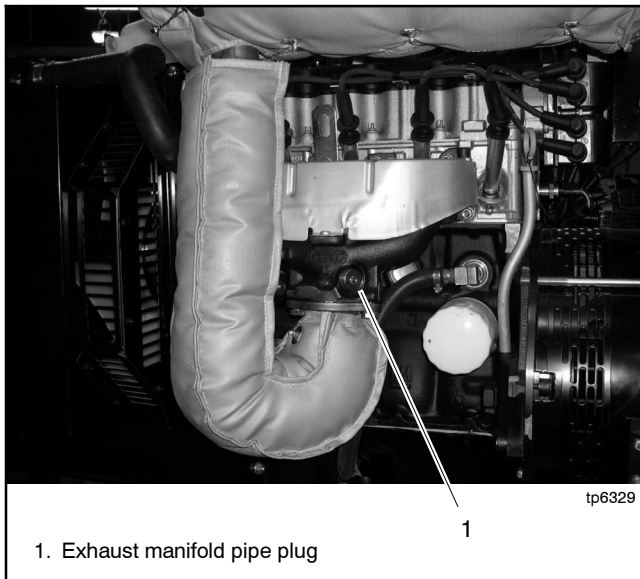

**Figure 2-15** Oxygen Sensor Mounting Location


6. Connect a manometer to check the fuel supply pressure on the supply side of the fuel solenoid valve. See Figure 2-10.
7. Connect the oxygen sensor harness as directed in the instructions provided with oxygen sensor kit.
8. Check that the generator set master switch is in the OFF position.
9. Reconnect the generator set engine starting battery, negative (-) lead last.
10. Place the controller master switch in the RUN position to start generator set.
11. Adjust the fuel supply pressure with the generator set running at full load. Rotate the adjustment screw on the primary fuel regulator until the manometer indicates a fuel pressure of 7-11 in. water column. Pressures below 7 in. water column may result in poor response to load changes or lack of power.
12. Reinstall the cover plug.
13. Check the fuel connections for leaks with the generator set running.
14. Use a digital multimeter to check the output voltage and frequency. Verify 120 volts line-to-neutral and 60 Hz output.
15. Allow the generator set to run until the generator set reaches normal operating temperature. The

time required to reach normal operating temperature depends primarily on the ambient temperature and the size of the engine.

16. With the generator set at normal operating temperature, apply 90%-100% of rated load. If a load bank is not available, apply a load at least comparable to what is generally connected to the generator set.
17. Adjust the fuel mixture adjustment screw (on the mixer, see Figure 2-16) to obtain a full load oxygen sensor voltage reading of  $2.5 \pm 0.10$  VDC (or a lambda  $\lambda$  value of approximately 1.0 as indicated in the instructions provided with oxygen sensor kit GM58035.

If the oxygen sensor voltage reading is too low with the fuel mixture adjustment in the richest position (turned in clockwise), turn the fuel regulator adjustment screw clockwise and readjust the fuel mixture adjustment screw.

If the oxygen sensor voltage reading is too high with the fuel mixture adjustment in the leanest position (turned out counterclockwise), turn the fuel regulator adjustment screw counterclockwise and readjust the fuel mixture adjustment screw.

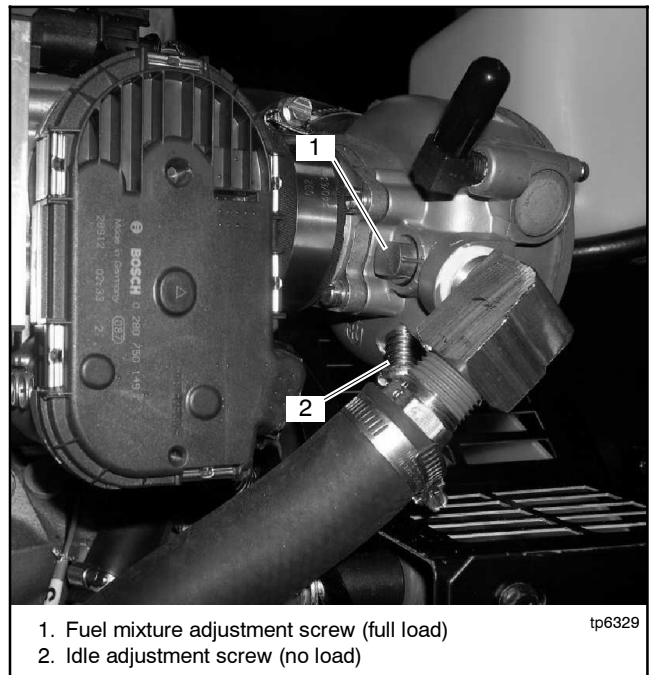

**Figure 2-16** Fuel Mixture Adjustment Screw Location


18. Disconnect the load.
19. Adjust the idle screw (see Figure 2-16) to obtain a no-load oxygen sensor voltage reading of  $2.5 \pm 0.10$  VDC (or a lambda  $\lambda$  value of approximately 1.0).



20. Repeat steps 16 through 19 to verify the settings.
21. Place the generator set master switch in the OFF position to stop generator set.
22. Disconnect the generator set engine starting battery(ies), negative (-) lead first.
23. Allow the generator set exhaust system to cool. Disconnect and remove the oxygen sensor as directed in the instructions provided with oxygen sensor kit.
24. Reconnect the generator set engine starting battery, negative (-) lead last.
25. Reconnect the power to the battery charger, if equipped.

1. Verify that all guards are in place. Install the enclosure's end panels and nonservice side door.
2. Check the items in the Prestart Checklist in the generator set operation manual.
3. Move the generator set master switch to the RUN position to start the generator set.
4. Use a digital voltmeter (DVM) to check the output voltage from the generator set. If voltage adjustments are required, refer to Section 4.4 for instructions to use the ADC 2100 voltage adjustment menu.
5. Perform voltage checks as described in the ATS operation and installation manual. Close the main circuit breaker on the main distribution panel when instructed to connect power in the test procedure.
6. Move the generator set master switch to OFF and then to the AUTO position.
7. Install the enclosure's service-side door. Verify that all enclosure doors and panels are installed.
8. Test the system operation as described in the ATS operation and installation manual.
9. Set the exerciser on the transfer switch to exercise the generator set weekly. Refer to the instructions in the ATS operation and installation manual.

### 2.2.10 Operation Tests

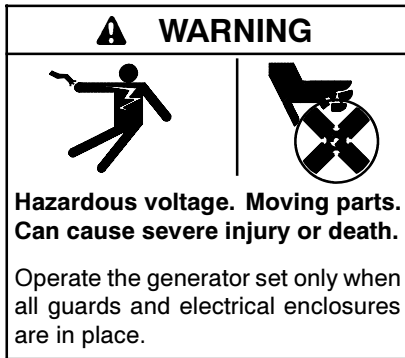

# Notes

# Section 3 Accessories

## 3.1 Introduction

Accessories are available factory-installed and/or shipped loose. Obtain the most current list of accessories from the generator set specification sheet or by contacting an authorized Kohler distributor/ dealer.

Have accessories installed by your local authorized Kohler distributor/dealer or authorized representative. Follow the installation instructions provided with each kit.

Use separate conduit for AC and DC leads to reduce the possibility of electrical interference. Use shielded cable for all analog inputs. Verify that the leads and conduit do not interfere with the operation of the generator set or obstruct the service areas.

Verify that the accessory installation complies with the National Electrical Code (NEC) and all applicable local and state codes.

**Accessory Wiring.** To determine the appropriate size for the customer-supplied wiring of engine battery-powered accessories, use the guidelines in Figure 3-1. Use 18–20 gauge wire for signal wires up to 305 m (1000 ft.).

| Length, m (ft.) | Wire Gauge |
|-----------------|------------|
| 30.5 (100)      | 18–20      |
| 152.4 (500)     | 14         |
| 304.8 (1000)    | 10         |

**Figure 3-1** Wire Length and Size, Lead N and 42B

See TP-6437, Wiring Diagram manual, for more information regarding generator set electrical connections.

The following sections detail a few common accessories and their functions. The instructions provided with the accessory kit supersede these instructions, if different.


## 3.2 Common Fault and Run Relay Board

The optional relay board replaces the standard relay interface board (RIB) and provides two additional relays to control customer-provided equipment:

- Common fault relay
- Auxiliary run relay

The relay board location is shown in Figure 3-2. Connect customer equipment to the relay board harness. Figure 3-3 lists the customer connections.

The common fault relay is energized on a fault. The auxiliary run relay is energized when the generator set is running. Connect to each relay’s normally open or normally closed contacts depending on the application.

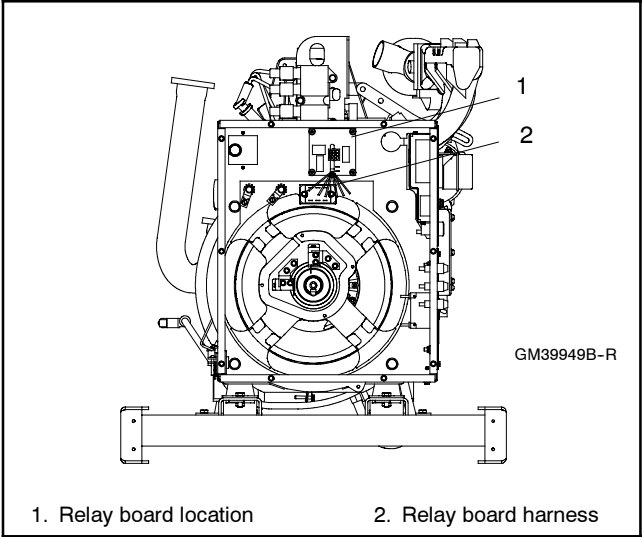

**Figure 3-2** Common Fault and Run Relay Board

| Harness Lead Number | Connector Pin Number | Connection                         |
|---------------------|----------------------|------------------------------------|
| 88                  | 6                    | Common fault relay normally open   |
| 89                  | 2                    | Common fault relay common          |
| 90                  | 3                    | Common fault relay normally closed |
| 91                  | 4                    | Run relay normally open            |
| 92                  | 1                    | Run relay common                   |
| 93                  | 5                    | Run relay normally closed          |

**Figure 3-3** Common Fault and Run Relay Board Harness Connections

### 3.3 Remote Digital Gauge

The Remote Digital Gauge allows for remote starting/stopping and monitoring of certain generator set functions. See Figure 3-4. The Remote Digital Gauge connects to the 12-pin customer-interface connector. Refer to TT-1379 for instructions to install, connect, and operate the gauge.

**Note:** The Remote Digital Gauge will not display the oil pressure in this application.



**Figure 3-4** Remote Digital Gauge

The ADC 2100 communications parameter Cn must be set to Cn01 or Cn06 to communicate with the gauge. See Section 4.2 for important controller power down information. See Section 4.3 for more information on controller configuration.

ADC 2100 application program version 1.14 or higher is required for the Remote Digital Gauge. Refer to TT-1285, Program Loader Instructions, for instructions to load the latest version of the controller application code, if necessary.

Use one or more remote extension harness kits to connect the gauge to the generator set. Do not use more than 3 remote harness kits and do not exceed 22.86 m (75 ft.) in harness length. See Figure 2 for kit selection.

| Remote Extension Harness Kit Number | Length, m (ft.) |
|-------------------------------------|-----------------|
| GM32333-KP1                         | 4.6 (15)        |
| GM32333-KP2                         | 7.6 (25)        |

**Figure 2** Remote Extension Harness Kits (for gauge to generator set)

### 3.4 Block Heaters

Block heaters are available as installed accessories on all generator sets. Use block heaters on all standby applications where the generator set is subject to temperatures below 16°C (60°F). Connect the block heater to a power source that is energized when the generator set is not running.

**Note: Block heater damage.** The block heater will fail if the energized heater element is not immersed in coolant. Fill the cooling system before turning on the block heater. Run the engine until it is warm and refill the radiator to purge the air from the system before energizing the block heater.

### 3.5 Oil Makeup/Low Level Shutdown Kit

The optional oil makeup/low level shutdown kit protects the engine if the oil level drops below a preset level. Follow the instructions provided with the kit to add oil, if necessary, and to check the height of the oil level sight gauge during generator set installation.

### 4.1 Advanced Digital Control (ADC 2100)

The generator sets use the Advanced Digital Control (ADC 2100). The ADC 2100 uses password-protected menus for generator output adjustments and controller configuration.

This section contains instructions for using the controller's password-protected menus to check and adjust the generator output and controller configuration. The controller configuration and generator set output are factory-set and should not require field adjustment under normal circumstances. Check and adjust the configuration and/or output when:

- The controller has been replaced.
- The voltage requires adjustment for a particular application.
- Troubleshooting generator set problems.

Have controller setup and adjustment performed only by an authorized Kohler distributor/dealer or authorized representative.

### 4.2 Controller Automatic Power Down

With the generator set master switch in the AUTO position, there are three possible controller power modes.

**48-hour power down.** If the ADC 2100 controller is not configured for a CAN gauge (communications parameter setting Cn00, see Section 4.3), the controller will power down after 48 hours of no activity. If the generator set has been started, the controller will power down 48 hours after the generator stops. A remote start signal from a transfer switch or remote switch connected to engine start leads 3 and 4 will signal the controller to power up and the generator set to start.

**Continuous power mode.** If the ADC 2100 is configured for a CAN gauge (communications parameter setting Cn01), the controller will not power down. The ADC 2100 remains powered at all times to allow remote start commands from the remote CAN gauge.

**1-hour power down.** Setting the communications parameter to Cn06 will cause the controller to power down after 1 hour of no activity. In this mode, a remote start/stop switch or the generator set master switch must be used to activate the controller after it has powered down. Controller application code version 1.21 or higher is required for the 1-hour power down option.

### 4.3 Controller Configuration

The controller configuration for each generator model is set at the factory and should not normally require changes. The controller's configuration mode allows adjustment of the system parameters listed in this section. Use the instructions in this section to check the configuration after installation and change them to match the settings shown in Figure 4-1, if necessary.

**Note:** If the controller is replaced, the new ADC 2100 will need to be configured to the settings for the generator set as described in this section.

**Note:** The controller will automatically exit the configuration mode without saving any changes after about 1 minute if no buttons are pressed. Start the configuration procedure over again from the beginning if the controller exits the configuration mode before the settings have been saved.

| Parameter                           | Setting | Definition  |
|-------------------------------------|---------|---|
| Unit's system voltage and frequency | Uu01    | Single phase, 3 wire, 60 Hz, 120/240 VAC  |
| Unit configuration                  | Uc01    | Standby   |
| Engine type                         | Ec03    | 15RES/RESL  |
|                                     | Ec06    | 30RES/RESL  |
| Engine data input types             | Ed01    | 15/30RES/RESL   |
| Battery Voltage                     | Bt12    | Battery voltage 12 VDC  |
| Communications                      | Cn00    | No CAN communications, 48-hour power down   |
|                                     | Cn01    | J1939 (use for Remote Digital Gauge), no power down   |
|                                     | Cn06 *  | Enables J1939 communications and 1-hour ADC 2100 power down after engine stop for either:<br>a. Remote start/stop switch<br>b. Automatic transfer switch<br>c. Remote Digital Gauge with remote start/stop switch and replacement harness |

\* ADC application program version 1.21 or higher

**Figure 4-1** Configuration Parameters

Follow the instructions in Figure 4-2 to enter the configuration mode while the engine is not running and then step through the parameters. Use the up (Λ) and down (∇) arrow buttons to select the appropriate setting for the application.

**Note:** Be sure to save your settings before exiting the configuration mode. See Figure 4-4. The controller reverts to the last saved settings when the master switch is moved to the OFF/RESET position.

**Voltage/frequency setting (Uu).** Set the system voltage and frequency to the value shown in Figure 4-1.

**Note:** This parameter sets the nominal system voltage and frequency. To adjust the output (measured) voltage, see Section 4.4.

**Unit configuration (Uc).** This parameter sets the generator set type: marine, standby, or mobile.

**Engine configuration (Ec).** The engine configuration must match the generator set engine type.

**Advanced configuration mode (Adnc).** The data input types, battery voltage, and communications setting can be changed in the advanced configuration mode. Press the up arrow button when *Adnc* is displayed to enter the advanced configuration mode. See Figure 4-3.

**Engine data input types (Ed).** This setting defines the type of senders used on the generator set engine.

**Battery voltage (Bt).** This setting toggles between 12 and 24 VDC for the engine starting battery voltage. The 15/30RES uses a 12-volt battery, Bt12.

**Communications setting (Cn).** This setting allows the user to set the controller for communication with optional meters. The 15/30RES is factory-set for no CAN communications, Cn00. Change this setting to Cn01 or Cn06 if the optional Remote Digital Gauge is used. See Section 4.2 and Figure 4-1 for more information.

## Controller Configuration Mode:


Hold the Select button:



Move the generator set master switch to the RUN position. (The generator set engine will not start.)

Wait about 5 seconds until the display shows the program version number. (The number may be different than the one shown here.)

Press the down arrow key and then the up arrow key 3 times to enter the configuration mode. (This is the controller "password.")

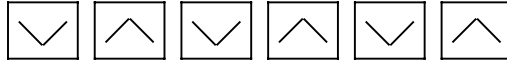

Display:

. 0

1 0 4

U u 0 1

Now release the Select button.

Press:



or



To set the voltage/frequency setting to Uu01. See Figure 4-1.

U u 0 1



To step to the next parameter, unit configuration Uc.



or



To set the unit configuration setting to Uc01, if necessary.

U c 0 1



To step to the next parameter, engine type Ec.



or



To set the engine type to Ec03 for the 15RES or Ec06 for the 30RES, if necessary.

E c 0 3

E c 0 6



To step to the next parameter, advanced configuration mode or save mode selection.

A d n c

Now either save your settings or enter the Advanced Configuration Mode to set the engine data inputs, battery voltage, and communications.

Press:



To enter advanced configuration mode.  
Go to Figure 4-3.

E d 0 1

or



or



To proceed to the save mode without entering the advanced configuration mode.  
Go to Figure 4-4.


 
 






S A V E

**Note:** Shaded boxes show which number in the controller display changes when the up or down arrow key is pressed.

**Figure 4-2** Configuration Mode (system voltage/frequency, unit configuration, and engine type parameters)

 Pressing the up arrow key at the Adnc display (See Figure 4-2) puts you into the Advanced Configuration Mode.

Press:




|   |    |   |  |                |
|---|----|---|--|----------------|
|  | or |  | To set the engine data input type to Ed01. See Figure 4-1.     | <b>E d 0 1</b> |
|  |    |   | To enter battery voltage selection mode.                       |                |
|  | or |  | To toggle between 12 and 24 VDC. Set this parameter to 12 VDC. | <b>B t 1 2</b> |
|  |    |   | To enter communications selection mode.                        |                |
|  | or |  | To set the communications parameter Cn. See Figure 4-1.        | <b>C n 0 0</b> |
|  |    |   | To enter SAVE mode. Go to Figure 4-4.                          | <b>S A V E</b> |

**Note: Be sure to save your settings before exiting the configuration mode. The controller reverts to the last saved settings when the master switch is moved to the OFF/RESET position.**

**Figure 4-3** Advanced Configuration Mode (engine data input type, battery voltage, and engine communications)

There are 3 options when the display says SAVE:

  Press:

|   |   |                |
|---|---|----------------|
|  | To return to the first parameter, system voltage/frequency Uu, to check or change settings before saving. See Figure 4-2. | <b>U u 0 1</b> |
| or  |   |                |
|  | To save changes.  | <b>Y E S</b>   |
| or  |   |                |
|  | To discard changes without saving.  | <b>n o</b>     |

“Yes” or “no” flashes when the up or down arrow is pressed and then the controller exits the configuration mode. The display returns to the runtime hours.

**X X X X**


Now move the master switch to OFF/RESET.

\* X in the runtime hours display above denotes any number from 0 to 9.

**Figure 4-4** Save Mode (after configuring generator set parameters)



## 4.4 Voltage Adjustments

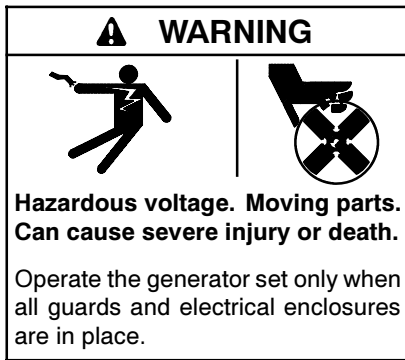

**Short circuits. Hazardous voltage/current can cause severe injury or death.** Short circuits can cause bodily injury and/or equipment damage. Do not contact electrical connections with tools or jewelry while making adjustments or repairs. Remove all jewelry before servicing the equipment.

The controller's adjustment mode allows adjustment of the output voltage, if necessary. Have adjustments performed by an authorized Kohler distributor/ dealer or service technician.

**Note:** A digital voltmeter is required for these adjustments.

Use a voltmeter to check the output voltage. If the output voltage is not within specifications, use the ADC controller to adjust the output voltage while the generator set is running. The flowcharts in Figure 4-6 and Figure 4-7 outline the adjustment procedures.

**Note:** Be sure to save your settings before exiting the configuration mode.

Voltage changes are lost if they are not saved before the generator set shuts down. The generator set continues to run with the new settings until it shuts down but then reverts to the previous settings at the next startup if the changes have not been saved.

Pressing the Select button when SAVE is displayed returns to the first parameter, voltage adjust (1P).

**Note:** Refer to the flowcharts in Figure 4-6 and Figure 4-7 during the voltage adjustment procedure.

### Voltage Adjustment Procedure

1. With the generator set off, connect a digital multimeter to the output leads or an electrical outlet on the load side of the generator set. Set the meter to measure AC voltage.
2. Start the generator set by moving the generator set master switch to the RUN position.
3. Use the ADC controller to adjust the voltage (parameter 1P) until the output voltage reaches the desired value. See Figure 4-5 for the approximate change in voltage per step in parameter 1P. See Figure 4-6 for adjustment instructions.

| Measured Voltage, VAC | Voltage Change per Step, VAC |             |
|-----------------------|------------------------------|-------------|
|                       | Coarse Adjust                | Fine Adjust |
| 85-132                | 5                            | 0.5         |
| 180-251               | 7                            | 0.7         |

**Figure 4-5** Voltage Adjustment (approximate)

4. Adjust the voltage stability (gain, parameter 2P) to minimize light flicker. See Figure 4-6 for adjustment instructions.
5. Readjust the voltage, if necessary.
6. Save the controller settings as described in Figure 4-7.
7. Stop the generator set.

## Output Voltage Adjustment Mode:

Move the generator set master switch to the RUN position. The generator set engine starts and the controller display shows the engine runtime hours.

Display :\*

X X X X


Hold:



Wait about 5 seconds until the display changes from runtime hours to the program version number.

X.XX

Press the down arrow key and then the up arrow key 3 times to enter the adjustment mode. (This is the controller "password.")

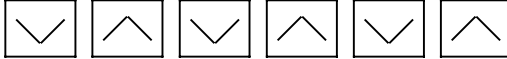

1 P X X

The controller is now in the voltage coarse adjustment mode.

Press:



or



To raise or lower the voltage in large increments (approximately 5-7 volts per step).

1 P X X



To enter fine voltage adjustment mode.

1 P X X



or



To raise or lower the voltage in smaller increments (approximately 0.5-0.7 volts per step).

2 P X X



To enter coarse voltage stability (gain) adjustment mode.



or



To raise or lower the voltage stability (gain) in large increments.

2 P X X



To enter fine voltage stability (gain) adjustment mode.



or



To raise or lower the voltage stability (gain) in smaller increments.

3 P 0 X



To enter volts/Hz adjustment mode.



or



To raise or lower the volts/Hz: 00=low; 09= high

**Continued on Figure 4-7.**

\* Shaded boxes show which character in the controller display changes for each adjustment. X in the examples above denotes any number from 0 to 9. The actual values may vary from model-to-model.

TP6196

**Figure 4-6** Output Voltage Adjustments

**Continued from Figure 4-6:**

Display : \*



To enter SAVE mode.

S A V E

**Note: Be sure to save your settings before exiting the configuration mode. The controller reverts to the last saved settings when the master switch is moved to the OFF/RESET position.**

**There are 3 options when the display says SAVE:  
Press:**

S A V E



To return to the first parameter, coarse voltage adjustment, to check or change settings before saving. See Figure 4-6.

1 P x x

or



To save changes.

Y E S

or



To discard changes without saving.

n o

**“Yes” or “no” flashes when the up or down arrow is pressed and then the controller exits the configuration mode. The display returns to the runtime hours.**

X X X X

**Now move the master switch to OFF/RESET.**

\* X in the examples above denotes any number from 0 to 9. The actual values may vary from model-to-model.

**Figure 4-7** Output Voltage Adjustments, Continued

# Notes

## Section 5 Dimension Drawings

---


Figure 5-1 lists the drawing numbers and page numbers.

**Note:** See TP-6437, Wiring Diagram Manual, for wiring diagrams and schematics.

| <b>Dimension Drawing Description</b> | <b>Drawing Number</b> | <b>Page</b> |
|--------------------------------------|-----------------------|-------------|
| Generator Set                        | ADV-7000A-D           | 38          |
| Weather Housing with Sound Kit       | ADV-7000B-D           | 39          |
| Sound Enclosure                      | ADV-7000C-D           | 40          |
| Installation Clearances              | ADV-7000D-D           | 41          |
| High Wind Mounting Pad Detail        | ADV-7000E-D           | 42          |

**Figure 5-1** Drawing Numbers and Locations




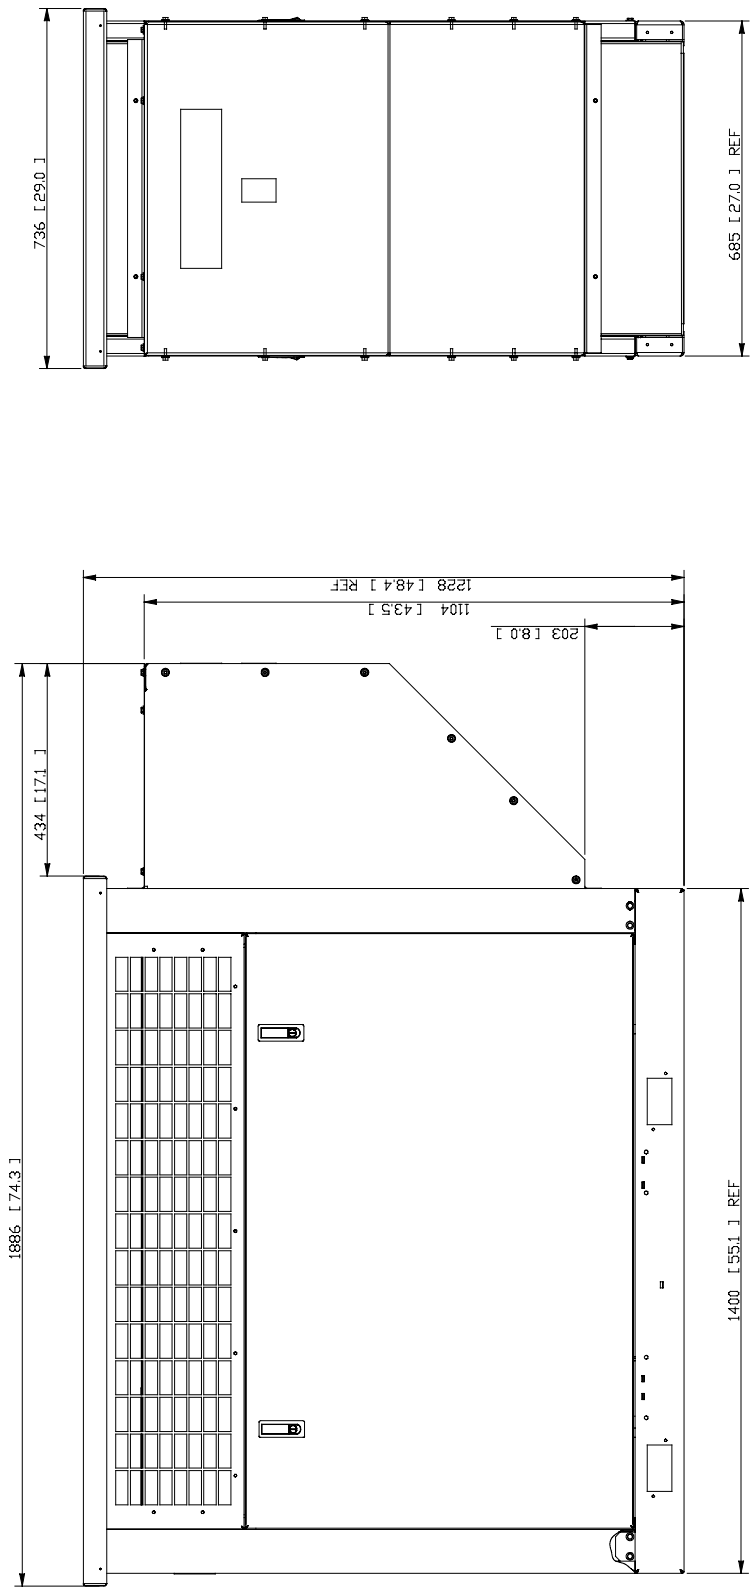

SOUND ATTENUATED WEATHER HOUSING  
(WEATHER HOUSING W/ SOUND UPFIT)


**Note:** Dimensions are shown in mm [in.].

**Figure 5-3** Dimensions, Weather Housing with Sound Upfit Kit, ADV-7000B-D

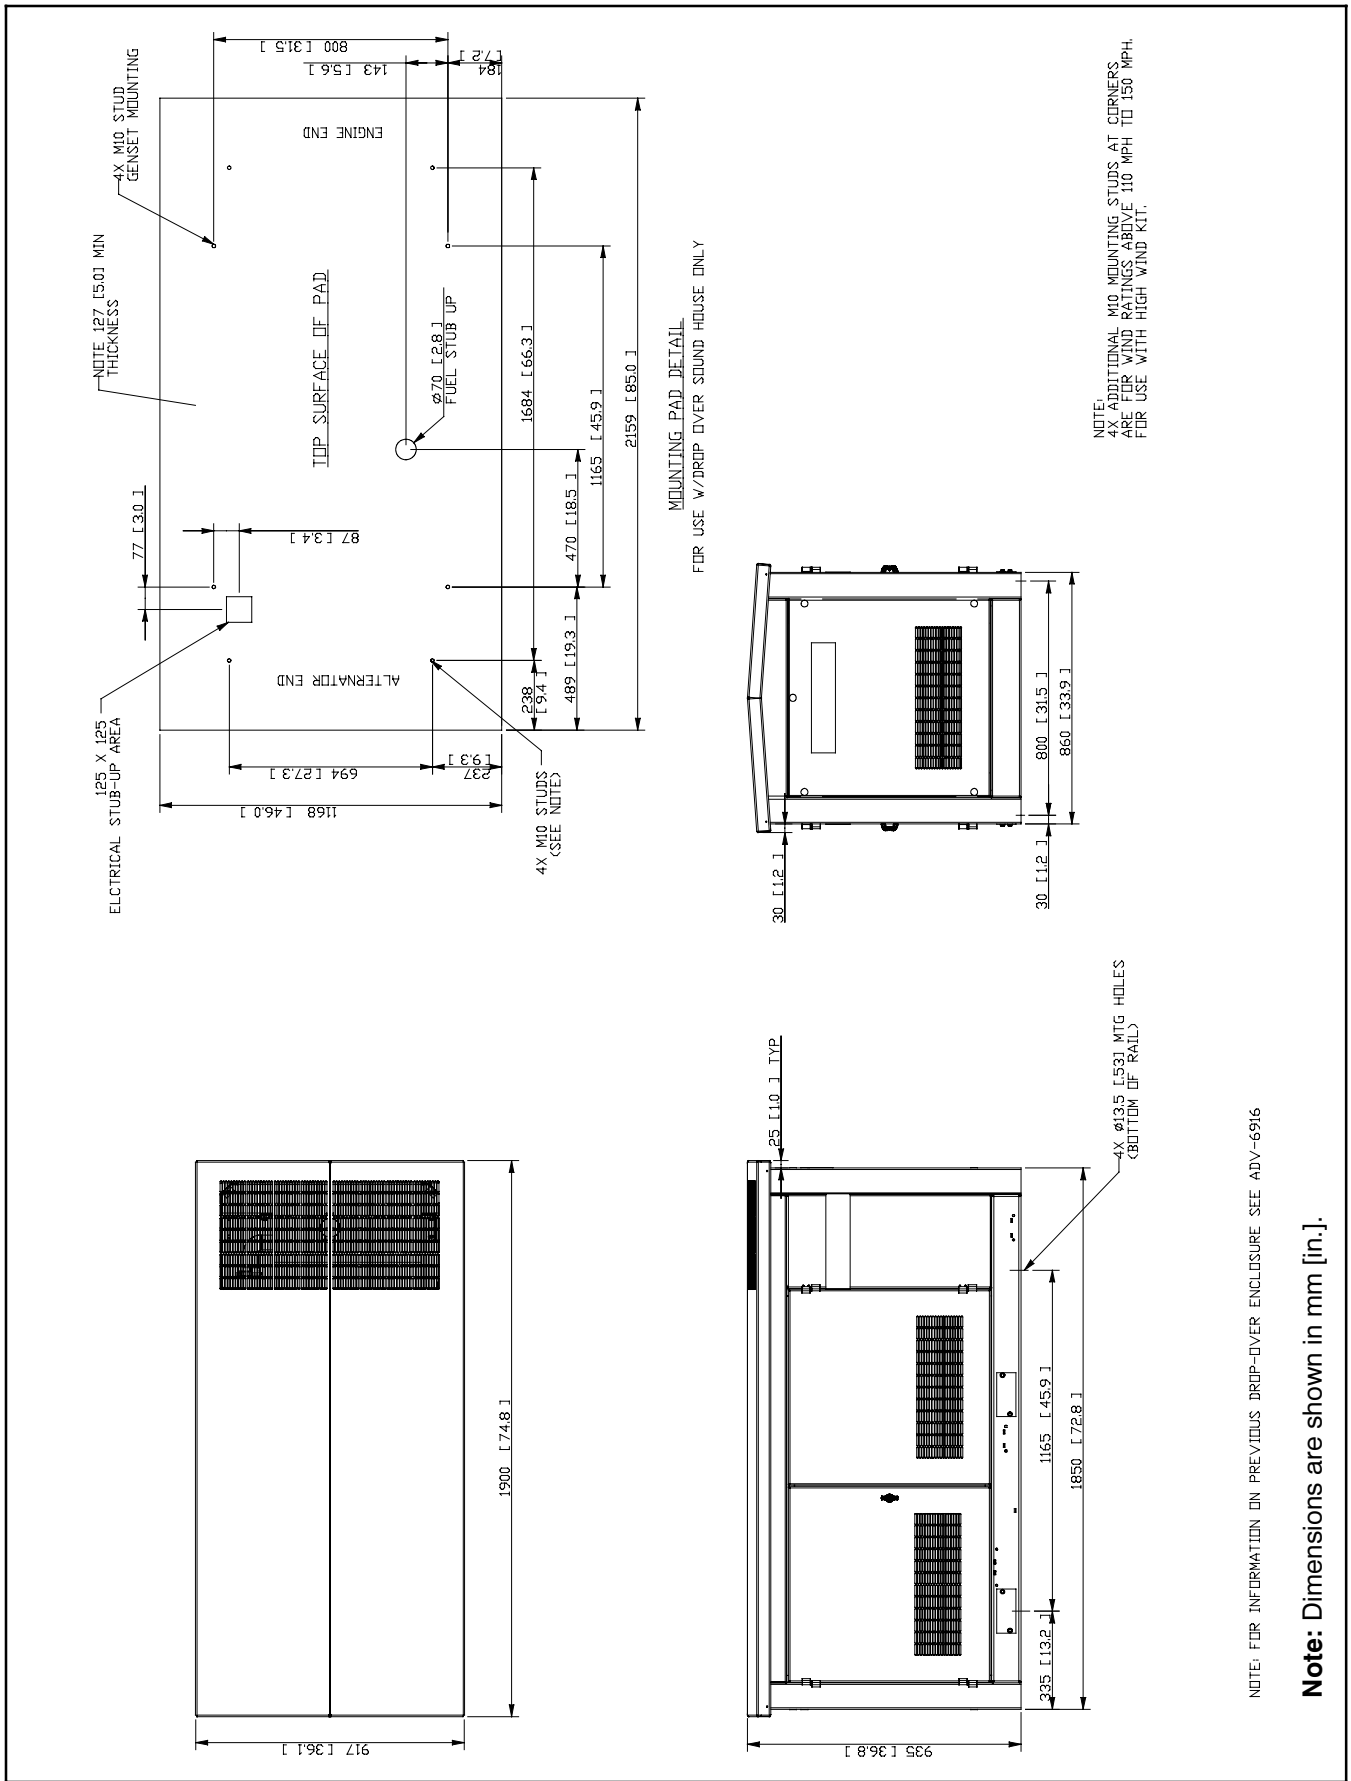



RESIDENTIAL INSTALLATION GUIDE

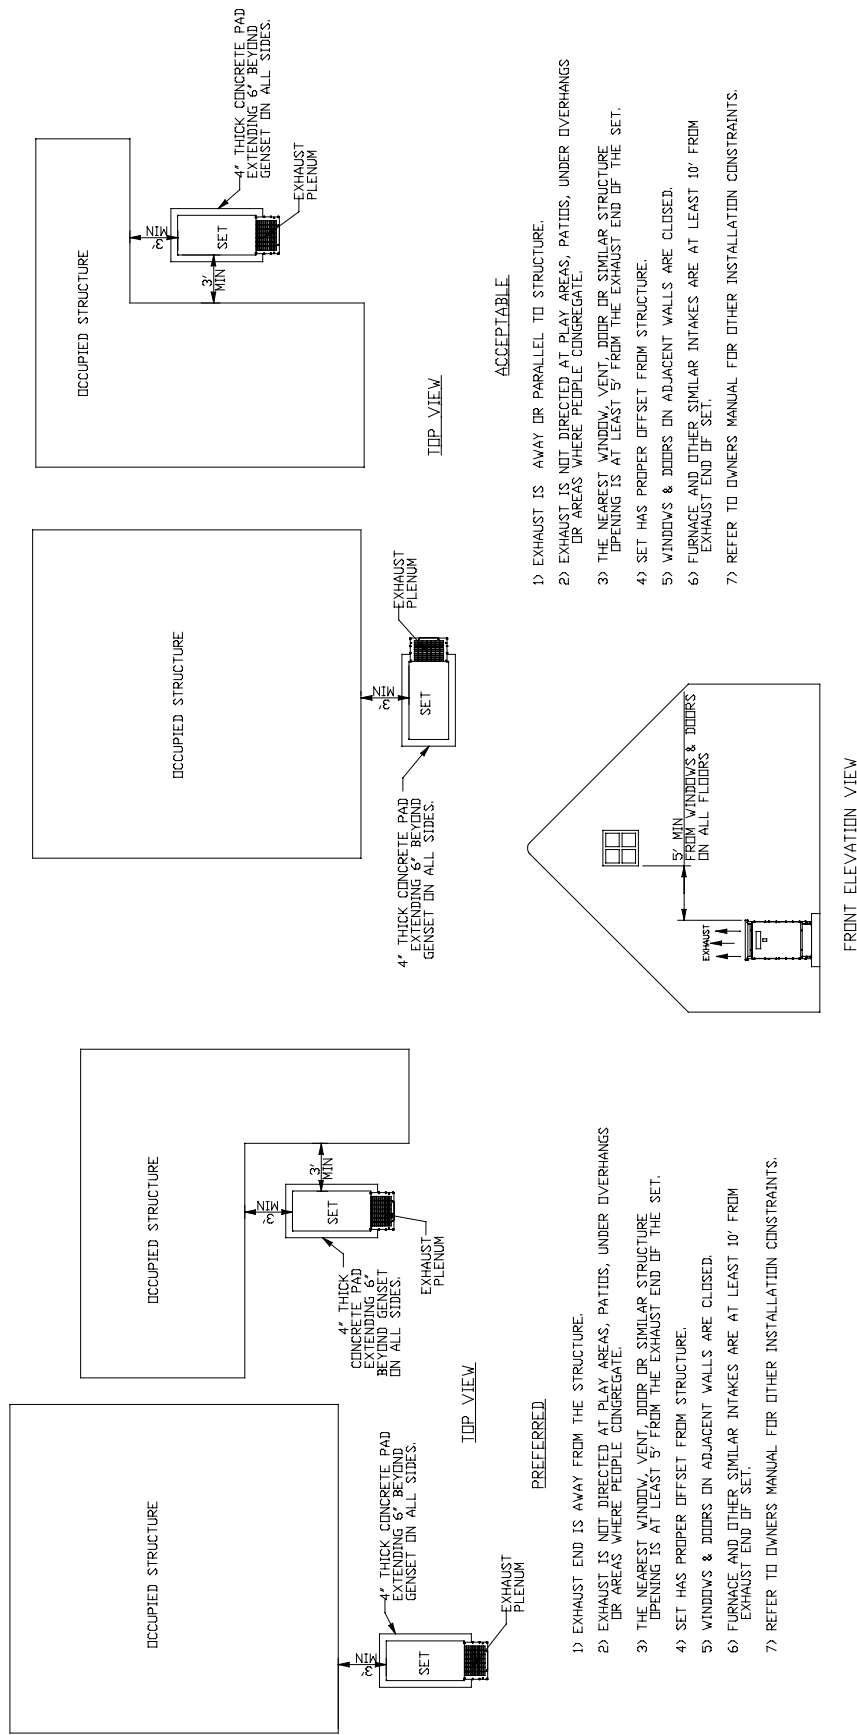


ACCEPTABLE

- 1) EXHAUST IS AWAY OR PARALLEL TO STRUCTURE.
- 2) EXHAUST IS NOT DIRECTED AT PLAY AREAS, PATIOS, UNDER OVERHANGS OR AREAS WHERE PEOPLE CONGREGATE.
- 3) THE NEAREST WINDOW, VENT, DOOR OR SIMILAR STRUCTURE OPENING IS AT LEAST 5' FROM THE EXHAUST END OF THE SET.
- 4) SET HAS PROPER OFFSET FROM STRUCTURE.
- 5) WINDOWS & DOORS ON ADJACENT WALLS ARE CLOSED.
- 6) FURNACE AND OTHER SIMILAR INTAKES ARE AT LEAST 10' FROM EXHAUST END OF SET.
- 7) REFER TO OWNERS MANUAL FOR OTHER INSTALLATION CONSTRAINTS.

PREFERRED

- 1) EXHAUST END IS AWAY FROM THE STRUCTURE.
- 2) EXHAUST IS NOT DIRECTED AT PLAY AREAS, PATIOS, UNDER OVERHANGS OR AREAS WHERE PEOPLE CONGREGATE.
- 3) THE NEAREST WINDOW, VENT, DOOR OR SIMILAR STRUCTURE OPENING IS AT LEAST 5' FROM THE EXHAUST END OF THE SET.
- 4) SET HAS PROPER OFFSET FROM STRUCTURE.
- 5) WINDOWS & DOORS ON ADJACENT WALLS ARE CLOSED.
- 6) FURNACE AND OTHER SIMILAR INTAKES ARE AT LEAST 10' FROM EXHAUST END OF SET.
- 7) REFER TO OWNERS MANUAL FOR OTHER INSTALLATION CONSTRAINTS.

Figure 5-5 Installation Clearance Drawing, ADV-700D-D

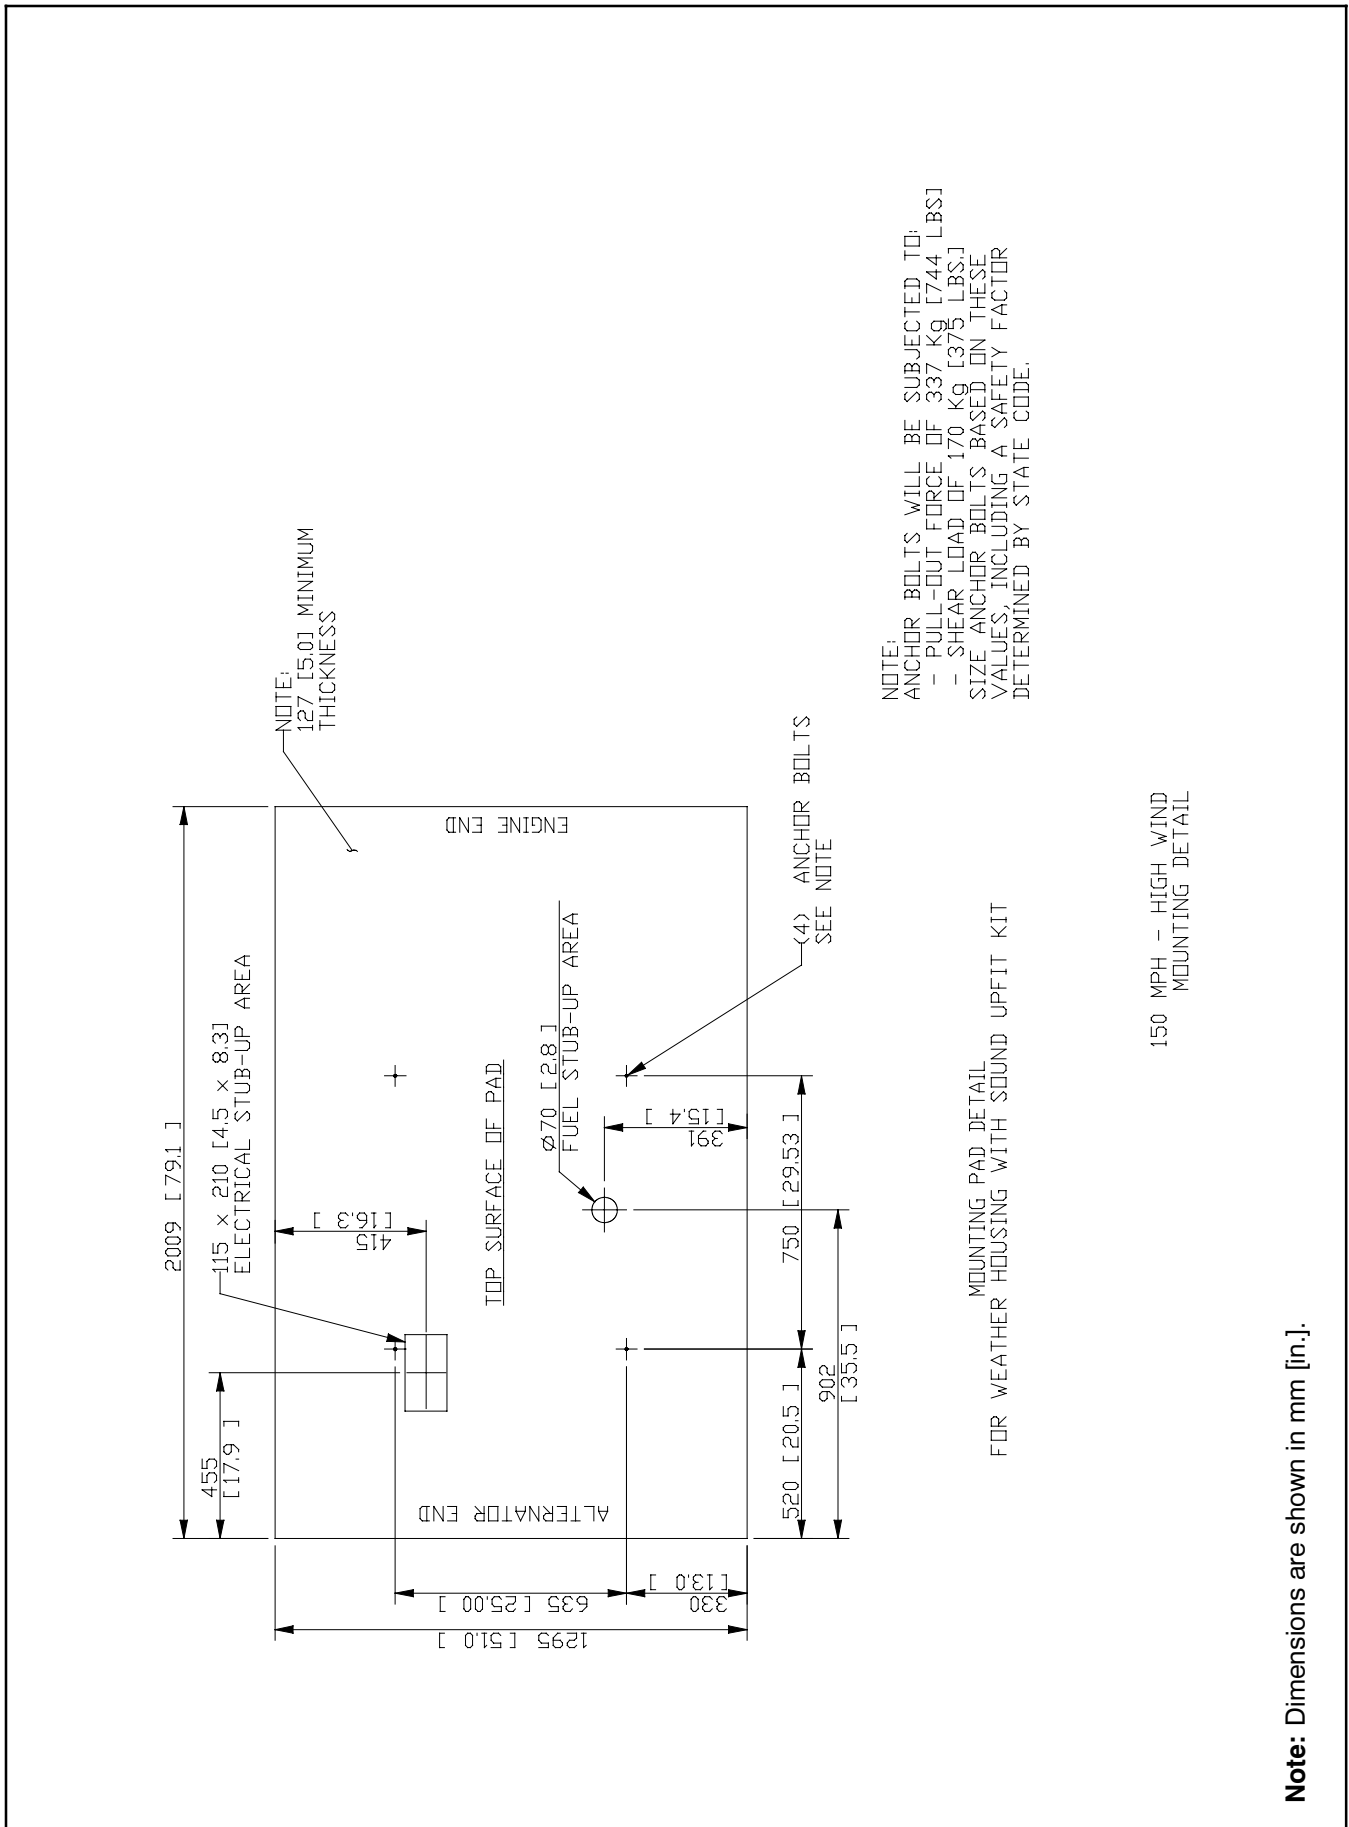

**Figure 5-6** High Wind Mounting Pad Detail Drawing, ADV-700E-D

# Appendix A Abbreviations

The following list contains abbreviations that may appear in this publication.

|           |  |          |  |                      |  |
|-----------|--|----------|--|----------------------|--|
| A, amp    | ampere   | cfm      | cubic feet per minute  | est.                 | estimated  |
| ABDC      | after bottom dead center   | CG       | center of gravity  | E-Stop               | emergency stop                                       |
| AC        | alternating current  | CID      | cubic inch displacement  | etc.                 | et cetera (and so forth)                             |
| A/D       | analog to digital  | CL       | centerline   | exh.                 | exhaust  |
| ADC       | advanced digital control;<br>analog to digital converter                                   | cm       | centimeter   | ext.                 | external   |
| adj.      | adjust, adjustment   | CMOS     | complementary metal oxide<br>substrate (semiconductor)                               | F                    | Fahrenheit, female                                   |
| ADV       | advertising dimensional<br>drawing   | cogen.   | cogeneration   | fglass.              | fiberglass   |
| Ah        | amp-hour   | com      | communications (port)  | FHM                  | flat head machine (screw)                            |
| AHWT      | anticipatory high water<br>temperature   | coml     | commercial   | fl. oz.              | fluid ounce  |
| AISI      | American Iron and Steel<br>Institute   | Coml/Rec | Commercial/Recreational<br>conn.   | flex.                | flexible   |
| ALOP      | anticipatory low oil pressure  | cont.    | connection   | freq.                | frequency  |
| alt.      | alternator   | CPVC     | chlorinated polyvinyl chloride   | FS                   | full scale   |
| Al        | aluminum   | crit.    | critical   | ft.                  | foot, feet   |
| ANSI      | American National Standards<br>Institute (formerly American<br>Standards Association, ASA) | CRT      | cathode ray tube   | ft. lb.              | foot pounds (torque)                                 |
| AO        | anticipatory only  | CSA      | Canadian Standards<br>Association  | ft./min.             | feet per minute                                      |
| APDC      | Air Pollution Control District   | CT       | current transformer  | ftp                  | file transfer protocol                               |
| API       | American Petroleum Institute   | Cu       | copper   | g                    | gram   |
| approx.   | approximate, approximately   | cUL      | Canadian Underwriter's<br>Laboratories   | ga.                  | gauge (meters, wire size)                            |
| AQMD      | Air Quality Management District  | CUL      | Canadian Underwriter's<br>Laboratories   | gal.                 | gallon   |
| AR        | as required, as requested  | cu. in.  | cubic inch   | gen.                 | generator  |
| AS        | as supplied, as stated, as<br>suggested  | cw.      | clockwise  | genset               | generator set  |
| ASE       | American Society of Engineers  | CWC      | city water-cooled  | GFI                  | ground fault interrupter                             |
| ASME      | American Society of<br>Mechanical Engineers  | cyl.     | cylinder   | GND, ⊕               | ground   |
| assy.     | assembly   | D/A      | digital to analog  | gov.                 | governor   |
| ASTM      | American Society for Testing<br>Materials  | DAC      | digital to analog converter  | gph                  | gallons per hour                                     |
| ATDC      | after top dead center  | dB       | decibel  | gpm                  | gallons per minute                                   |
| ATS       | automatic transfer switch  | dB(A)    | decibel (A weighted)   | gr.                  | grade, gross   |
| auto.     | automatic  | DC       | direct current   | GRD                  | equipment ground                                     |
| aux.      | auxiliary  | DCR      | direct current resistance  | gr. wt.              | gross weight   |
| avg.      | average  | deg., °  | degree   | H x W x D            | height by width by depth                             |
| AVR       | automatic voltage regulator  | dept.    | department   | HC                   | hex cap  |
| AWG       | American Wire Gauge  | DFMEA    | Design Failure Mode and<br>Effects Analysis  | HCHT                 | high cylinder head temperature                       |
| AWM       | appliance wiring material  | dia.     | diameter   | HD                   | heavy duty   |
| bat.      | battery  | DI/EO    | dual inlet/end outlet  | HET                  | high exhaust temp., high<br>engine temp.             |
| BBDC      | before bottom dead center  | DIN      | Deutsches Institut für Normung<br>e. V. (also Deutsche Industrie<br>Normenausschuss) | hex                  | hexagon  |
| BC        | battery charger, battery<br>charging   | DIP      | dual inline package  | Hg                   | mercury (element)                                    |
| BCA       | battery charging alternator  | DPDT     | double-pole, double-throw  | HH                   | hex head   |
| BCI       | Battery Council International  | DPST     | double-pole, single-throw  | HHC                  | hex head cap   |
| BDC       | before dead center   | DS       | disconnect switch  | HP                   | horsepower   |
| BHP       | brake horsepower   | DVR      | digital voltage regulator  | hr.                  | hour   |
| blk.      | black (paint color), block<br>(engine)   | E, emer. | emergency (power source)   | HS                   | heat shrink  |
| blk. htr. | block heater   | ECM      | electronic control module,<br>engine control module                                  | hsg.                 | housing  |
| BMEP      | brake mean effective pressure  | EDI      | electronic data interchange  | HVAC                 | heating, ventilation, and air<br>conditioning        |
| bps       | bits per second  | EFR      | emergency frequency relay  | HWT                  | high water temperature                               |
| br.       | brass  | e.g.     | for example ( <i>exempli gratia</i> )  | Hz                   | hertz (cycles per second)                            |
| BTDC      | before top dead center   | EG       | electronic governor  | IC                   | integrated circuit                                   |
| Btu       | British thermal unit   | EGSA     | Electrical Generating Systems<br>Association   | ID                   | inside diameter, identification                      |
| Btu/min.  | British thermal units per minute   | EIA      | Electronic Industries<br>Association   | IEC                  | International Electrotechnical<br>Commission         |
| C         | Celsius, centigrade  | EI/EO    | end inlet/end outlet   | IEEE                 | Institute of Electrical and<br>Electronics Engineers |
| cal.      | calorie  | EMI      | electromagnetic interference   | IMS                  | improved motor starting                              |
| CAN       | controller area network  | emiss.   | emission   | in.                  | inch   |
| CARB      | California Air Resources Board   | eng.     | engine   | in. H <sub>2</sub> O | inches of water                                      |
| CB        | circuit breaker  | EPA      | Environmental Protection<br>Agency   | in. Hg               | inches of mercury                                    |
| cc        | cubic centimeter   | ES       | engineering special,<br>engineered special   | in. lb.              | inch pounds  |
| CCA       | cold cranking amps   | ESD      | electrostatic discharge  | Inc.                 | incorporated   |
| ccw.      | counterclockwise   |          |  | ind.                 | industrial   |
| CEC       | Canadian Electrical Code   |          |  | int.                 | internal   |
| cert.     | certificate, certification, certified  |          |  | int./ext.            | internal/external                                    |
| cfh       | cubic feet per hour  |          |  | I/O                  | input/output   |
|           |  |          |  | IP                   | iron pipe  |
|           |  |          |  | ISO                  | International Organization for<br>Standardization    |
|           |  |          |  | J                    | joule  |
|           |  |          |  | JIS                  | Japanese Industry Standard                           |

|                      |  |           |   |         |   |
|----------------------|--|-----------|---|---------|---|
| k                    | kilo (1000)  | MTBO      | mean time between overhauls                         | rms     | root mean square  |
| K                    | kelvin   | mtg.      | mounting  | rnd.    | round   |
| kA                   | kiloampere   | MTU       | Motoren-und Turbinen-Union                          | ROM     | read only memory  |
| KB                   | kilobyte (2 <sup>10</sup> bytes)                     | MW        | megawatt  | rot.    | rotate, rotating  |
| KBus                 | Kohler communication protocol                        | mW        | milliwatt   | rpm     | revolutions per minute  |
| kg                   | kilogram   | μF        | microfarad  | RS      | right side  |
| kg/cm <sup>2</sup>   | kilograms per square centimeter                      | N, norm.  | normal (power source)                               | RTU     | remote terminal unit  |
| kgm                  | kilogram-meter                                       | NA        | not available, not applicable                       | RTV     | room temperature vulcanization  |
| kg/m <sup>3</sup>    | kilograms per cubic meter                            | nat. gas  | natural gas   | RW      | read/write  |
| kHz                  | kilohertz  | NBS       | National Bureau of Standards                        | SAE     | Society of Automotive Engineers                                       |
| kJ                   | kilojoule  | NC        | normally closed                                     | scfm    | standard cubic feet per minute  |
| km                   | kilometer  | NEC       | National Electrical Code                            | SCR     | silicon controlled rectifier  |
| kOhm, kΩ             | kilo-ohm   | NEMA      | National Electrical Manufacturers Association       | s, sec. | second  |
| kPa                  | kilopascal   | NFPA      | National Fire Protection Association                | SI      | <i>Systeme international d'unites</i> , International System of Units |
| kph                  | kilometers per hour                                  | Nm        | newton meter  | SI/EO   | side in/end out   |
| kV                   | kilovolt   | NO        | normally open                                       | sil.    | silencer  |
| kVA                  | kilovolt ampere                                      | no., nos. | number, numbers                                     | SN      | serial number   |
| kVAR                 | kilovolt ampere reactive                             | NPS       | National Pipe, Straight                             | SNMP    | simple network management protocol                                    |
| kW                   | kilowatt   | NPSC      | National Pipe, Straight-coupling                    | SPDT    | single-pole, double-throw   |
| kWh                  | kilowatt-hour  | NPT       | National Standard taper pipe thread per general use | SPST    | single-pole, single-throw   |
| kWm                  | kilowatt mechanical                                  | NPTF      | National Pipe, Taper-Fine                           | spec    | specification   |
| kWth                 | kilowatt-thermal                                     | NR        | not required, normal relay                          | specs   | specification(s)  |
| L                    | liter  | ns        | nanosecond  | sq.     | square  |
| LAN                  | local area network                                   | OC        | overcrank   | sq. cm  | square centimeter   |
| L x W x H            | length by width by height                            | OD        | outside diameter                                    | sq. in. | square inch   |
| lb.                  | pound, pounds  | OEM       | original equipment manufacturer                     | SS      | stainless steel   |
| lbm/ft <sup>3</sup>  | pounds mass per cubic feet                           | OF        | overfrequency                                       | std.    | standard  |
| LCB                  | line circuit breaker                                 | opt.      | option, optional                                    | stl.    | steel   |
| LCD                  | liquid crystal display                               | OS        | oversize, overspeed                                 | tach.   | tachometer  |
| ld. shd.             | load shed  | OSHA      | Occupational Safety and Health Administration       | TD      | time delay  |
| LED                  | light emitting diode                                 | OV        | overvoltage   | TDC     | top dead center   |
| Lph                  | liters per hour                                      | oz.       | ounce   | TDEC    | time delay engine cooldown  |
| Lpm                  | liters per minute                                    | p., pp.   | page, pages   | TDEN    | time delay emergency to normal  |
| LOP                  | low oil pressure                                     | PC        | personal computer                                   | TDES    | time delay engine start   |
| LP                   | liquefied petroleum                                  | PCB       | printed circuit board                               | TDNE    | time delay normal to emergency  |
| LPG                  | liquefied petroleum gas                              | pF        | picofarad   | TDOE    | time delay off to emergency   |
| LS                   | left side  | PF        | power factor  | TDON    | time delay off to normal  |
| L <sub>wa</sub>      | sound power level, A weighted                        | ph., ∅    | phase   | temp.   | temperature   |
| LWL                  | low water level                                      | PHC       | Phillips® head Crimptite® (screw)                   | term.   | terminal  |
| LWT                  | low water temperature                                | PHH       | Phillips® hex head (screw)                          | THD     | total harmonic distortion   |
| m                    | meter, milli (1/1000)                                | PHM       | pan head machine (screw)                            | TIF     | telephone influence factor  |
| M                    | mega (10 <sup>6</sup> when used with SI units), male | PLC       | programmable logic control                          | TIR     | total indicator reading   |
| m <sup>3</sup>       | cubic meter  | PMG       | permanent magnet generator                          | tol.    | tolerance   |
| m <sup>3</sup> /hr.  | cubic meters per hour                                | pot       | potentiometer, potential                            | turbo.  | turbocharger  |
| m <sup>3</sup> /min. | cubic meters per minute                              | ppm       | parts per million                                   | typ.    | typical (same in multiple locations)                                  |
| mA                   | milliampere  | PROM      | programmable read-only memory                       | UF      | underfrequency  |
| man.                 | manual   | psi       | pounds per square inch                              | UHF     | ultrahigh frequency   |
| max.                 | maximum  | psig      | pounds per square inch gauge                        | UL      | Underwriter's Laboratories, Inc.                                      |
| MB                   | megabyte (2 <sup>20</sup> bytes)                     | pt.       | pint  | UNC     | unified coarse thread (was NC)  |
| MCCB                 | molded-case circuit breaker                          | PTC       | positive temperature coefficient                    | UNF     | unified fine thread (was NF)  |
| MCM                  | one thousand circular mils                           | PTO       | power takeoff                                       | univ.   | universal   |
| meggar               | megohmmeter  | PVC       | polyvinyl chloride                                  | US      | undersize, underspeed   |
| MHz                  | megahertz  | qt.       | quart, quarts                                       | UV      | ultraviolet, undervoltage   |
| mi.                  | mile   | qty.      | quantity  | V       | volt  |
| mil                  | one one-thousandth of an inch                        | R         | replacement (emergency) power source                | VAC     | volts alternating current   |
| min.                 | minimum, minute                                      | rad.      | radiator, radius                                    | VAR     | voltampere reactive   |
| misc.                | miscellaneous  | RAM       | random access memory                                | VDC     | volts direct current  |
| MJ                   | megajoule  | RDO       | relay driver output                                 | VFD     | vacuum fluorescent display  |
| mJ                   | millijoule   | ref.      | reference   | VGA     | video graphics adapter  |
| mm                   | millimeter   | rem.      | remote  | VHF     | very high frequency   |
| mOhm, mΩ             | milliohm   | Res/Coml  | Residential/Commercial                              | W       | watt  |
| MOhm, MΩ             | megohm   | RFI       | radio frequency interference                        | WCR     | withstand and closing rating  |
| MOV                  | metal oxide varistor                                 | RH        | round head  | w/      | with  |
| MPa                  | megapascal   | RHM       | round head machine (screw)                          | w/o     | without   |
| mpg                  | miles per gallon                                     | rly.      | relay   | wt.     | weight  |
| mph                  | miles per hour                                       |           |   | xfrm    | transformer   |
| MS                   | military standard                                    |           |   |         |   |
| ms                   | millisecond  |           |   |         |   |
| m/sec.               | meters per second                                    |           |   |         |   |
| MTBF                 | mean time between failure                            |           |   |         |   |

# Notes

# Notes



**TP-6341 3/09d**

© 2004, 2006, 2007, 2008, 2009 by Kohler Co. All rights reserved.

# **KOHLER**<sup>®</sup> POWER SYSTEMS

KOHLER CO. Kohler, Wisconsin 53044  
Phone 920-565-3381, Fax 920-459-1646  
For the nearest sales/service outlet in the  
US and Canada, phone 1-800-544-2444  
KohlerPower.com

Kohler Power Systems  
Asia Pacific Headquarters  
7 Jurong Pier Road  
Singapore 619159  
Phone (65) 6264-6422, Fax (65) 6264-6455