# Installation

Residential/Commercial Generator Sets



Model: 12RES

Controller: Advanced Digital Control ADC-RES







California Proposition 65

Engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

Kohler strongly recommends that only factory-authorized distributors or dealers install and service the generator.

# **Product Identification Information**

## **Generator Set Identification Numbers**

Record the product identification numbers from the generator set nameplate(s).

Model Designation	
Specification Number	
Serial Number	

\_ \_

\_ \_

Accessory Number Ac

\_\_\_\_\_

Accessory Description

## **Engine Identification**

Record the product identification information from the engine nameplate.

Manufacturer	
Model Designatio	n
Serial Number	

#### **Controller Identification**

Record the controller description from the generator set operation manual, spec sheet, or sales invoice.

Controller Description

Product Identification	Information	. 2
Safety Precautions an	d Instructions	5
Introduction		9
Service Assistance		10
Section 1 Installation		11
1.1	Introduction	11
1.2	Lifting	11
1.3	Generator Set Inspection	12
1.4	Location and Mounting	12
	1.4.1 Exhaust Requirements	12
	1.4.2 Air Requirements	13
1.5	Power Supply	13
1.6	Fuel Requirements	14
	1.6.1 Fuel Supply	14
	1.6.2 Fuel Pipe Size	14
1.7	Fuel Conversion	15
	1.7.1 Fuel Conversion	15
1.8	Electrical Connections	17
	1.8.1 Field Connections	18
	1.8.2 Remote Start Connection	19
	1.8.3 Grounding	19
	1.8.4 Battery Charger	19
1.9	Battery	20
1.10	Accessories	21
	1.10.1 Common Fault and Auxiliary Run Relay Board	21
	1.10.2 Carburetor Heater	23
	Prestart Installation Check	24
	Startup Notification	24
1.13	Controller Configuration	24
	1.13.1 System Parameters	24
	1.13.2 Application Code Version	25
1.14	Voltage and Frequency Adjustments	27
	1.14.1 Voltage Adjustment	27
	1.14.2 Frequency Adjustment	28
Section 2 Dimension	Drawings and Wiring Diagrams	33
Appendix A Abbrevia	tions	39

# Notes

IMPORTANT SAFETY INSTRUCTIONS. Electromechanical equipment, including generator sets, transfer switches, switchgear, and accessories, can cause bodily harm and pose life-threatening danger when improperly installed, operated, or maintained. To prevent accidents be aware of potential dangers and act safely. Read and follow all safety precautions and instructions. SAVE THESE INSTRUCTIONS.

This manual has several types of safety precautions and instructions: Danger, Warning, Caution, and Notice.



Danger indicates the presence of a hazard that *will cause severe personal injury, death*, or *substantial property damage*.



## WARNING

Warning indicates the presence of a hazard that *can cause severe personal injury, death, or substantial property damage*.



Caution indicates the presence of a hazard that *will* or *can cause minor personal injury* or *property damage*.

#### NOTICE

Notice communicates installation, operation, or maintenance information that is safety related but not hazard related.

Safety decals affixed to the equipment in prominent places alert the operator or service technician to potential hazards and explain how to act safely. The decals are shown throughout this publication to improve operator recognition. Replace missing or damaged decals.

# **Accidental Starting**



Accidental starting. Can cause severe injury or death.

Disconnect the battery cables before working on the generator set. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery.


Disabling the generator set. Accidental starting can cause severe injury or death. Before working on the generator set or connected equipment, disable the generator set as follows: (1) Move the generator set master switch to the OFF position. (2) Disconnect the power to the battery charger. (3) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent starting of the generator set by an automatic transfer switch, remote start/stop switch, or engine start command from a remote computer.

# Battery



Sulfuric acid in batteries. Can cause severe injury or death.

Wear protective goggles and clothing. Battery acid may cause blindness and burn skin.

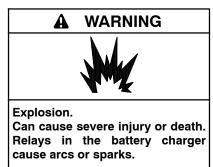


Locate the battery in a well-ventilated area. Isolate the battery charger from explosive fumes.

Battery electrolyte is a diluted sulfuric acid. Battery acid can cause severe injury or death. Battery acid can cause blindness and burn skin. Always wear splashproof safety goggles, rubber gloves, and boots when servicing the battery. Do not open a sealed battery or mutilate the battery case. If battery acid splashes in the eyes or on the skin, immediately flush the affected area for 15 minutes with large quantities of clean water. Seek immediate medical aid in the case of eye contact. Never add acid to a battery after placing the battery in service, as this may result in hazardous spattering of battery acid.

Battery acid cleanup. Battery acid can cause severe injury or death. Battery acid is electrically conductive and corrosive. Add 500 g (1 lb.) of bicarbonate of soda (baking soda) to a container with 4 L (1 gal.) of water and mix the neutralizing solution. Pour the neutralizing solution on the spilled battery acid and continue to add the neutralizing solution to the spilled battery acid until all evidence of a chemical reaction (foaming) has ceased. Flush the resulting liquid with water and dry the area. Battery gases. Explosion can cause severe injury or death. Battery gases can cause an explosion. Do not smoke or permit flames or sparks to occur near a battery at any time, particularly when it is charging. Do not dispose of a battery in a fire. To prevent burns and sparks that could cause an explosion, avoid touching the battery terminals with tools or other metal objects. Remove all iewelry before servicing the equipment. Discharge static electricity from your body before touching batteries by first touching a grounded metal surface away from the battery. To avoid sparks, do not disturb the battery charger connections while the battery is charging. Always turn the battery charger off before disconnecting the battery connections. Ventilate the compartments containing batteries to prevent accumulation of explosive gases.

Battery short circuits. Explosion can cause severe injury or death. Short circuits can cause bodily injury and/or equipment damage. Disconnect the battery before generator set installation or maintenance. Remove all jewelry before servicing the equipment. Use tools with insulated handles. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery. Never connect the negative (-) battery cable to the positive (+) connection terminal of the starter solenoid. Do not test the battery condition by shorting the terminals together.

# Engine Backfire/Flash Fire

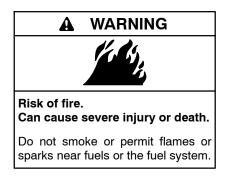


Servicing the air cleaner. A sudden backfire can cause severe injury or death. Do not operate the generator set with the air cleaner removed.

Servicing the fuel system. A flash fire can cause severe injury or death. Do not smoke or permit flames or sparks near the carburetor, fuel line, fuel filter, fuel pump, or other potential sources of spilled fuels or fuel vapors. Catch fuels in an approved container when removing the fuel line or carburetor.

Combustible materials. A fire can cause severe injury or death. Generator set engine fuels and fuel vapors are flammable and explosive. Handle these materials carefully to minimize the risk of fire or explosion. Equip the compartment or nearby area with a fully charged fire extinguisher. Select a fire extinguisher rated ABC or electrical fires or BC for as recommended by the local fire code or an authorized agency. Train all personnel on fire extinguisher operation and fire prevention procedures.

# Exhaust System

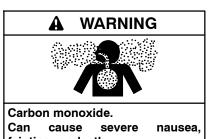

fainting, or death. The exhaust system must be leakproof and routinely inspected.

#### Generator set operation. Carbon monoxide can cause severe nausea, fainting, or death. Carbon monoxide

fainting, or death. Carbon monoxide is an odorless, colorless, tasteless, nonirritating gas that can cause death if inhaled for even a short time. Avoid breathing exhaust fumes when working on or near the generator set. Never operate the generator set inside a building. Never operate the generator set where exhaust gas could seep inside or be drawn into a potentially occupied building through windows, air intake vents, or other openings.

Carbon monoxide detectors. Carbon monoxide can cause severe nausea, fainting, or death. Install carbon monoxide detectors on each level of any building adjacent to the generator set. Locate the detectors to adequately warn the building's occupants of the presence of carbon Keep the detectors monoxide. operational at all times. Periodically test and replace the carbon monoxide detectors according to the manufacturer's instructions.

Carbon monoxide symptoms. Carbon monoxide can cause severe nausea, fainting, or death. Carbon monoxide is a poisonous gas present in exhaust gases. Carbon monoxide is an odorless, colorless, tasteless, nonirritating gas that can cause death if inhaled for even a short time. Carbon monoxide poisoning symptoms include but are not limited to the following:

- Light-headedness, dizziness
- Physical fatigue, weakness in joints and muscles
- Sleepiness, mental fatigue, inability to concentrate or speak clearly, blurred visit
- or speak clearly, blurred visionStomachache, vomiting, nausea

• Stomachache, vorming, hausea If experiencing any of these symptoms and carbon monoxide poisoning is possible, seek fresh air immediately and remain active. Do not sit, lie down, or fall asleep. Alert others to the possibility of carbon monoxide poisoning. Seek medical attention if the condition of affected persons does not improve within minutes of breathing fresh air.

# **Hazardous Noise**



Explosive fuel vapors. Can cause severe injury or death.

Use extreme care when handling, storing, and using fuels.

The fuel system. Explosive fuel vapors can cause severe injury or death. Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the generator set in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming generator set operation.

Explosive fuel Gas fuel leaks. vapors can cause severe injury or death. Fuel leakage can cause an explosion. Check the LPG vapor or natural gas fuel system for leakage by using a soap and water solution with the fuel system test pressurized to 6-8 ounces per square inch (10-14 inches water column). Do not use a soap solution containing either ammonia or chlorine because both prevent bubble formation. A successful test depends on the ability of the solution to bubble.




Hazardous noise. Can cause hearing loss.

Never operate the generator set without a muffler or with a faulty exhaust system.

Engine noise. Hazardous noise can cause hearing loss. Generator sets not equipped with sound enclosures can produce noise levels greater than 105 dBA. Prolonged exposure to noise levels greater than 85 dBA can cause permanent hearing loss. Wear hearing protection when near an operating generator set.

# Hazardous Voltage/ Moving Parts

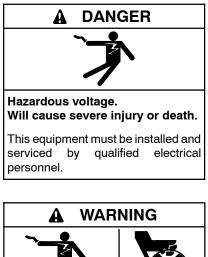



Hazardous voltage. Moving parts. Can cause severe injury or death.


Operate the generator set only when all guards and electrical enclosures are in place.



A

Hazardous voltage. Backfeed to the utility system can cause property damage, severe injury, or death.

If the generator set is used for standby power, install an automatic transfer switch to prevent inadvertent interconnection of standby and normal sources of supply.

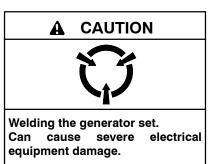

Never weld components of the generator set without first disconnecting the battery, controller wiring harness, and engine electronic control module (ECM).

Grounding electrical equipment. Hazardous voltage can cause severe injury or death. Electrocution is possible whenever electricity is present. Ensure you comply with all applicable codes and standards. Electrically ground the generator set, transfer switch, and related equipment and electrical circuits. Turn off the main circuit breakers of all power sources before servicing the equipment. Never contact electrical leads or appliances when standing in water or on wet ground because these conditions increase the risk of electrocution. Welding on the generator set. Can cause severe electrical equipment damage. Before welding on the generator set perform the following steps: (1) Remove the battery cables, negative (-) lead first. (2) Disconnect all engine electronic control module (ECM) connectors. (3) Disconnect all generator set controller and voltage regulator circuit board connectors. (4) Disconnect the engine batterycharaina alternator connections. (5) Attach the weld ground connection close to the weld location.

Connecting the battery and the battery charger. Hazardous voltage can cause severe injury or death. Reconnect the battery correctly, positive to positive and negative to negative, to avoid electrical shock and damage to the battery charger and battery(ies). Have a qualified electrician install the battery(ies).

Short circuits. Hazardous voltage/current can cause severe injury or death. Short circuits can cause bodily injury and/or equipment damage. Do not contact electrical connections with tools or jewelry while making adjustments or repairs. Remove all jewelry before servicing the equipment.

Electrical backfeed to the utility. Hazardous backfeed voltage can cause severe injury or death. Install a transfer switch in standby power installations to prevent the connection of standby and other sources of power. Electrical backfeed into a utility electrical system can cause severe injury or death to utility personnel working on power lines.





Airborne particles. Can cause severe injury or blindness.

Wear protective goggles and clothing when using power tools, hand tools, or compressed air.

# **Heavy Equipment**




Unbalanced weight. Improper lifting can cause severe injury or death and equipment damage.

Do not use lifting eyes.

Lift the generator set using lifting bars inserted through the lifting holes on the skid.

# Hot Parts

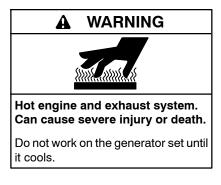

Servicing the exhaust system. Hot parts can cause severe injury or death. Do not touch hot engine parts. The engine and exhaust system components become extremely hot during operation.

Servicing the engine heater. Hot parts can cause minor personal injury or property damage. Install the heater before connecting it to power. Operating the heater before installation can cause burns and component damage. Disconnect power to the heater and allow it to cool before servicing the heater or nearby parts.

## Notice

#### NOTICE

**Canadian installations only.** For standby service connect the output of the generator set to a suitably rated transfer switch in accordance with Canadian Electrical Code, Part 1.

This manual provides installation instructions for the Model 12RES generator set.

#### Kohler strongly recommends that only factoryauthorized distributors or dealers install and service the generator.

Have an authorized distributor/dealer install the generator set outdoors according to the instructions in this manual. The generator set installation must comply with the National Electrical Code® (NEC) and local code requirements. Do not install this generator set indoors.

Information in this publication represents data available at the time of print. Kohler Co. reserves the right to change this publication and the products represented without notice and without any obligation or liability whatsoever.

Read this manual and carefully follow all procedures and safety precautions to ensure proper equipment operation and to avoid bodily injury. Read and follow the Safety Precautions and Instructions section at the beginning of this manual.

The generator set is shown in Figure 1. See the dimension drawing in Section 2 for generator set component locations.



Figure 1 Model 12RES Generator Set

National Electrical Code is a registered trademark of the National Fire Protection Association, Inc.

# List of Related Literature

Figure 2 identifies related literature available for the generator sets covered in this manual. Only trained and qualified personnel should install or service the generator set.

Literature Type	Part Number
Specification Sheet, 12RES	G4-248
Operation Manual, Generator Set	TP-6515
Service Manual, Generator Set	TP-6196
Service Manual, Engine	24 690 06
Parts Catalog	TP-5868
Operation Manual, OnCue® for ADC	TP-6616

Figure 2 Related Literature

# **Startup Notification**

Complete the startup and installation checklists supplied with the startup notification form. Complete and sign the startup notification form and register the unit using the Kohler online Warranty Processing System. For professional advice on generator set power requirements and conscientious service, please contact your nearest Kohler distributor or dealer.

- Consult the Yellow Pages under the heading Generators—Electric.
- Visit the Kohler Power Systems website at KOHLERPower.com.
- Look at the labels and decals on your Kohler product or review the appropriate literature or documents included with the product.
- Call toll free in the US and Canada 1-800-544-2444.
- Outside the US and Canada, call the nearest regional office.

# Headquarters Europe, Middle East, Africa (EMEA)

Kohler Power Systems Netherlands B.V. Kristallaan 1 4761 ZC Zevenbergen The Netherlands Phone: (31) 168 331630 Fax: (31) 168 331631

#### **Asia Pacific**

Power Systems Asia Pacific Regional Office Singapore, Republic of Singapore Phone: (65) 6264-6422 Fax: (65) 6264-6455

#### China

North China Regional Office, Beijing Phone: (86) 10 6518 7950 (86) 10 6518 7951

- (86) 10 6518 7952
- Fax: (86) 10 6518 7955

East China Regional Office, Shanghai Phone: (86) 21 6288 0500 Fax: (86) 21 6288 0550

#### India, Bangladesh, Sri Lanka

India Regional Office Bangalore, India Phone: (91) 80 3366208 (91) 80 3366231 Fax: (91) 80 3315972


#### Japan, Korea

North Asia Regional Office Tokyo, Japan Phone: (813) 3440-4515 Fax: (813) 3440-2727

#### Latin America

Latin America Regional Office Lakeland, Florida, USA Phone: (863) 619-7568 Fax: (863) 701-7131

## 1.1 Introduction

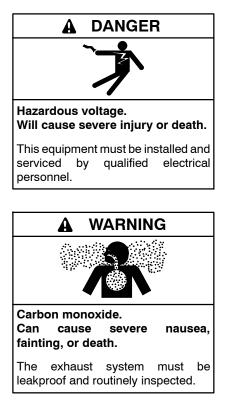

Generator set operation. Carbon monoxide can cause severe nausea, fainting, or death. Carbon monoxide is an odorless, colorless, tasteless, nonirritating gas that can cause death if inhaled for even a short time. Avoid breathing exhaust fumes when working on or near the generator set. Never operate the generator set inside a building. Never operate the generator set where exhaust gas could seep inside or be drawn into a potentially occupied building through windows, air intake vents, or other openings.

Carbon monoxide detectors. Carbon monoxide can cause severe nausea, fainting, or death. Install carbon monoxide detectors on each level of any building adjacent to the generator set. Locate the detectors to adequately warn the building's occupants of the presence of carbon monoxide. Keep the detectors operational at all times. Periodically test and replace the carbon monoxide detectors according to the manufacturer's instructions.

Have the generator set installed by an authorized Kohler distributor/dealer. For all locations, ensure that the installation complies with applicable national and local codes. In the United States, the installation must comply with the National Electrical Code (NEC) and all applicable state and local codes. For Canadian installations, refer to the Canadian Electrical Code (CEC).

The generator set must be installed outdoors. The exhaust systems on enclosed units are designed for outdoor installation only.


- Note: DO NOT install these generator sets inside a building.
- **Note:** Install carbon monoxide (CO) detector(s) on each level of any building adjacent to a generator set. Locate the detectors to adequately warn the building's occupants of the presence of carbon monoxide.

Obtain a building permit and contact your local utility companies to mark the locations of underground pipes and cables.

Read and follow the safety precautions in this manual and observe the decals on the equipment. Refer to the diagrams and drawings in this manual for dimensions and electrical connections during the installation procedure. Read the entire installation procedure and obtain the accessories and tools needed before beginning installation. Perform the steps in the order shown.

To install optional accessories, follow the instructions provided with each kit.

# 1.2 Lifting

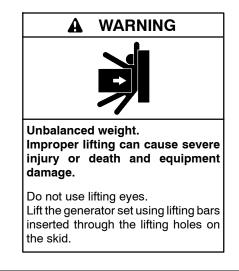

Model	Weight, kg (lb.)	
12RES	186 (410)	

Figure 1-1 Approximate Weight

The approximate generator set weight is shown in Figure 1-1. Use lifting bars inserted through the holes in the skid to lift the unit. See the dimension drawings in Section 2 for lifting hole locations.

# **1.3 Generator Set Inspection**

Complete a thorough inspection of the generator set. Check for the following:

- 1. Inspect the generator set for loose or damaged parts or wires. Repair or tighten any loose parts before installation.
- 2. Check the engine oil. Fill, if necessary, with the recommended viscosity and grade of oil. Use synthetic oil, API (American Petroleum Institute) Service Class SG or higher. See TP-6515, Operation Manual, for additional information.

# 1.4 Location and Mounting

Install the generator set outdoors near the incoming gas service. The generator set location must allow easy access for maintenance and service. The required distance from a structure is dependent on state or province and local codes. See the dimension drawing in Section 2 for the minimum clearance from structures and non-combustible materials.

Locate the generator set so that the hot exhaust does not blow on plants or other combustible materials. No plants, shrubs, or other combustible materials are allowed within 1.2 m (4 ft.) of the exhaust end of the generator set.

Do not install the generator set where exhaust gas could accumulate and seep inside or be drawn into a potentially occupied building. Furnace and other similar intakes must be at least 3 m (10 ft.) from the exhaust end of the generator set.


#### Notice

**DO NOT** locate the generator set near patios, decks, play areas, or animal shelters. Keep items such as lawn furniture, toys, sports equipment, and all combustible materials away from the generator set exhaust outlet.

Remind family members, children, and visitors to use caution near the generator set. Generator sets connected to automatic transfer switches start automatically during exercise periods and power outages. Some generator set components become hot when the generator set is running and remain hot for a time after the generator set shuts down. The generator set is shipped on a plastic mounting pad. Prepare a flat, level mounting area covered with a weed barrier and gravel or a concrete pad as shown in the generator set clearance drawing. Set the plastic mounting pad directly on the gravel or concrete. Do not install the mounting pad directly on grass.

See the dimension drawings in Section 2 for special mounting instructions for high wind (150 MPH) areas.

## 1.4.1 Exhaust Requirements

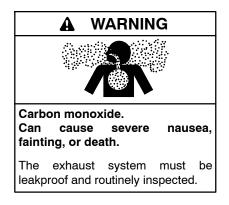

Generator set operation. Carbon monoxide can cause severe nausea, fainting, or death. Carbon monoxide is an odorless, colorless, tasteless, nonirritating gas that can cause death if inhaled for even a short time. Avoid breathing exhaust fumes when working on or near the generator set. Never operate the generator set inside a building. Never operate the generator set where exhaust gas could seep inside or be drawn into a potentially occupied building through windows, air intake vents, or other openings.

The exhaust system is designed for generator sets installed outdoors. Do not install this generator set indoors.

Figure 1-2 gives the exhaust flow and temperature at rated load. The engine exhaust mixes with the generator set cooling air at the exhaust end of the enclosure. Mount the generator set so that the hot exhaust does not blow on plants or other combustible materials. Maintain the clearances shown in the dimension drawings in Section 2.

Exhaust System	60 Hz	50 Hz
Exhaust flow at rated kW, m <sup>3</sup> /min. (cfm)	3.8 (135)	3.2 (113)
Exhaust gas exiting the enclosure at rated kW, °C (°F)	216 (420)	

Figure 1-2 Exhaust Flow and Temperature

### 1.4.2 Air Requirements

The generator set requires correct air flow for cooling and combustion. The inlet and outlet openings in the sound enclosure provide the cooling and combustion air. Figure 1-3 shows the locations of the cooling air intake and exhaust vents. Inspect the air inlet and outlet openings inside and outside the housing to ensure that the air flow is not blocked.

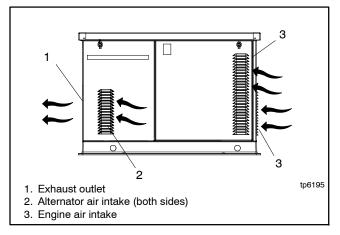


Figure 1-3 Cooling Air Intake and Exhaust, Typical

Air Requirements, m <sup>3</sup> /min. (cfm)				
Model     Hz     Cooling     Combustion     Total       Inlet Air     Air     Air     Inlet Air				
12BES	60	26.9 (950)	1.1 (39.2)	28.0 (990)
12RES	50	22.4 (790)	0.9 (32.6)	23.4 (825)

Figure 1-4 Air Requirements

# 1.5 Power Supply

Power must be supplied from a source that is GFCI protected to the generator set location for the battery charger and the optional accessories shown in Figure 1-5.

Connect power from a circuit on the essential loads panel to the utility power connection points on the terminal block. The circuit must be backed up by the generator set. See Section 1.8 and the wiring diagrams in Section 2 for connection details. See Figure 1-5 for the power requirements for the battery charger and accessories.

	Power Requirement, Max.		
Equipment	Watts	Amps	Volts
Battery charger (standard)	192	1.6	
Carburetor heater (optional)	37	0.33	120
Battery heater (optional)	110	0.92	

Figure 1-5 Power Requirements

# 1.6 Fuel Requirements

The generator set operates using natural gas or LPG fuel. The generator set is EPA-certified for both natural gas and LPG fuels.

The fuel system installation must comply with applicable national, state, and local codes.



Use extreme care when handling, storing, and using fuels.

**Gas fuel leaks. Explosive fuel vapors can cause severe injury or death.** Fuel leakage can cause an explosion. Check the LPG vapor or natural gas fuel system for leakage by using a soap and water solution with the fuel system test pressurized to 6–8 ounces per square inch (10–14 inches water column). Do not use a soap solution containing either ammonia or chlorine because both prevent bubble formation. A successful test depends on the ability of the solution to bubble. The fuel system. Explosive fuel vapors can cause severe injury or death. Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the generator set in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming generator set operation.

#### 1.6.1 Fuel Supply

Because of variable climates and geographical considerations, contact the local fuel supplier for fuel system planning and installation. Figure 1-6 lists the recommended fuel ratings and other fuel supply information for natural gas and LPG fuels.


Fuel Type	Natural Gas	LPG
Fuel supply inlet	1/2 NPT	1/2 NPT
Fuel supply pressure, kPa (in. H <sub>2</sub> O)	0.9-2.7 (3.5-11)	1.7-2.7 (7-11)
Fuel flow rate, Btu/hr.	193000	203000
Nominal Fuel Rating, Btu/ft. <sup>3</sup>	1000	2500

#### Figure 1-6 Fuel Supply

Verify that the output pressure from the primary gas utility (or LPG tank) pressure regulator meets the specifications in Figure 1-6 and that the utility gas meter flow rate is sufficient to supply the generator set at rated load plus all other gas-consuming appliances. See Figure 1-7 for fuel consumption. Contact the fuel supplier for flow rate information or a gas meter upgrade.

The dimension drawings in Section 2 show the location of the fuel inlet connection. Use flexible sections to prevent fuel line breakage caused by vibration. Hold the fuel solenoid valve with a wrench when tightening the fuel connections. Protect all fuel lines from machinery or equipment contact, adverse weather conditions, and environmental damage.

 Fuel Consumption, at % load, m <sup>3</sup> /hr. (cfh)	60 Hz	50 Hz		
Natural Gas, m <sup>3</sup> /hr. (cfh)				
100%	5.4 (193)	4.8 (173)		
75%	4.7 (163)	4.2 (148)		
50%	3.5 (124)	3.1 (108)		
25%	2.6 (93)	2.4 (84)		
LPG, m <sup>3</sup> /hr. (cfh)	•			
100%	2.3 (81)	2.1 (74)		
75%	2.1 (75)	1.9 (68)		
50%	1.8 (60)	1.5 (53)		
25%	1.2 (45)	1.1 (40)		
LPG conversion factors: 8.58 ft. <sup>3</sup> = 1 lb. 0.535 m <sup>3</sup> = 1 kg 36.39 ft. <sup>3</sup> = 1 gal.				
Nominal fuel rating: Natural gas: 37 MJ/m <sup>3</sup> (1000 Btu/ft. <sup>3</sup> ) LPG: 93 MJ/m <sup>3</sup> (2500 Btu/ft. <sup>3</sup> )				



## 1.6.2 Fuel Pipe Size

Ensure that the natural gas pipe size and length meet the specifications in Figure 1-8. Measure the pipe length from the primary gas pressure regulator to the pipe connection on the generator set fuel inlet. Add 2.4 m (8 ft.) to the measured length for each 90 degree elbow. Compare the total pipe length with the chart in Figure 1-8 to find the required pipe size.

Contact the local LPG provider for LPG installation information.

Minimum Gas Pipe Size Recommendation, in. NPT					
	_ength, (ft.)	Natural Gas (193,000 Btu/hr.)	LPG (203,000 Btu/hr.)		
8 m	(25 ft.)	3/4	3/4		
15 m	(50 ft.)	1	3/4		
30 m	(100 ft.)	1	1		
46 m	(150 ft.)	1 1/4	1		
61 m	(200 ft.)	1 1/4	1		

Figure 1-8 Fuel Pipe Size

# 1.7 Fuel Conversion

The multi-fuel system allows conversion from natural gas to LPG (or vice-versa) in the field while maintaining emissions-standard compliance. A Kohler authorized distributor/dealer can convert the fuel system.

#### **Rating Change**

Converting the fuel will change the generator set rating. See the generator set specification sheet for ratings with natural gas and LP. Order a new nameplate with the updated rating and fuel information from a Kohler authorized distributor/dealer, if necessary. Provide the following information from the original nameplate:

- Model Number
- kVA
- Spec Number
- AmpsVolts
- Serial NumberFuel (original and new)
- kW

• Hz

Attach the new nameplate over the old one. Do NOT cover the UL listing information on the old nameplate.



Can cause severe injury or death.

Disconnect the battery cables before working on the generator set. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery.

**Disabling the generator set.** Accidental starting can cause severe injury or death. Before working on the generator set or connected equipment, disable the generator set as follows: (1) Move the generator set master switch to the OFF position. (2) Disconnect the power to the battery charger. (3) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent starting of the generator set by an automatic transfer switch, remote start/stop switch, or engine start command from a remote computer.



Use extreme care when handling, storing, and using fuels.

#### 1.7.1 Fuel Conversion

For natural gas and LPG fuel, orifice fittings are used in the fuel line. See Figure 1-9. The natural gas orifice fitting is silver in color and stamped NG. The LPG fitting is gold in color and stamped LPG. The fittings are threaded. A straight-blade screwdriver is required to remove and replace the fittings.

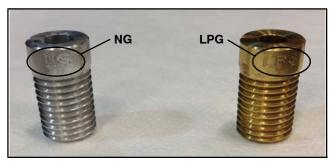


Figure 1-9 NG and LPG Fuel Orifice Fittings

The unit is typically shipped set up for natural gas, with the LPG fitting tied to the fuel regulator. To convert to LPG, remove the NG fitting and install the LPG fitting as described below. See Figure 1-10 for the fuel system component locations.

#### Procedure to Convert from NG to LPG

- 1. Place the generator set master switch in the OFF/RESET position.
- 2. Disconnect the utility power to the generator.
- 3. Disconnect the generator set engine starting battery, negative (-) lead first.
- 4. Turn off and disconnect the fuel supply.

- 5. Remove the hose clamp and fuel hose from the hose fitting. See Figure 1-10.
- 6. Use a straight-blade screwdriver to remove the NG orifice from the hose fitting. See Figure 1-11.
- Insert the LPG orifice into the hose fitting. Use a straight-blade screwdriver to tighten the fitting until it is snug.
- 8. Slide the hose onto the hose fitting and secure it with the clamp.
- 9. Disconnect ignition timing leads 65 and N5 for LPG. The ignition timing leads are located near the fuel solenoid valve. See Figure 1-10.
  - Note: Do not disconnect the leads to the fuel solenoid valve.

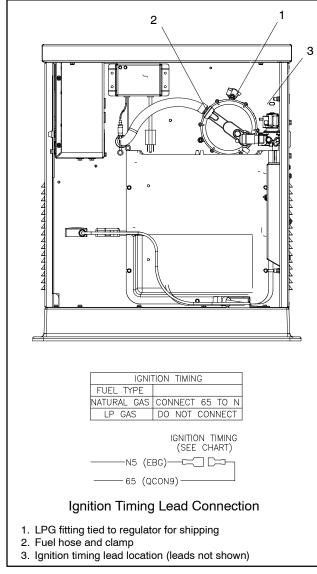


Figure 1-10 Fuel System, As Shipped

- 10. Connect and turn on the new fuel supply.
- 11. Reconnect the generator set engine starting battery leads, negative (-) lead last.
- 12. Reconnect the utility power to the generator.
- 13. Start the generator set by moving the master switch to the RUN position.
- 14. Check for leaks using a gas leak detector.
- 15. Run the generator set and check the operation.
- 16. Move the generator set master switch to the OFF/RESET position to shut down the generator set.

#### **Conversion from LPG to Natural Gas**

To convert from LPG to natural gas, repeat the steps above, removing the LPG fuel orifice and installing the NG fitting. Connect ignition timing leads 65 and N5 together for natural gas.


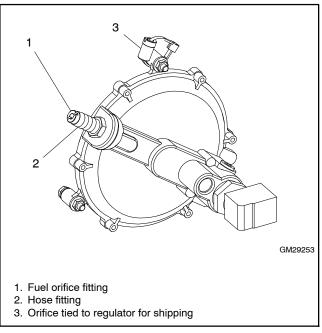


Figure 1-11 Fuel Orifice Fitting Installation

# **1.8 Electrical Connections**

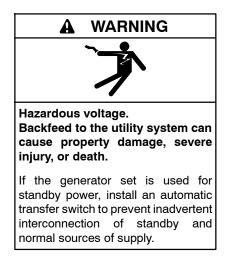

Grounding electrical equipment. Hazardous voltage can cause severe injury or death. Electrocution is possible whenever electricity is present. Ensure you comply with all applicable codes and standards. Electrically ground the generator set, transfer switch, and related equipment and electrical circuits. Turn off the main circuit breakers of all power sources before servicing the equipment. Never contact electrical leads or appliances when standing in water or on wet ground because these conditions increase the risk of electrocution.

Electrical backfeed to the utility. Hazardous backfeed voltage can cause severe injury or death. Install a transfer switch in standby power installations to prevent the connection of standby and other sources of power. Electrical backfeed into a utility electrical system can cause severe injury or death to utility personnel working on power lines.

#### NOTICE

**Canadian installations only.** For standby service connect the output of the generator set to a suitably rated transfer switch in accordance with Canadian Electrical Code, Part 1.

Have a Kohler authorized distributor/dealer or a licensed electrician make the following electrical connections. The electrical installation must comply with the National Electrical Code (NEC) and all applicable local codes. Canadian installations must comply with the Canadian Electrical Code (CEC) and applicable local codes.

Ground the generator set according to applicable codes. See Section 1.8.3.

For customer-supplied wiring, select the wire temperature rating in Figure 1-12 based upon the following criteria:

- Select row 1, 2, 3, or 4 if the circuit rating is 110 amperes or less or requires #1 AWG (42.4 mm<sup>2</sup>) or smaller conductors.
- Select row 3 or 4 if the circuit rating is greater than 110 amperes or requires #1 AWG (42.4 mm<sup>2</sup>) or larger conductors.

Row	Temp. Rating	Copper (Cu) Only	Cu/Aluminum (Al) Combinations	Al Only
1	60°C (140°F) or 75°C (167°F)	Use No. * AWG, 60°C wire or use No. * AWG, 75°C wire	Use 60°C wire, either No. * AWG Cu, or No. * AWG Al or use 75°C wire, either No. * AWG Cu or No. * AWG Al	Use 60°C wire, No. * AWG or use 75°C wire, No. * AWG
2	60°C (140°F)	Use No. * AWG, 60°C wire	Use 60°C wire, either No. * AWG Cu or No. * AWG Al	Use 60°C wire, No. * AWG
3	75°C (167°F)	Use No. *† AWG, 75°C wire	Use 75°C wire, either No. *† AWG Cu or No. *† AWG Al	Use 75°C wire, No.*† AWG
4	90°C (194°F)	Use No. *† AWG, 90°C wire	Use 90°C wire, either No. *† AWG Cu or No. *† AWG Al	Use 90°C wire, No.*† AWG

\* The wire size for 60°C (140°F) wire is not required to be included in the marking. If included, the wire size is based on ampacities for the wire given in Table 310-16 of the National Electrical Code<sup>®</sup>, in ANSI/NFPA 70, and on 115% of the maximum current that the circuit carries under rated conditions. The National Electrical Code<sup>®</sup> is a registered trademark of the National Fire Protection Association, Inc.

† Use the larger of the following conductors: the same size conductor as that used for the temperature test or one selected using the guidelines in the preceding footnote.

Figure 1-12 Terminal Markings for Various Temperature Ratings and Conductors

## 1.8.1 Field Connections

The generator set is equipped with a field-connection terminal block located below the fuel inlet. Leads have been factory-installed from the junction box to the terminal block for easy field wiring. Refer to the decal near the terminal block for connections. Also see Section 2, Wiring Diagrams.

Refer to the decal below the terminal block and the transfer switch specifications for the cable size range for each connection. Route leads through flexible conduit. Use separate conduit for AC wiring and low-voltage engine start leads. Ensure that the leads and conduit do not interfere with the operation of the generator set or obstruct the service areas.

#### **Field Connections to the Terminal Block**

- 1. Remove the cover from the electrical connection access area. See Figure 1-13.
- 2. Drill holes for conduit fittings:
  - a. See Figure 1-13 for the electrical inlet location. Remove the cover from the electrical inlet area.
  - Drill holes in the cover for the conduit fittings and replace the cover. Use separate conduit for AC wiring and low-voltage engine start leads.
  - c. Feed the cables through the openings.

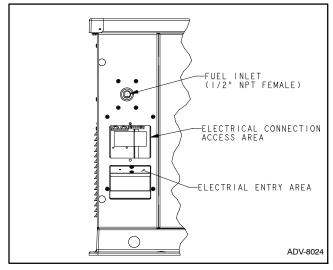


Figure 1-13 Electrical Connection Area

- 3. See Figure 1-14. Connect the leads from the transfer switch emergency source lugs to the L1 and L2 connections on the generator set terminal block.
- 4. Connect the neutral (L0) and ground (GRD) leads from the ATS and the main panel to the corresponding connection points on the terminal block. See Section 1.8.3, Grounding.
- 5. Connect 120 VAC utility power to the terminals marked Utility Power. Power to this circuit must be backed-up by the generator set. See Section 1.5 for more information about the utility power requirement.
- 6. Connect the engine start leads from the automatic transfer switch or remote start switch to terminals 3 and 4 on the terminal block. See Section 1.8.2.
- 7. Replace the cover over the electrical connection access area. See Figure 1-13.

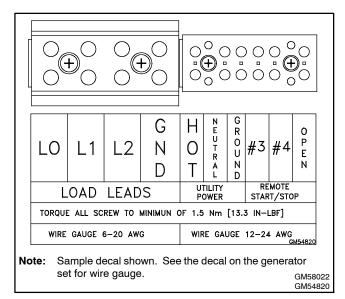


Figure 1-14 Field-Connection Terminal Block, typical

#### 1.8.2 Remote Start Connection

Connect terminals 3 and 4 to the automatic transfer switch's engine start terminals or to an optional remote start/stop switch. Route the engine start leads through separate conduit from the AC power and load leads.

#### 1.8.3 Grounding

Ground the generator set. The grounding method must comply with NEC and local codes. Connect the grounding cable to the generator set ground lug, terminal GND inside the controller compartment.

Generator sets are shipped with the generator neutral bonded (connected) to the generator ground in the junction box. The requirement for having a bonded (grounded) or ungrounded neutral is determined by the type of installation. At installation, the neutral can be grounded at the generator set or lifted from the ground stud and isolated if the installation requires an ungrounded neutral connection at the generator. The generator set will operate properly with the neutral either bonded to ground or isolated from ground at the generator.

Various regulations and site configurations including the National Electrical Code (NEC), local codes, and the type of transfer switch used in the application determine the grounding of the neutral at the generator. NEC Section 250 is one example that has a very good explanation of the neutral grounding requirements for generators.

#### 1.8.4 Battery Charger

A battery charger is factory-installed in the battery compartment to keep the starting battery fully charged. The battery charger's DC leads are factory-connected to the battery. Supply power to the generator set for the battery charger and carburetor heater as described in Sections 1.5 and 1.8.1.

Plug the battery charger's power cord into the receptacle on the bottom of the controller junction box.

Refer to the generator set operation manual for battery charger operation information.


## 1.9 Battery

#### A WARNING



Sulfuric acid in batteries. Can cause severe injury or death.

Wear protective goggles and clothing. Battery acid may cause blindness and burn skin.

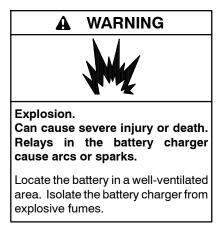


Battery electrolyte is a diluted sulfuric acid. Battery acid can cause severe injury or death. Battery acid can cause blindness and burn skin. Always wear splashproof safety goggles, rubber gloves, and boots when servicing the battery. Do not open a sealed battery or mutilate the battery case. If battery acid splashes in the eyes or on the skin, immediately flush the affected area for 15 minutes with large quantities of clean water. Seek immediate medical aid in the case of eye contact. Never add acid to a battery after placing the battery in service, as this may result in hazardous spattering of battery acid.

Battery acid cleanup. Battery acid can cause severe injury or death. Battery acid is electrically conductive and corrosive. Add 500 g (1 lb.) of bicarbonate of soda (baking soda) to a container with 4 L (1 gal.) of water and mix the neutralizing solution. Pour the neutralizing solution on the spilled battery acid and continue to add the neutralizing solution to the spilled battery acid until all evidence of a chemical reaction (foaming) has ceased. Flush the resulting liquid with water and dry the area.

Battery gases. Explosion can cause severe injury or death. Battery gases can cause an explosion. Do not smoke or permit flames or sparks to occur near a battery at any time, particularly when it is charging. Do not dispose of a battery in a fire. To prevent burns and sparks that could cause an explosion, avoid touching the battery terminals with tools or other metal objects. Remove all jewelry before servicing the equipment. Discharge static electricity from your body before touching batteries by first touching a grounded metal surface away from the battery. To avoid sparks, do not disturb the battery charger connections while the battery is charging. Always turn the battery charger off before disconnecting the battery connections. Ventilate the compartments containing batteries to prevent accumulation of explosive gases.

**Battery short circuits. Explosion can cause severe injury or death.** Short circuits can cause bodily injury and/or equipment damage. Disconnect the battery before generator set installation or maintenance. Remove all jewelry before servicing the equipment. Use tools with insulated handles. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery. Never connect the negative (-) battery cable to the positive (+) connection terminal of the starter solenoid. Do not test the battery condition by shorting the terminals together.

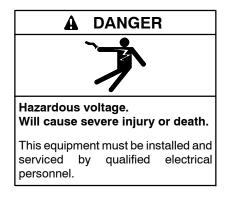

Connecting the battery and the battery charger. Hazardous voltage can cause severe injury or death. Reconnect the battery correctly, positive to positive and negative to negative, to avoid electrical shock and damage to the battery charger and battery(ies). Have a qualified electrician install the battery(ies).

Use a 12-volt group 26 battery with a minimum rating of 500 cold cranking amps at  $0^{\circ}$ F. The generator set uses a negative ground with a 12-volt engine electrical system. See Figure 1-15 for battery connections. Make sure that the battery is correctly connected and the terminals are tight.

**Note:** The generator set will not start and circuit board damage may occur if the battery is connected in reverse.


Figure 1-16 shows the location of the engine starting battery. Standard battery cables provide easy


connection to the battery. Use the following procedure to install and connect the battery.

#### **Battery Installation Procedure**

- 1. Ensure that the starting battery is fully charged before placing the battery in service.
- 2. Clean the battery posts and/or adapters if necessary.
- 3. Install the battery post adapters, if needed.
- 4. Place the battery in the housing.
- 5. Verify that the controller master switch is in the OFF position.
- 6. Connect the positive (+) lead to the engine starting battery.
- 7. Connect the negative (-) lead to the engine starting battery.

Refer to the generator set operation manual and the battery manufacturer's instructions for battery maintenance instructions.

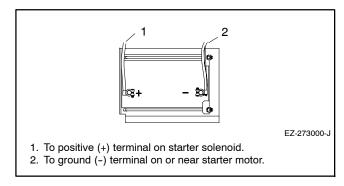

 

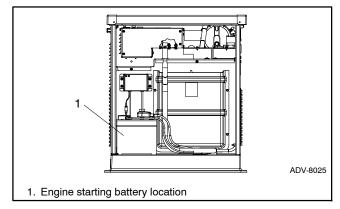


Figure 1-16 Battery Location, Air Intake End (typical)

# 1.10 Accessories


Have accessories installed by a Kohler authorized distributor/ dealer or a licensed electrician. Follow the installation instructions provided with each kit. Use separate conduit for AC and DC leads to reduce the possibility of electrical interference. Verify that the leads and conduit do not interfere with the operation of the generator set or obstruct the service areas. Verify that the electrical installation complies with the National Electrical Code (NEC) and all applicable local codes. See Section 2, Wiring Diagrams, for more information regarding generator set electrical connections.

If there are no accessories, proceed to Section 1.11, Prestart Installation Check.

#### 1.10.1 Common Fault and Auxiliary Run Relay Board

The optional relay board provides two additional relays to control customer-provided equipment:

- Common fault relay, energized on a fault.
- Auxiliary run relay, energized when the generator set is running.

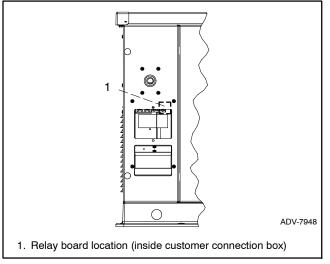



Connect customer equipment to terminal strip TB1 on the relay board, following the markings on the board. Connect to each relay's normally open or normally closed contacts depending on the application. Use size 14 AWG maximum wire for connections to TB1. See Figure 1-18 and Figure 1-19.

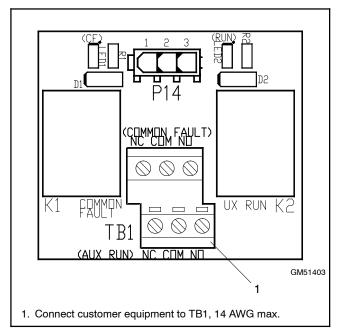


Figure 1-18 Relay Board Connections

Description
Common fault relay normally closed contact. Opens on a fault.
Common fault relay common
Common fault relay normally open contact. Closes on a fault.
Auxiliary run relay normally closed contact. Open when generator set is running.
Auxiliary run relay common
Auxiliary run relay normally open contact. Closed when generator set is running.

Figure 1-19 Common Fault and Run Relay Board Harness Connections

See Figure 1-17 for the relay board location.


#### 1.10.2 Carburetor Heater

An optional carburetor heater is recommended for improved cold starting in locations where the ambient temperature drops below  $0^{\circ}C$  ( $32^{\circ}F$ ). The carburetor heater prevents condensation and carburetor icing. The heater turns on when the temperature at the thermostat falls below approximately  $4^{\circ}C$  ( $40^{\circ}F$ ) and turns off when the temperature rises above approximately  $16^{\circ}C$ ( $60^{\circ}F$ ). See Figure 1-20.

The carburetor heater thermostat is installed in the cord. Figure 1-21 shows the location of the thermostat on the power cord. The heater power cord and thermostat are located in the generator set housing air intake area/ battery compartment. See Figure 1-16.

**Note:** Do not place the carburetor heater thermostat inside the generator set engine compartment. The thermostat must be exposed to the ambient air.

The heater requires a continuous source of power. Plug the carburetor heater into an outlet that supplies continuous 120 VAC power.

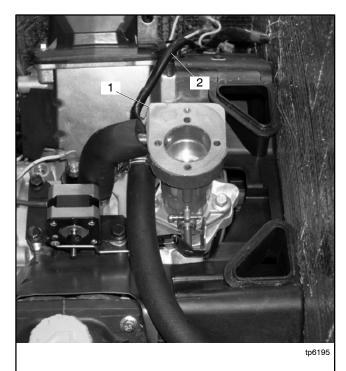

Carburetor heater (air cleaner removed to show heater)
Carburetor heater power cord

Figure 1-20 Carburetor Heater Location

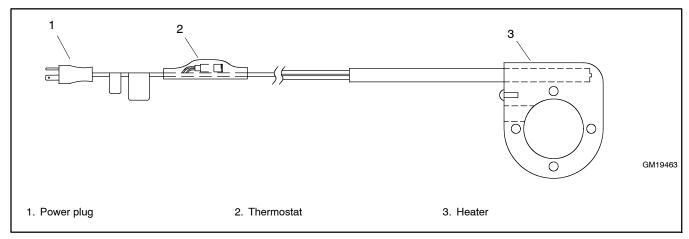


Figure 1-21 Carburetor Heaters

# **1.11 Prestart Installation Check**

Review the entire installation section. Inspect all wiring and connections to verify that the generator set is ready for operation. Check all items in the following Prestart Checklist.

#### **Prestart Checklist**

**Air Cleaner.** Check that a clean air cleaner element is installed to prevent unfiltered air from entering the engine. See the generator set operation manual for instructions.

Air Inlets. Check for clean and unobstructed air inlets.

**Battery.** Check for tight battery connections. Consult the battery manufacturer's instructions regarding battery care and maintenance.

**Exhaust System.** Check for exhaust leaks and blockages. Check the muffler condition.

- Inspect the exhaust system components for cracks, leaks, and corrosion. Check for tight exhaust system connections.
- Check for corroded or broken metal parts and replace them as needed.
- Check that the exhaust outlet is unobstructed.

**Oil Level.** Maintain the oil level at or near, not over, the full mark on the dipstick.

**Operating Area.** Check for obstructions that could block the flow of cooling air. Keep the air intake area clean. Do not leave rags, tools, or debris on or near the generator set.

# 1.12 Controller Configuration

#### 1.12.1 System Parameters

The controller configuration for each generator model is set at the factory and should not normally require changes. The controller's configuration mode allows adjustment of the system parameters listed in this section. Use the instructions in this section to check the configuration after installation and change them to match the settings shown in Figure 1-22, if necessary.

Parameter	Setting	Definition
Unit's system voltage and	Uu01	120/240 VAC, 60 Hz (single phase)
frequency	Uu06	115/230 VAC, 50 Hz (single phase)
Controller type	Uc01	ADC-RES (distributor) (Use for 12RES)
	Uc05 ‡	DC-RET (retail) ‡
Engine type	Ec00	12RES
Communication setting *	Cn00	No J1939 communication. Sleep mode enabled (48-hour power down in AUTO).
	Cn01 †	J1939 communication enabled. Sleep mode disabled (no power down in AUTO).
* Controller application code version 1.13 or higher.		
$\dagger$ Default setting for application code version 1.13 or higher.		
Default setting for service replacement controllers. Change to Uc01 for the 12RES.		

Figure 1-22 Controller Configuration Parameters

Follow the instructions in Figure 1-23 to enter the configuration mode while the engine is not running and then step through the following parameters. Use the up ( $\Lambda$ ) and down ( $\vee$ ) arrow buttons to select the appropriate setting for the application.

The controller will automatically exit the configuration mode without saving any changes after about 1 minute if no buttons are pressed. Start the configuration procedure over again from the beginning if the controller exits the configuration mode before the settings have been saved.

**Note:** Be sure to save your settings before exiting the configuration mode. The controller reverts to the last saved settings when the master switch is moved to the OFF/RESET position.

**Voltage/frequency setting (Uu).** Select the system voltage and frequency from the table in Figure 1-22.

**Note:** The Uu parameter sets the system's rated voltage and frequency. To adjust the output (measured) voltage and frequency, see Section 1.13, Voltage and Frequency Adjustments.

**Engine configuration (Ec).** The engine configuration must match the generator set engine type.

**Controller type (Uc).** The Uc setting is used during initial controller installation in the factory or controller replacement in the field. The Uc setting can be changed only once. The default setting for service replacement controllers is Uc05, controller type DC-RET. Changing it to UC01 sets the controller type to ADC-RES. Uc01 is the correct setting for the Model 12RES.

**Communication/Sleep Mode Setting (Cn).** (Available on controllers with application code version 1.13 or higher.) The communication setting enables or disables J1939 communication, and also disables or enables the sleep mode. When J1939 communication is enabled, the sleep mode is turned off to allow uninterrupted communication with a personal computer running remote monitoring software. If remote monitoring is not used, the communication can be turned off, enabling the sleep mode which causes the controller to power down after 48 hours of inactivity. The generator set master switch must be in AUTO for the sleep mode to function.

The default setting for controllers with application code version 1.13 or higher is Cn01, communication on/sleep mode off. Controllers with earlier application code versions have communication disabled and the sleep mode enabled. The Cn setting is not adjustable on these earlier versions.

## 1.12.2 Application Code Version

To check the application code version number, HOLD the select button while moving the generator set master switch to RUN. (The engine will not start when the select button is held.) Wait about 5 seconds for the application code version number to appear on the display. See Figure 1-23.

Controlle	r Configuration Mode:	Display:
Hold the Se	elect button:	
$\bigcirc -$	Move the generator set master switch to the RUN position. (The generator set engine will not start.)	. 0
	Wait about 5 seconds until the display shows the program version number. (The number may be different than the one shown here.)	v 1 1 3
	Press the down arrow key and then the up arrow key 3 times to enter the configuration mode. (This is the controller "password.")	U u 0 1
Now releas	e the Select button.	
Press:		
	To change the voltage/frequency setting, if necessary. See Figure 1-22.	U u 0 <i>x</i>
$\odot$	To enter setting and step to the next parameter, controller type Uc.	
	r Controller type, only if necessary. This setting is used during controller replacement and can be changed only once.	U c 0 1
$\bigcirc$	To enter setting and step to the next parameter, engine type Ec.	
	r To change the engine type, if necessary.	<b>E c 0 0</b>
$\bigcirc$	To enter setting and step to the next parameter, communication setting Cn.	
	To change the communication setting, if necessary. See Figure 1-22.	<b>C</b> n 0 <i>x</i>
$\bigcirc$	To enter setting and step to SAVE.	SAVE
Press:		
	To SAVE CHANGES.	YES
	To <b>DISCARD CHANGES</b> without saving.	no
	"Yes" or "no" flashes when the up or down arrow is pressed and then the controller exits the configuration mode. The display returns to the runtime hours.	XXXX
Now move	e the master switch to OFF/RESET.	
	ded boxes show which number in the controller display changes when the up s s pressed. X in the runtime hours display above denotes any number from 0	

Figure 1-23 Configuration Mode (system voltage/frequency, engine type, and communication parameters)

# 1.13 Voltage and Frequency Adjustments



Short circuits. Hazardous voltage/current can cause severe injury or death. Short circuits can cause bodily injury and/or equipment damage. Do not contact electrical connections with tools or jewelry while making adjustments or repairs. Remove all jewelry before servicing the equipment.

The controller's adjustment mode allows adjustment of the output voltage and frequency, if necessary. Have adjustments performed by a Kohler authorized distributor/ dealer.

**Note:** A digital multimeter that measures voltage and frequency is required for these adjustments.

Use a digital multimeter to check the output voltage and frequency. If output voltage or frequency is not within specifications, use the ADC controller to adjust the output voltage and engine speed (frequency) while the generator set is running. See Figure 1-24. The flowcharts in Figure 1-27 through Figure 1-29 outline the adjustment procedures.

**Note:** Be sure to save your changes as instructed in Figure 1-29 before exiting configuration mode.

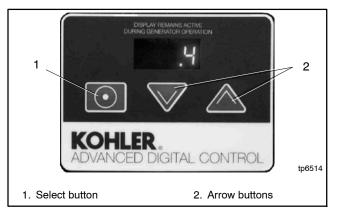


Figure 1-24 Advanced Digital Control

Changes in voltage and speed adjustments are lost if not saved before the generator set shuts down. The generator set continues to run with the new settings until it shuts down but then reverts to the previous settings at the next startup if the changes have not been saved.

## 1.13.1 Voltage Adjustment

**Note:** Refer to the flowcharts in Figure 1-27 through Figure 1-29 during the following procedure.

#### Voltage Adjustment Procedure

- 1. With the generator set off, connect a digital multimeter to the output leads or an electrical outlet on the load side of the generator set. Set the meter to measure AC voltage.
- 2. Start the generator set by moving the generator set master switch to the RUN position.
- 3. Use the ADC controller to adjust the voltage (parameter 1P) until the output voltage reaches the desired value. Refer to the flowcharts in Figure 1-27 through Figure 1-29 for instructions to adjust the output voltage. See Figure 1-25 for the approximate change in voltage per step.

Measured	ADC		hange per , VAC
Voltage, VAC	Display	Coarse	Fine
85-132	1P00-99	5	0.5
180-251	1P00-99	7	0.7

Figure 1-25 Voltage Adjustment (approximate)

- 4. Adjust the voltage stability (gain, parameter 2P) to minimize light flicker.
- 5. Readjust the voltage, if necessary.
- 6. Set the multimeter to measure frequency.
- 7. Adjust the engine speed to the cut-in frequency shown in Figure 1-26 by adjusting the engine governor speed (parameter 4P).

Γ	Frequency	Cut-In Frequency
	60 Hz	57.5 Hz
	50 Hz	47.5 Hz

Figure 1-26 Cut-In Frequencies

- 8. Adjust the volts/Hz (parameter 3P) until the voltage level measured by the multimeter begins to drop. When the volts/Hz is set correctly, the generator (as load is applied) attempts to maintain normal output until the engine speed drops below the cut-in frequency set in step 7.
- 9. Reset the engine speed to the operating frequency (50 or 60 Hz) by adjusting the engine governor speed (parameter 4P).
- 10. Readjust the voltage stability (gain, parameter 2P), if necessary.
- 11. Readjust the voltage (parameter 1P), if necessary.
- 12. Save settings. See Figure 1-29.
- 13. Stop the generator set.

#### 1.13.2 Frequency Adjustment

The engine speed determines the generator output frequency; 60 Hz units operate at 3600 rpm and 50 Hz units run at 3000 rpm. Adjust the engine governor speed and gain to set the output frequency and stability using the following procedure.

**Note:** Refer to the flowcharts in Figure 1-27 through Figure 1-29 during the following procedure.

#### **Frequency Adjustment Procedure**


- **Note:** Refer to the flowcharts in Figure 1-27 through Figure 1-29 during the following procedure.
  - 1. Attach a frequency meter to the AC output leads or an electrical outlet on the load side of the generator set.
  - 2. Start and run the generator set until it reaches normal operating temperature (at least 10 minutes).
  - 3. Adjust the electronic governor speed (parameter 4P) to obtain a frequency reading of 60 Hz (or 50 Hz if appropriate). Each step changes the engine speed about 3.6 rpm, which changes the output frequency about 0.06 Hz.
  - 4. Check stability with the generator set running and with no load applied. If the generator set speed is unstable, hunts, or surges, adjust the governor stability (gain, parameter 5P) until the generator set becomes stable with no hunting or surging. (Increasing the gain slows the governor response.)
  - 5. Check the frequency reading. Repeat steps 3 and 4 if necessary to obtain the rated frequency and stable operation.
  - 6. Save settings. See Figure 1-29.

Move the g	enerator se	d Frequency Adjustment Mode: t master switch to the RUN position. The generator set controller display shows the engine runtime hours.	Display :*
Hold:		t 5 seconds until the display changes from runtime hours gram version number.	
		down arrow key and then the up arrow key 3 times to enter the nt mode. (This is the controller "password.")	e
			1 P x x
The contro	oller is now	in the voltage coarse adjustment mode.	
Press:			
or	$\frown$	To raise or lower the voltage in large increments (approximately 5-7 volts per step). (Parameter 1P)	
$\bigcirc$		To enter fine voltage adjustment mode.	
or		To raise or lower the voltage in smaller increments (approximately 0.5-0.7 volts per step). (Parameter 1P)	1 P x x
$\bigcirc$		To enter coarse voltage stability (gain) adjustment mode.	2 P x x
or	$\frown$	To raise or lower the voltage stability (gain) in large increments. (Parameter 2P)	
$\bigcirc$		To enter fine voltage stability (gain) adjustment mode.	2 P x x
or	$\frown$	To raise or lower the voltage stability (gain) in smaller increments. (Parameter 2P)	
$\bigcirc$		To enter volts/Hz adjustment mode. (Parameter 3P)	3 P x x
or	$\frown$	To raise or lower the volts/Hz: 00=low; 09= high	
	ed on Figu		. Via the
		nich character in the controller display changes for each adjustmentes any number from 0 to 9. The actual values may vary from mode	

Figure 1-27 Output Voltage and Frequency Adjustments

Continued from Fig Press:	gure 1-27:	Display : *
$\overline{\bigcirc}$	To enter engine governor speed coarse adjustment mode. (Parameter 4P)	4 P x x
or	To raise or lower the engine speed in large increments.	
$\odot$	To enter engine governor speed fine adjustment mode. (Parameter 4P)	4 P x x
✓ or ✓	To raise or lower the engine speed in smaller increments.	
$\overline{\bigcirc}$	To enter engine governor stability (gain) coarse adjustment mode. (Parameter 5P)	5 P x x
✓ or ✓	To raise or lower the engine governor stability (gain) in large increments.	
$\overline{\bigcirc}$	To enter engine governor stability (gain) fine adjustment mode. (Parameter 5P)	5 P x x
✓ or ✓	To raise or lower the engine governor stability (gain) in smaller increments.	
$\overline{\bigcirc}$	To enter SAVE mode. Go to Figure 1-29.	SAVE
	r settings before exiting the configuration mode. The cont ngs when the master switch is moved to the OFF/RESET p	
	h character in the controller display changes for each adjustme any number from 0 to 9. The actual values may vary from mo	

Figure 1-28 Output Voltage and Frequency Adjustments, Continued

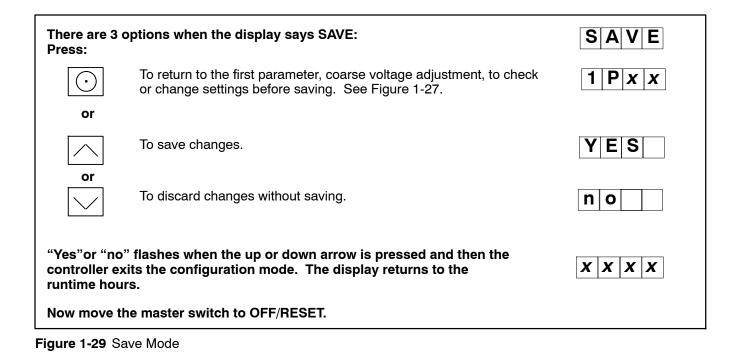

Refer to the dimension drawings and wiring diagrams for your model during generator set installation. Figure 2-1 lists the drawing numbers and locations.

Drawing Description	Drawing Number	Page
Dimension Drawing	ADV-8024	
Mounting and Dimensions	Sheet 1	32
Clearance	Sheet 2	33
High Wind Mounting	Sheet 3	34
Schematic Diagram	ADV-7325	35
Point-to-Point Wiring Diagram	GM51414	36

Figure 2-1 Drawing Numbers and Locations

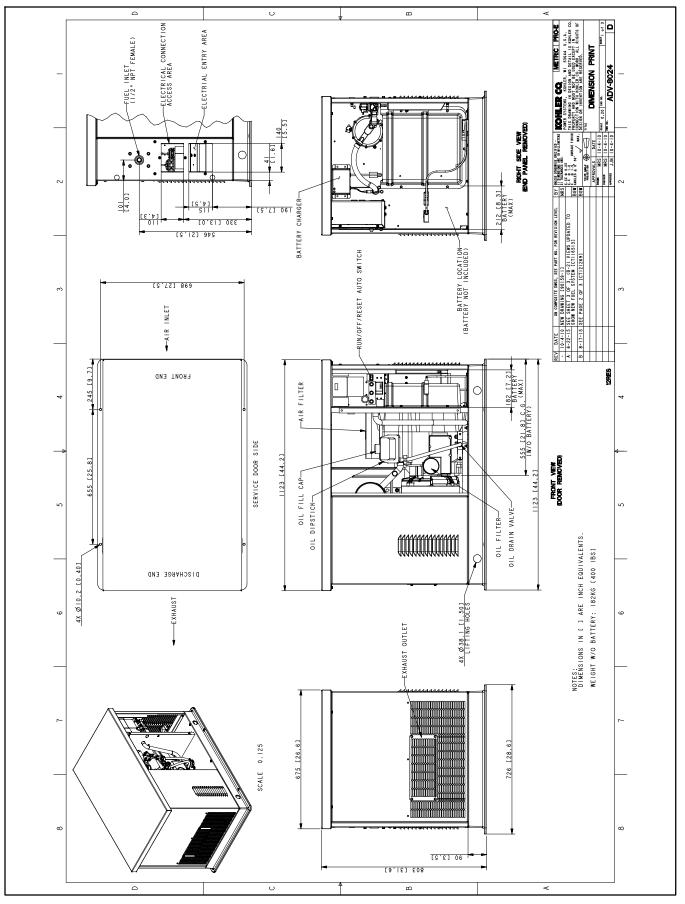


Figure 2-2 Dimension Drawing ADV-8024, Sheet 1

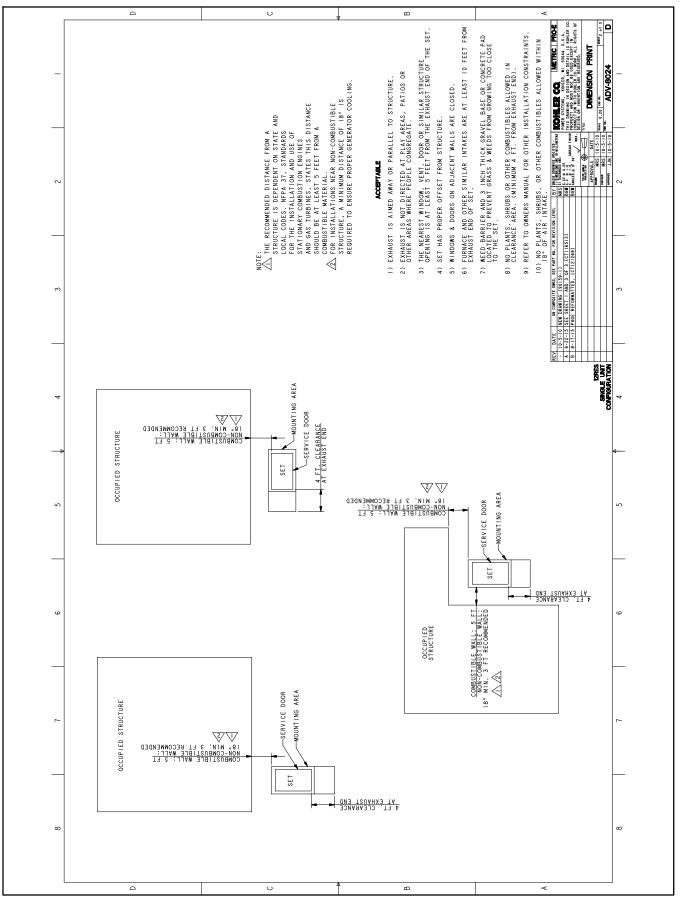


Figure 2-3 Dimension Drawing ADV-8024, Sheet 2

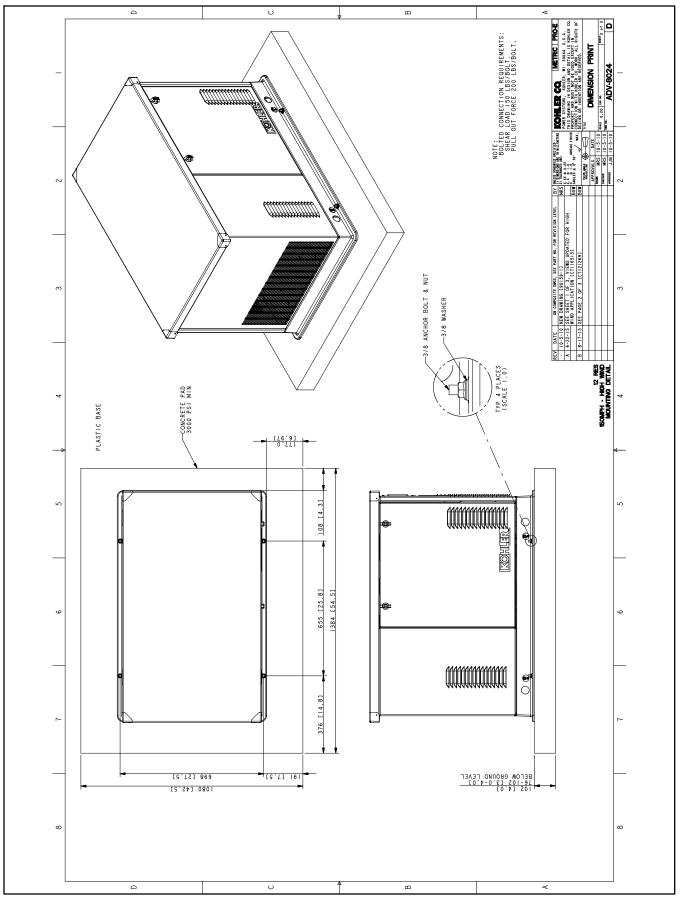


Figure 2-4 Dimension Drawing, ADV-8024, Sheet 3

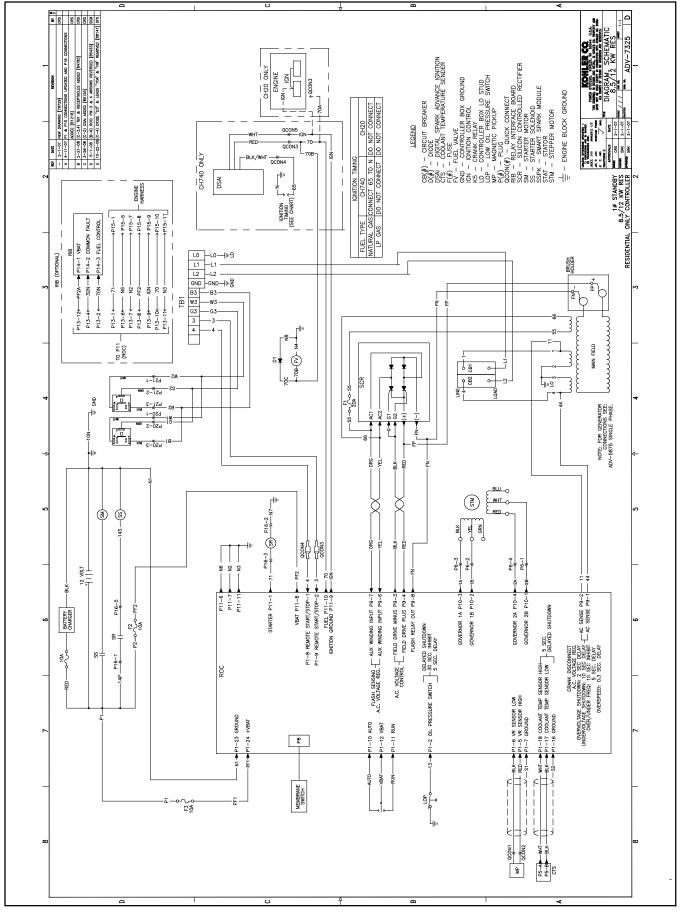


Figure 2-5 Schematic Diagram, ADV-7325-E

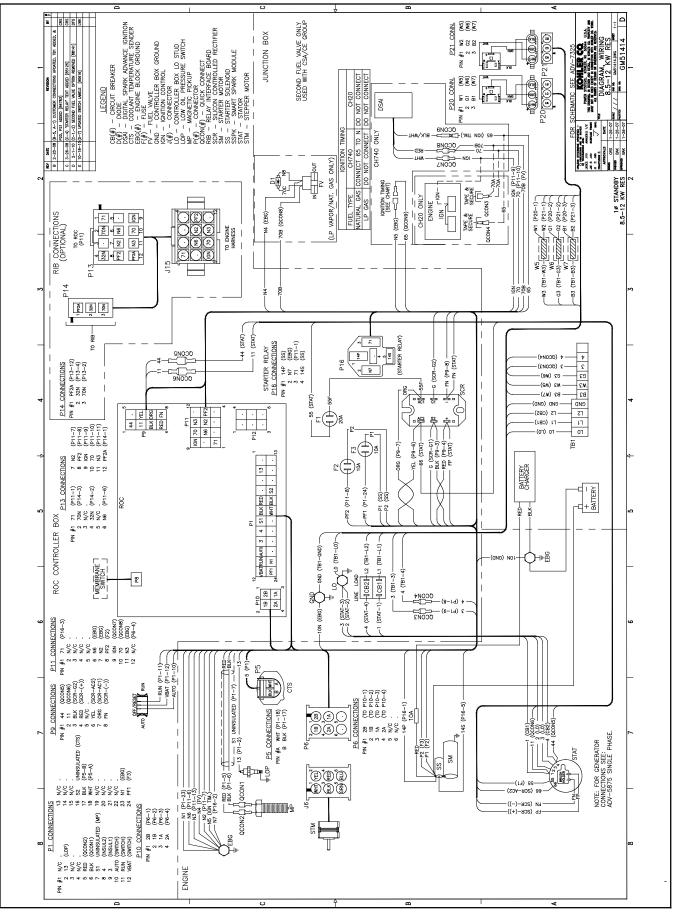


Figure 2-6 Wiring Diagram, GM51414-E

The following list contains abbreviations that may appear in this publication.

		5 1101 11
A, amp	ampere	cfm
ABDC	after bottom dead center	CG
AC	alternating current	CID
A/D	analog to digital	CL
ADC	advanced digital control;	cm
	analog to digital converter	CMOS
adj.	adjust, adjustment	
ADV	advertising dimensional	com
	drawing	coml
Ah	amp-hour	Coml/Re
AHWT	anticipatory high water	conn.
	temperature	cont.
AISI	American Iron and Steel	CPVC
	Institute	crit.
ALOP	anticipatory low oil pressure	CSA
alt.	alternator	
Al	aluminum	CT
ANSI	American National Standards	Cu
	Institute (formerly American	cUL
	Standards Association, ASA)	
AO	anticipatory only	CUL
APDC	Air Pollution Control District	
API	American Petroleum Institute	cu. in.
approx.	approximate, approximately	CW.
APU	Auxiliary Power Unit	CWC
AQMD	Air Quality Management District	cyl.
AR	as required, as requested	D/A
AS	as supplied, as stated, as	DAC
	suggested	dB
ASE	American Society of Engineers	dB(A)
ASME	American Society of	DCÌ
	Mechanical Engineers	DCR
assy.	assembly	deg., °
ASTM	American Society for Testing	dept.
	Materials	dia.
ATDC	after top dead center	DI/EO
ATS	automatic transfer switch	DIN
auto.	automatic	
aux.	auxiliary	
avg.	average	DIP
AVR	automatic voltage regulator	DPDT
AWG	American Wire Gauge	DPST
AWM	appliance wiring material	DS
bat.	battery	DVR
BBDC	before bottom dead center	E <sup>2</sup> PRON
BC	battery charger, battery	E mon
	charging	
BCA	battery charging alternator	
BCI	Battery Council International	E, emer.
BDC	before dead center	ECM
BHP	brake horsepower	
blk.	black (paint color), block	EDI
	(engine)	EFR
blk. htr.	block heater	e.g.
BMEP	brake mean effective pressure	EG
bps	bits per second	EGSA
br.	brass	
BTDC	before top dead center	EIA
Btu	British thermal unit	
Btu/min.	British thermal units per minute	EI/EO
С	Celsius, centigrade	EMI
cal.	calorie	emiss.
CAN	controller area network	eng.
CARB	California Air Resources Board	EPA
CAT5	Category 5 (network cable)	
CB	circuit breaker	EPS
CC	crank cycle	ER
CC	cubic centimeter	ES
CCA	cold cranking amps	
CCW.	counterclockwise	ESD
CEC	Canadian Electrical Code	est.
cert.	certificate, certification, certified	E-Stop
cfh	cubic feet per hour	etc.

cfm	cubic feet per minute
CG	center of gravity
CID	cubic inch displacement
CL	centerline
cm	centimeter
CMOS	complementary metal oxide
	substrate (semiconductor)
com	communications (port) commercial
coml Coml/Rec	Commercial/Recreational
conn.	connection
cont.	continued
CPVC	chlorinated polyvinyl chloride
crit.	critical
CSA	Canadian Standards
	Association
CT	current transformer
Cu	copper
cUL	Canadian Underwriter's
<u></u>	Laboratories
CUL	Canadian Underwriter's
in	Laboratories
cu. in.	cubic inch clockwise
cw. CWC	city water-cooled
cyl.	cylinder
D/A	digital to analog
DAC	digital to analog converter
dB	decibel
dB(A)	decibel (A weighted)
DC	direct current
DCR	direct current resistance
deg., °	degree
dept.	department
dia.	diameter
DI/EO	dual inlet/end outlet
DIN	Deutsches Institut fur Normung
	e. V. (also Deutsche Industrie
חוח	Normenausschuss)
DIP DPDT	dual inline package double-pole, double-throw
DPST	double-pole, double-throw double-pole, single-throw
DS	disconnect switch
DVR	digital voltage regulator
E <sup>2</sup> PROM,	
,	electrically-erasable
	programmable read-only
_	memory
E, emer.	emergency (power source)
ECM	electronic control module,
EDI	engine control module electronic data interchange
EFR	emergency frequency relay
e.g.	for example ( <i>exempli gratia</i> )
EG	electronic governor
EGSA	Electrical Generating Systems
	Association
EIA	Electronic Industries
	Association
EI/EO	end inlet/end outlet
EMI	electromagnetic interference
emiss.	emission
eng. EPA	engine Environmental Protection
LFA	Agency
EPS	emergency power system
ER	emergency relay
ES	engineering special.
	engineered special
ESD	electrostatic discharge
est.	estimated
E-Stop	emergency stop
etc.	et cetera (and so forth)

exh.	exhaust
ext.	external
F	Fahrenheit, female
FHM	flat head machine (screw)
fl. oz.	fluid ounce
flex.	flexible
freq.	frequency
FS	full scale
ft. ft. lb.	foot, feet
ft./min.	foot pounds (torque) feet per minute
ftp	file transfer protocol
g	gram
ga.	gauge (meters, wire size)
gal.	gallon
gen.	generator
genset	generator set
GFI	ground fault interrupter
GND, 🕀	ground
gov.	governor
gph	gallons per hour
gpm	gallons per minute
gr.	grade, gross
GRD	equipment ground
gr. wt.	gross weight
	height by width by depth
HC	hex cap
HCHT	high cylinder head temperature
HD	heavy duty
HET	high exhaust temp., high engine temp.
hex	hexagon
Hg	mercury (element)
нй	hex head
HHC	hex head cap
HP	horsepower
hr.	hour
HS	heat shrink
hsg.	housing
HVAC	heating, ventilation, and air conditioning
HWT	high water temperature
Hz	hertz (cycles per second)
IBC	International Building Code
IC	integrated circuit
ID	inside diameter, identification
IEC	International Electrotechnical
	Commission
IEEE	Institute of Electrical and
IMS	Electronics Engineers improved motor starting
in.	inch
in. H <sub>2</sub> O	inches of water
in. Hg	inches of mercury
in. lb.	inch pounds
Inc.	incorporated
ind.	industrial
int.	internal
int./ext.	internal/external
I/O	input/output
IP	internet protocol
ISO	International Organization for Standardization
J	joule
JIS	Japanese Industry Standard
k	kilo (1000)
ĸ	kelvin
kA	kiloampere
KB	kilobyte (2 <sup>10</sup> bytes)
KBus	Kohler communication protocol
kg	kilogram

kg/cm <sup>2</sup>	kilograms per square
1	centimeter
kgm	kilogram-meter
kg/m <sup>3</sup>	kilograms per cubic meter
kHz	kilohertz
kJ	kilojoule
km	kilometer
kOhm, kΩ	
kPa	kilopascal
kph kV	kilometers per hour
	kilovolt
kVA kVAD	kilovolt ampere kilovolt ampere reactive
kVAR kW	kilowatt
kWh	kilowatt-hour
kWm	kilowatt mechanical
kWth	kilowatt-thermal
L	liter
LAN	local area network
LxWxH	
lb.	pound, pounds
lbm/ft <sup>3</sup>	pounds mass per cubic feet
LCB	line circuit breaker
LCD	liquid crystal display
LED	light emitting diode
Lph	liters per hour
Lpm	liters per minute
LOP	low oil pressure
LP	liquefied petroleum
LPG	liquefied petroleum gas
LS	left side
L <sub>wa</sub>	sound power level, A weighted
LWL	low water level
LWT	low water temperature
m	meter, milli (1/1000)
М	mega (10 <sup>6</sup> when used with SI
m <sup>3</sup>	units), male cubic meter
m <sup>3</sup> /hr.	cubic meters per hour
m <sup>3</sup> /min.	cubic meters per minute
mA	milliampere
man.	manual
max.	maximum
MB	megabyte (2 <sup>20</sup> bytes)
MCCB	molded-case circuit breaker
MCM	one thousand circular mils
meggar	megohmmeter
MHz	megahertz
mi.	mile
mil	one one-thousandth of an inch
min.	minimum, minute
misc.	miscellaneous
MJ	megajoule
mJ	millijoule
mm	millimeter
mOhm, m	
MOhm, Mg	0
MOV	metal oxide varistor
MPa	megapascal
mpg	miles per gallon
mph MS	miles per hour
MS	military standard millisecond
ms m/sec	millisecond meters per second
m/sec.	
mta	
mtg. MTU	mounting
MŤU	mounting Motoren-und Turbinen-Union
MŤU MW	mounting Motoren-und Turbinen-Union megawatt
MTU MW mW	mounting Motoren-und Turbinen-Union megawatt milliwatt
MŤU MW mW μF	mounting Motoren-und Turbinen-Union megawatt milliwatt microfarad
MTU MW mW	mounting Motoren-und Turbinen-Union megawatt milliwatt
MŤU MW mW μF N, norm.	mounting Motoren-und Turbinen-Union megawatt milliwatt microfarad normal (power source)

NBS	National Bureau of Standards
NC	normally closed
NEC	National Electrical Code
NEMA	National Electrical
	Manufacturers Association
NFPA	National Fire Protection
1.11.17.	Association
Nm	newton meter
NO	normally open
no., nos.	number, numbers
NPS	National Pipe, Straight
NPSC	
NPT	National Pipe, Straight-coupling
INP I	National Standard taper pipe
	thread per general use
NPTF	National Pipe, Taper-Fine
NR	not required, normal relay
ns	nanosecond
00	overcrank
OD	outside diameter
OEM	original equipment
~-	manufacturer
OF	overfrequency
opt.	option, optional
OS	oversize, overspeed
OSHA	Occupational Safety and Health
	Administration
OV	overvoltage
oz.	ounce
р., рр.	page, pages
PC	personal computer
PCB	printed circuit board
pF	picofarad
PF	power factor
ph., Ø	phase
PHC	Phillips <sup>®</sup> head Crimptite <sup>®</sup>
1110	(screw)
PHH	Phillips <sup>®</sup> hex head (screw)
PHM	
	pan head machine (screw)
PLC	programmable logic control
PMG	permanent magnet generator
pot	potentiometer, potential
ppm	parts per million
PROM	programmable read-only
	memory
psi	pounds per square inch
psig	pounds per square inch gauge
pt.	pint
PTC	positive temperature coefficient
PTO	power takeoff
PVC	polyvinyl chloride
qt.	quart, quarts
qty.	quantity
R	replacement (emergency)
	power source
rad.	radiator, radius
RAM	random access memory
RDO	relay driver output
ref.	reference
rem.	remote
	Residential/Commercial
Res/Coml	
RFI	radio frequency interference
RH	round head
RHM	round head machine (screw)
rly.	relay
rms	root mean square
rnd.	round
RO	read only
ROM	read only memory
rot.	rotate, rotating
rpm	revolutions per minute
ŔS	right side
RTDs	Resistance Temperature
	Detectors

RTU	remote terminal unit
RTV	room temperature vulcanization
RW	read/write
SAE	Society of Automotive
scfm	Engineers standard cubic feet per minute
SCR	silicon controlled rectifier
s, sec.	second
SI	Systeme international d'unites,
	International System of Units
SI/EO	side in/end out
sil.	silencer
SMTP	simple mail transfer protocol
SN	serial number
SNMP	simple network management protocol
SPDT	single-pole, double-throw
SPST	single-pole, single-throw
spec	specification
specs	specification(s)
sq.	square
sq. cm	square centimeter
sq. in.	square inch
SMS	short message service
SS	stainless steel
std.	standard
stl.	steel
tach.	tachometer
TB	terminal block
TCP	transmission control protocol
TD TDC	time delay top dead center
TDEC	•
TDEN	time delay engine cooldown time delay emergency to
IDEN	normal
TDES	time delay engine start
TDNE	time delay normal to
	emergency
TDOE	time delay off to emergency
TDON	time delay off to normal
temp.	temperature
term.	terminal
THD	total harmonic distortion
TIF tol.	telephone influence factor tolerance
turbo.	turbocharger
typ.	typical (same in multiple
typ.	locations)
UF	underfrequency
UHF	ultrahigh frequency
UIF	user interface
UL	Underwriter's Laboratories, Inc.
UNC	unified coarse thread (was NC)
UNF	unified fine thread (was NF)
univ.	universal
URL	uniform resource locator (web address)
US	undersize, underspeed
UV	ultraviolet, undervoltage
V.	volt
VAC	volts alternating current
VAR	voltampere reactive
VDC	volts direct current
VFD	vacuum fluorescent display
VGA	video graphics adapter
VHF	very high frequency
W	watt
WCR	withstand and closing rating
w/ WO	with
w/o	write only without
w/o wt.	weight
xfmr	transformer

# **KOHLER** Power Systems

KOHLER CO. Kohler, Wisconsin 53044 Phone 920-457-4441, Fax 920-459-1646

Kohler Power Systems Asia Pacific Headquarters 7 Jurong Pier Road Singapore 619159 Phone (65) 6264-6422, Fax (65) 6264-6455

For the nearest KOHLER authorized installation, service, and sales dealer in the US and Canada: Call 1-800-544-2444 or visit KOHLERPower.com

TP-6967 8/15

© 2015 by Kohler Co. All rights reserved.