

Alarm Horn Kit Kit #PA-250599

The alarm horn is used to alert you when an operating failure occurs on your generator set. Use the following instructions when installing your kit.

WARNING

UNIT STARTS WITHOUT NOTICE! Units with Automatic Transfer Switches start automatically. Turn Generator Main Switch on controller to OFF position. Disable generator set. Place a rag over battery cells to prevent escape of explosive gases. Remove battery cables (remove ground lead first and reconnect it last).

WARNING

LEAD-ACID STARTING BATTERY! Battery generates flammable hydrogen gas and contains acid. Use extreme care when handling or charging battery. Avoid contacting terminals with tools, etc. to prevent burns and to prevent sparks that could cause an explosion. Remove wristwatch, rings, and any other jewelry before handling battery. If acid splashes on skin or eyes, flush affected areas with cold water for 15 minutes. In case of eye contact, get immediate medical attention. Operate generator set and charge battery only in well ventilated areas.

INSTALLATION

- 1. Disconnect battery, negative lead first.
- Drill holes in skid as shown in Figure 1 for the mounting of the warning horn, flasher and relay.
- Install the warning horn, flasher and relay to skid. Refer to Figure 2 for the correct mounting location and mounting hardware to be used.
- 4. Install toggle switch to generator enclosure plate as shown in Figure 2.
- 5. Wire the alarm horn as shown in Figure 3.
- 6. Reconnect battery, negative lead last.

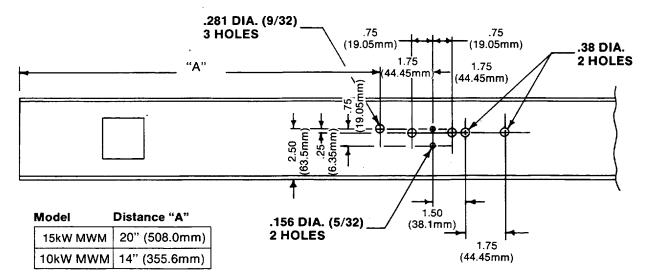


FIGURE 1. DRILLING INSTRUCTIONS

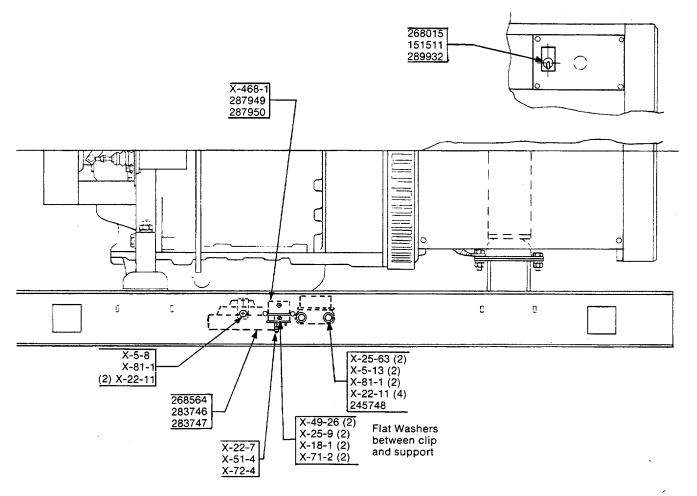


FIGURE 2. INSTALLING ALARM HORN

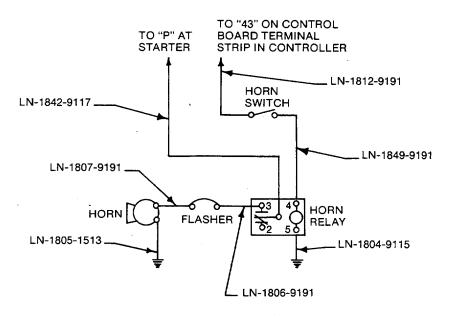


FIGURE 3. WIRING DIAGRAM

Part Listing

Part No.	Description	Qty.
X-5-8	Screw, H.C.	1
X-5-13	Screw, H.C.	2
X-18-1	Washer, lock	2
X-22-7	Washer, lock	1
X-22-11	Washer, lock	6
X-25-9	Washer, plain	2
X-25-63	Washer, plain	2
X-49-26	Washer, R.H.M.	2
X-51-4	Screw, R.H.M.	1
X-71-2	Nut, plain hex	2
X-72-4	Nut, plain hex	1
X-81-1	Nut, plain hex	3
X-468-1	Tie, cable	1
151511	Ring, lock	1
245748	Relay	1
268015	Switch, toggle	1
268564	Horn, warning	1
283746	Bracket, horn	1
283747	Nut, horn	1
287949	Clip	1
287950	Flasher	1
289932	Nameplate	1
LN-1804-9115	Lead	1
LN-1805-1513	Lead	1
LN-1806-9191	Lead	1
LN-1807-9191	Lead	1
LN-1812-9191	Lead	1
LN-1842-9117	Lead	1
LN-1849-9191	Lead	1