## **MABAS ITTF Starcom Radio Programming Template Quick Reference**

Zone	AA	АВ	AC	AD	AE	AF	AG
Mode 1	IESMA	RGN 6A	7TAC58D	7TAC74D	7CAL59D	I-CALL D	8CAL-90D
Mode 2	ILEAS	RGN 6B	7TAC62D	7TAC78D	7TAC63D	I-TAC 1D	8TAC-91D
Mode 3	MABAS	RGN 7A	7TAC66D	7TAC82D	7TAC67D	I-TAC 2D	8TAC-92D
Mode 4	PUB HLTH	RGN 7B	7TAC68D	7LAW84D	7TAC73D	I-TAC 3D	8TAC-93D
Mode 5	INCDNT 1	RGN 8A	7TAC69D	7LAW85D	7CAL75D	I-TAC 4D	8TAC-94D
Mode 6	INCDNT 2	RGN 8B	7TAC70D	7TAC86D	7TAC79D	I-CALL R	8CAL-90R
Mode 7	INCDNT 3	RGN 9A	7MOB72D	7MOB88D	7TAC83D	I-TAC 1R	8TAC-91R
Mode 8	ZONE 1	RGN 9B	7TAC58	7TAC74	7TAC89D	I-TAC 2R	8TAC-92R
Mode 9	ZONE 2	RGN 11A	7TAC62	7TAC78	7CAL59	I-TAC 3R	8TAC-93R
Mode 10	ZONE 3	RGN 11B	7TAC66	7TAC82	7TAC63	I-TAC 4R	8TAC-94R
Mode 11	RGN 2A		7LAW68	7LAW84	7TAC67	ICALL DN	ICALL RN
Mode 12	RGN 2B		7LAW69	7LAW85	7TAC73	ITAC 1DN	ITAC 1RN
Mode 13	RGN 3A		7TAC70	7TAC86	7CAL75	ITAC 2DN	ITAC 2RN
Mode 14	RGN 3B		7MOB72	7MOB88	7TAC79	ITAC 3DN	ITAC 3RN
Mode 15	RGN 4A				7TAC83	ITAC 4DN	ITAC 4RN
Mode 16	RGN 4B				7TAC89		

**IESMA** = Emergency Management and Hailing

**ILEAS** = Police and COML **MABAS** = Fire and COML

**PUBHLTH** = Public Health and COML

**INCDNT 1-2-3** = Command and Control or COML

**ZONE 1-2-3** = COML

**RGN A** = IEMA Regional Coordinator to locals, Regional A talkgroups need no permission, used for a local event, training and exercises.

**RGN B** = Used for County/Regional Interoperability, no permission is required. If A side needs additional talkgroup migrate to B If B side needs additional talkgroup migrate to A

## **MABAS ITTF Starcom Radio Button Quick Reference**

