
SERVICE BULLETIN

Original Issue Date: **5/94**Model: **6.5RMY, 10RY/RZ, and 12RY/RZ**Market: **Industrial**Subject: **LP Vapor Gas Operation**

Disregard fuel regulator conversion information for the following model/spec numbers:

Model No.®	6.5RMY	10RY/RZ	12RY/RZ
Spec No.®	PA-140120	PA-110446	PA-110534
	and above	and above	and above
Operation Manuals			
TP-5631 (1/94)	X		
TP-5402 (5/90)		X	X
Installation Manual			
TP-5700 (9/93)	X	X	X
Service Manuals			
TP-5632 (9/93)	X		
TP-5406 (1/94) RY		X	X
TP-5407 (7/94) RZ		X	X

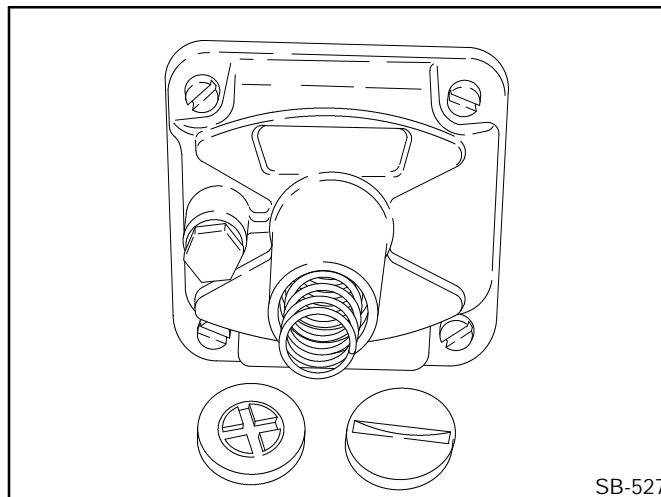
Remove and discard fuel conversion hang tag part no. 258558 if mounted on any generator set cited above.

Because of the design and vertical mounting position of the gas fuel regulator do not remove the retainer and spring when converting from natural gas to LP gas fuel. Starting and operating problems can occur if components are removed. Effective 8-15-95 all current production

models will use hang tag part no. 226682 to identify units which do not require conversion using the spring and retainer.

NOTE

Remove the spring and retainer from the fuel regulator for all LP vapor gas models not listed in this service bulletin. See Figure 1.

**Figure 1. LP Vapor Gas Fuel Regulator**

SB-527

Routing	Service Manager	Sales Manager	Parts Manager	Technician No. 1	Technician No. 2	Technician No. 3	Return This to
Initial Here							