


Installation

Automatic Transfer Switches

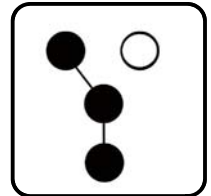

Models:

Service Entrance Transfer Switch with Generator Selection Interlock

200 Amperes

KOHLER®
Power Systems _____

9001
KOHLER
POWER SYSTEMS
NATIONALLY REGISTERED

TP-6941 6/16a

Product Identification Information

Product identification numbers determine service parts. Record the product identification numbers in the spaces below immediately after unpacking the products so that the numbers are readily available for future reference. Record field-installed kit numbers after installing the kits.

Transfer Switch Identification Numbers

Record the product identification numbers from the transfer switch nameplate.

Model Designation _____

Serial Number _____

Controller Identification

Record the controller description from the generator set operation manual, spec sheet, or sales invoice.

Controller Description _____

Software Version Number

Record the software version number.

Software Version Number _____

Table of Contents

Safety Precautions and Instructions	5
Introduction	7
List of Related Materials	7
Service Assistance	8
Section 1 Product Description	9
1.1 Purpose	9
1.2 Source Circuit Breakers	9
1.3 Surge Protection	9
1.4 Optional Cam-Lock Box	10
1.5 Nameplate	10
Section 2 Installation	11
2.1 Introduction	11
2.2 Receipt of Unit	11
2.2.1 Inspection	11
2.2.2 Lifting	11
2.2.3 Storage	11
2.2.4 Unpacking	12
2.3 Installation	12
2.4 Manual Operation Check	13
2.5 Controller	13
2.5.1 Controller Connection	13
2.5.2 Controller Ground	13
2.5.3 Other Connections	13
2.6 Electrical Wiring	14
2.6.1 Source and Load Connections	14
2.6.2 Engine Start Connection	16
2.6.3 Auxiliary Contacts	17
2.6.4 Mobile Generator Connection	18
2.7 Functional Tests	18
2.8 System Setup	18
2.9 Exerciser Setup	18
2.10 Startup Notification	18
Section 3 Functional Tests	19
3.1 Introduction	19
3.2 Manual Operation Test	19
3.3 Voltage Check	19
3.4 Lamp Test	20
3.5 Automatic Operation Test	20
Section 4 Surge Protection Device (SPD)	21
4.1 Surge Protective Device (SPD)	21
4.1.1 Diagnostic LEDs	21
4.1.2 Remote Indication	21
4.2 SPD Inspection	21
4.3 Surge Protective Device (SPD) Replacement	22
Section 5 Source Circuit Breakers	25
5.1 Source Circuit Breakers	25
5.2 Generator Selection Interlock	25
5.3 Service Disconnect Procedure	26
5.4 Source Circuit Breaker Reset	26
Section 6 Diagrams and Drawings	27
Appendix A Abbreviations	35

Notes

Safety Precautions and Instructions

IMPORTANT SAFETY INSTRUCTIONS. Electromechanical equipment, including generator sets, transfer switches, switchgear, and accessories, can cause bodily harm and pose life-threatening danger when improperly installed, operated, or maintained. To prevent accidents be aware of potential dangers and act safely. Read and follow all safety precautions and instructions. **SAVE THESE INSTRUCTIONS.**

This manual has several types of safety precautions and instructions: Danger, Warning, Caution, and Notice.

DANGER

Danger indicates the presence of a hazard that **will cause severe personal injury, death, or substantial property damage.**

WARNING

Warning indicates the presence of a hazard that **can cause severe personal injury, death, or substantial property damage.**

CAUTION

Caution indicates the presence of a hazard that **will or can cause minor personal injury or property damage.**


NOTICE

Notice communicates installation, operation, or maintenance information that is safety related but not hazard related.

Safety decals affixed to the equipment in prominent places alert the operator or service technician to potential hazards and explain how to act safely. The decals are shown throughout this publication to improve operator recognition. Replace missing or damaged decals.

Accidental Starting

WARNING

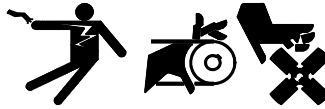

Accidental starting.
Can cause severe injury or death.

Disconnect the battery cables before working on the generator set. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery.

Disabling the generator set. **Accidental starting can cause severe injury or death.** Before working on the generator set or equipment connected to the set, disable the generator set as follows: (1) Press the generator set off/reset button to shut down the generator set. (2) Disconnect the power to the battery charger, if equipped. (3) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent the starting of the generator set by the remote start/stop switch.

Hazardous Voltage/ Moving Parts

DANGER



Hazardous voltage.
Will cause severe injury or death.

Disconnect all power sources before opening the enclosure.


DANGER



Hazardous voltage.
Will cause severe injury or death.

Only authorized personnel should open the enclosure.

WARNING

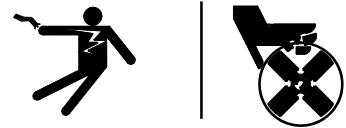

Hazardous voltage. Moving parts.
Can cause severe injury or death.

Operate the generator set only when all guards and electrical enclosures are in place.

Grounding electrical equipment. **Hazardous voltage can cause severe injury or death.** Electrocution is possible whenever electricity is present. Ensure you comply with all applicable codes and standards. Electrically ground the generator set, transfer switch, and related equipment and electrical circuits. Turn off the main circuit breakers of all power sources before servicing the equipment. Never contact electrical leads or appliances when standing in water or on wet ground because these conditions increase the risk of electrocution.

Short circuits. **Hazardous voltage/current can cause severe injury or death.** Short circuits can cause bodily injury and/or equipment damage. Do not contact electrical connections with tools or jewelry while making adjustments or repairs. Remove all jewelry before servicing the equipment.

Servicing the transfer switch. Hazardous voltage can cause severe injury or death. Deenergize all power sources before servicing. Turn off the main circuit breakers of all transfer switch power sources and disable all generator sets as follows: (1) Move all generator set master controller switches to the OFF position. (2) Disconnect power to all battery chargers. (3) Disconnect all battery cables, negative (-) leads first. Reconnect negative (-) leads last when reconnecting the battery cables after servicing. Follow these precautions to prevent the starting of generator sets by an automatic transfer switch, remote start/stop switch, or engine start command from a remote computer. Before servicing any components inside the enclosure: (1) Remove all jewelry. (2) Stand on a dry, approved electrically insulated mat. (3) Test circuits with a voltmeter to verify that they are deenergized.

Making line or auxiliary connections. Hazardous voltage can cause severe injury or death. To prevent electrical shock deenergize the normal power source before making any line or auxiliary connections.

Servicing the transfer switch controls and accessories within the enclosure. Hazardous voltage can cause severe injury or death. Disconnect the transfer switch controls at the inline connector to deenergize the circuit boards and logic circuitry but allow the transfer switch to continue to supply power to the load. Disconnect all power sources to accessories that are mounted within the enclosure but are not wired through the controls and deenergized by inline connector separation. Test circuits with a voltmeter to verify that they are deenergized before servicing.

Testing live electrical circuits. Hazardous voltage or current can cause severe injury or death. Have trained and qualified personnel take diagnostic measurements of live circuits. Use adequately rated test equipment with electrically insulated probes and follow the instructions of the test equipment manufacturer when performing voltage tests. Observe the following precautions when performing voltage tests: (1) Remove all jewelry. (2) Stand on a dry, approved electrically insulated mat. (3) Do not touch the enclosure or components inside the enclosure. (4) Be prepared for the system to operate automatically. *(600 volts and under)*

⚠ WARNING



Airborne particles. Can cause severe injury or blindness.

Wear protective goggles and clothing when using power tools, hand tools, or compressed air.

Heavy Equipment

⚠ WARNING



Unbalanced weight. Improper lifting can cause severe injury or death and equipment damage.

Use adequate lifting capacity. Never leave the transfer switch standing upright unless it is securely bolted in place or stabilized.

Notice

NOTICE

Improper operator handle usage. Use the manual operator handle on the transfer switch for maintenance purposes only. Return the transfer switch to the normal position. Remove the manual operator handle, if used, and store it in the place provided on the transfer switch when service is completed.

NOTICE

Foreign material contamination. Cover the transfer switch during installation to keep dirt, grit, metal drill chips, and other debris out of the components. Cover the solenoid mechanism during installation. After installation, use the manual operating handle to cycle the contactor to verify that it operates freely. Do not use a screwdriver to force the contactor mechanism.

NOTICE

Electrostatic discharge damage. Electrostatic discharge (ESD) damages electronic circuit boards. Prevent electrostatic discharge damage by wearing an approved grounding wrist strap when handling electronic circuit boards or integrated circuits. An approved grounding wrist strap provides a high resistance (about 1 megohm), *not a direct short*, to ground.

This manual provides operation and installation instructions for the Kohler® Service Entrance Rated Automatic Transfer Switches with generator selection interlock shown in Figure 1. A separate manual provided with the transfer switch covers the transfer switch controller operation. See List of Related Materials for the document part number.

Transfer switches built before February 2, 2015 use the original MPAC™ 1500 transfer switch controller. Transfer switches built after February 2, 2015 use the Decision-Maker® MPAC 1500 controller. Compare the illustrations in Section 6.2 to identify the controller, if necessary.

Information in this publication represents data available at the time of print. Kohler Co. reserves the right to change this literature and the products represented without notice and without any obligation or liability whatsoever.

Read this manual and carefully follow all procedures and safety precautions to ensure proper equipment operation and to avoid bodily injury. Read and follow the Safety Precautions and Instructions section at the beginning of this manual. Keep this manual with the equipment for future reference.

The equipment service requirements are very important to safe and efficient operation. Inspect parts often and perform required service at the prescribed intervals. Obtain service from an authorized service distributor/dealer to keep equipment in top condition.

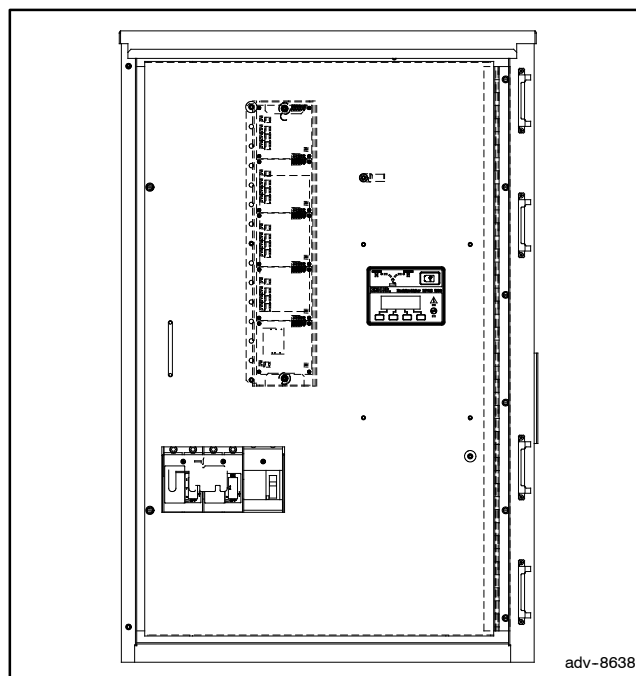


Figure 1 Service Entrance Automatic Transfer Switch with Generator Selection Interlock (outer door removed for illustration)

List of Related Materials

A separate manual covers the transfer switch controller and related accessories. Separate manuals contain service and parts information for transfer switch power switching devices and electrical controls.

The following table lists the part numbers for related literature.

Literature Item	Part Number
Specification Sheet, Transfer Switch	G11-134
Specification Sheet, Decision-Maker® MPAC 1500 Controller	G11-128
Operation Manual, Original MPAC™ 1500 Controller	TP-6714
Operation Manual, Decision-Maker® MPAC 1500 Controller	TP-6883
Service Manual	TP-6920

Service Assistance

For professional advice on generator power requirements and conscientious service, please contact your nearest Kohler distributor or dealer.

- Consult the Yellow Pages under the heading Generators—Electric.
- Visit the Kohler Power Systems website at KOHLERPower.com.
- Look at the labels and decals on your Kohler product or review the appropriate literature or documents included with the product.
- Call toll free in the US and Canada 1-800-544-2444.
- Outside the US and Canada, call the nearest regional office.

Headquarters Europe, Middle East, Africa (EMEA)

Kohler Power Systems Netherlands B.V.
Kristallaan 1
4761 ZC Zevenbergen
The Netherlands
Phone: (31) 168 331630
Fax: (31) 168 331631

Asia Pacific

Power Systems Asia Pacific Regional Office
Singapore, Republic of Singapore
Phone: (65) 6264-6422
Fax: (65) 6264-6455

China

North China Regional Office, Beijing
Phone: (86) 10 6518 7950
(86) 10 6518 7951
(86) 10 6518 7952
Fax: (86) 10 6518 7955

East China Regional Office, Shanghai
Phone: (86) 21 6288 0500
Fax: (86) 21 6288 0550

India, Bangladesh, Sri Lanka

India Regional Office
Bangalore, India
Phone: (91) 80 3366208
(91) 80 3366231
Fax: (91) 80 3315972

Japan, Korea

North Asia Regional Office
Tokyo, Japan
Phone: (813) 3440-4515
Fax: (813) 3440-2727

1.1 Purpose

An automatic transfer switch (ATS) transfers electrical loads from a normal (preferred) source of electrical power to an emergency (standby) source when the normal source falls outside the acceptable electrical parameters.

When the normal (preferred) source fails, the ATS signals the emergency (standby) source generator set to start. When the emergency (standby) source reaches acceptable levels and stabilizes, the ATS transfers the load from the normal (preferred) source to the emergency (standby) source. The ATS continuously monitors the normal (preferred) source and transfers the load back when the normal (preferred) source returns and stabilizes. After transferring the load back to the normal (preferred) source, the ATS removes the generator start signal, allowing the generator set to shut down.

Figure 1-1 shows the transfer switch, and Figure 1-2 shows a typical installation block diagram.

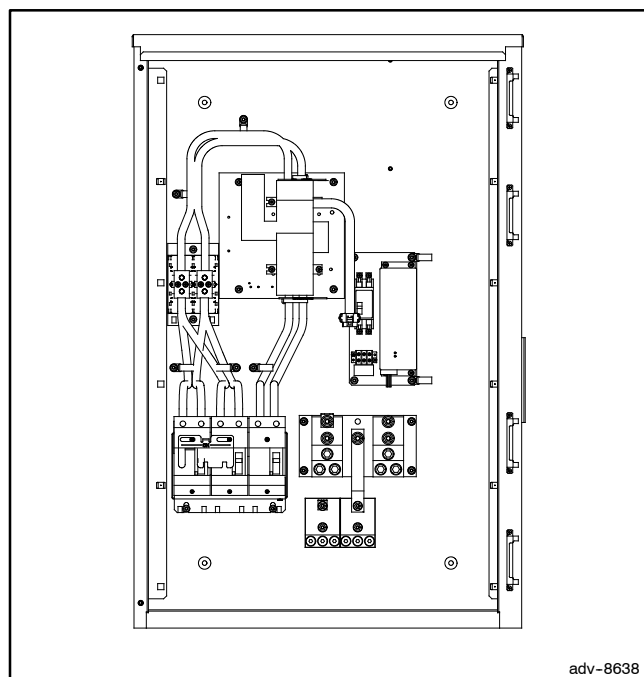


Figure 1-1 Service Entrance Automatic Transfer Switch with Generator Selection Interlock (doors removed for illustration)

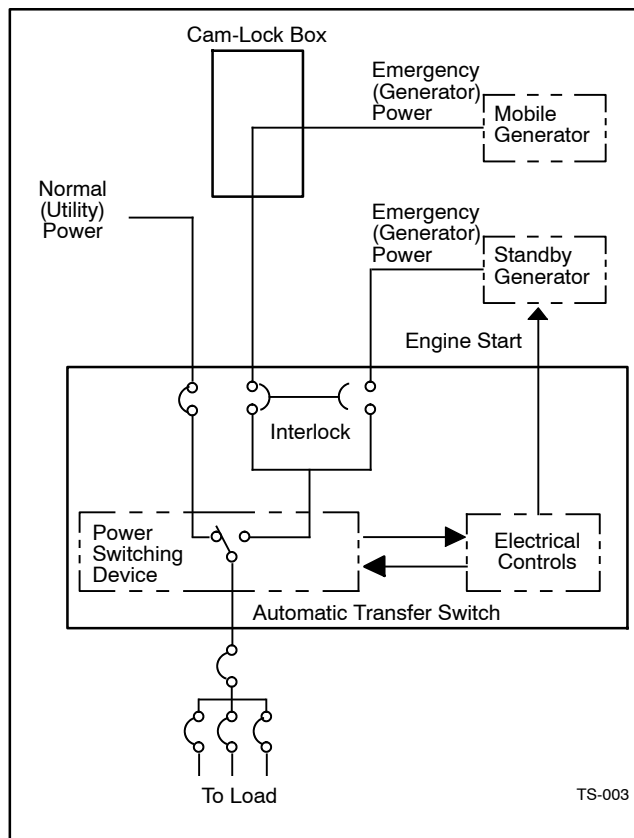


Figure 1-2 Block Diagram

1.2 Source Circuit Breakers

The transfer switch covered in this document is rated for service entrance applications. The transfer switch uses circuit breakers to provide the service disconnect for the utility source and two standby sources. A mechanical interlock prevents closing both standby source circuit breakers at the same time. See Section 5 for more information about the source circuit breakers and the mechanical interlock.

1.3 Surge Protection

A surge protection device (SPD) is installed on the utility source side. See Section 4 for more information.

1.4 Optional Cam-Lock Box

An optional cam-lock box is available. The cam-lock box allows safe and easy temporary connection of a mobile generator set to the transfer switch as a second emergency source. See the installation manual provided with the cam-lock box for installation and generator connection instructions.

1.5 Nameplate

A nameplate attached to the controller cover on the inside of the enclosure door includes the model designation, serial number, ratings, and other information about the transfer switch. See Figure 1-3. The serial number is also shown on a label inside the transfer switch enclosure.

Copy the model designation and serial number from the nameplate to the spaces provided in the Product Identification Information section inside the front cover of this manual for use when requesting service or parts.

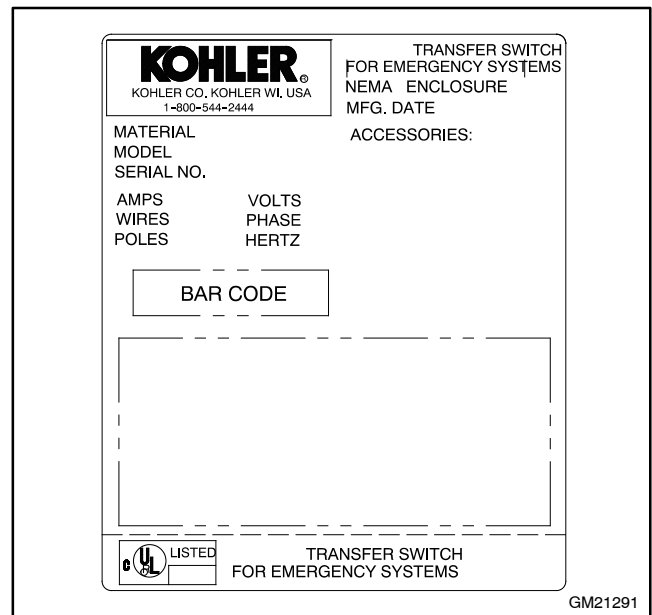


Figure 1-3 Typical Transfer Switch Nameplate

2.1 Introduction

Kohler® transfer switches are shipped factory-wired, factory-tested, and ready for installation. Have the equipment installed only by trained and qualified personnel, and verify that the installation complies with applicable codes and standards. Switch installation includes the following steps:

- Unpacking and inspecting the transfer switch upon receipt.
- Verifying that the transfer switch voltage and frequency ratings match the voltages and frequencies of the sources.
- Mounting the transfer switch.
- Checking the manual operation.
- Wiring the normal power source (utility), emergency power source (generator set), and load circuits.
- Wiring the generator set engine start connection.
- Connecting accessories, if provided.
- Connecting and initializing the electrical controls, as required.
- Checking voltages and operation.

Protect the switch against damage before and during installation.


The functional tests in Section 2 are a necessary part of the installation. Be sure to perform the functional tests, which include voltage checks and operation tests, before putting the transfer switch into service.

2.2 Receipt of Unit

2.2.1 Inspection

At the time of delivery, inspect the packaging and the transfer switch for signs of shipping damage. Unpack the transfer switch as soon as possible and inspect the exterior and interior for shipping damage. If damage and/or rough handling is evident, immediately file a damage claim with the transportation company.

2.2.2 Lifting

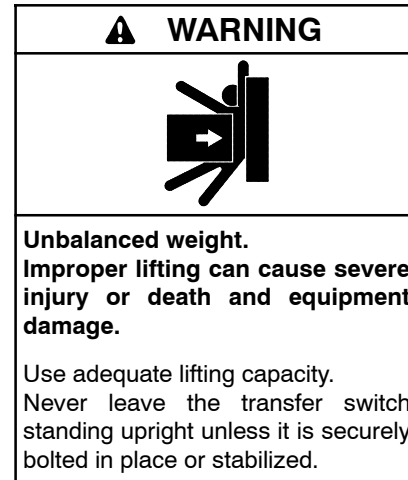

The transfer switch weighs approximately 114 kg (250 lbs.). Use a spreader bar to lift the transfer switch. Attach the bar only to the enclosure's mounting holes or lifting brackets; do not lift the unit any other way. Close and latch the enclosure door before moving the unit.

2.2.3 Storage

Store the transfer switch in its protective packing until final installation. Protect the transfer switch at all times from moisture, construction grit, and metal chips. Avoid storage in low-temperature and high-humidity areas where moisture could condense on the unit. See Figure 2-1 for acceptable storage temperatures.

Environmental Specifications	
Operating Temperature	-20°C to 70°C (-4°F to 158°F)
Storage Temperature	-40°C to 85°C (-40°F to 185°F)
Humidity	5% to 95% noncondensing

Figure 2-1 Environmental Specifications

2.2.4 Unpacking

Allow the equipment to warm to room temperature for at least 24 hours before unpacking to prevent condensation on the electrical apparatus. Use care when unpacking to avoid damaging transfer switch components. Remove dirt and packing material that may have accumulated in the transfer switch or any of its components.

Note: Do not use compressed air to clean the switch. Cleaning with compressed air can cause debris to lodge in the components and damage the switch.

2.3 Installation

NOTICE

Foreign material contamination. Cover the transfer switch during installation to keep dirt, grit, metal drill chips, and other debris out of the components. Cover the solenoid mechanism during installation. After installation, use the manual operating handle to cycle the contactor to verify that it operates freely. Do not use a screwdriver to force the contactor mechanism.

Hardware damage. The transfer switch may use both American Standard and metric hardware. Use the correct size tools to prevent rounding of the bolt heads and nuts.

Have the equipment installed only by trained and qualified personnel, and verify that the installation complies with applicable codes and standards.

Check the system voltage and frequency. Compare the voltage and frequency shown on the transfer switch nameplate to the source voltage and frequency. See Figure 2-2. Do not install the transfer switch if the system voltage and frequency are different from the nominal normal (utility) source voltage and frequency or the nominal emergency source voltage and frequency shown on the generator set nameplate.

Plan the installation. Use the dimensions given on the enclosure dimension (ADV) drawing in Section 6. Select a mounting site that complies with local electrical code restrictions for the enclosure type. Mount the transfer switch as close to the load and power sources as possible. Allow adequate space to fully open the enclosure and to service the switch. Provide cable bending space and clearance to live metal parts.

Outdoor installations. Transfer switches with NEMA 3R enclosures can be installed outdoors. In locations with very high ambient temperatures, installation in a shaded area or a location with the enclosure door facing away from direct sunlight is recommended.

Install the ATS. Mount the transfer switch to a wall or other rigid vertical supporting structure. Clearance holes through the back of each enclosure are provided for mounting. Verify that the transfer switch enclosure is level and plumb. Use shims to plumb the enclosure, if necessary. Verify that the door hinges are vertical to avoid distortion of the enclosure or door.

Install the optional cam-lock box, if equipped. Remove the cover plate from the cam-lock box wire entrance opening on the right side of the transfer switch. Attach the cam-lock box to the side of the transfer switch or mount it to the wall. Refer to the instructions provided with the cam-lock box for more information.

KOHLER
KOHLER CO. KOHLER WI. USA
1-800-544-2444

TRANSFER SWITCH
FOR EMERGENCY SYSTEMS
NEMA ENCLOSURE
MFG. DATE
ACCESSORIES:

MATERIAL
MODEL
SERIAL NO.
AMPS
WIRES
POLES
VOLTS
PHASE
HERTZ

BAR CODE


LISTED

TRANSFER SWITCH
FOR EMERGENCY SYSTEMS

GM21291

Figure 2-2 Nameplate (typical)

2.4 Manual Operation Check

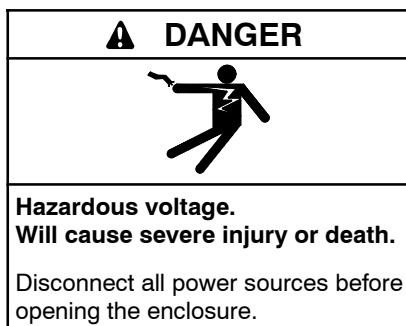

Note: A manual operation handle is provided on the transfer switch *for maintenance purposes only*. Do not use the manual operation handle to transfer the load with the power connected.

Use the manual operation handle to check the manual operation before energizing the transfer switch. On programmed-transition models, check the operation of both the Normal and Emergency operators. Use the following manual operation procedure to verify that the contactor operates smoothly without binding.

Note: A contactor in normal and serviceable condition operates smoothly without binding. Do not place the transfer switch into service if the contactor does not operate smoothly; contact an authorized distributor/dealer to service the contactor.

The transfer switch has an attached manual operating handle. See Figure 2-3.

Manual Operation Test Procedure

1. Turn the attached handle to manually operate the transfer switch. See Figure 2-3. It should operate smoothly without any binding. If it does not, check for shipping damage or construction debris.
2. Return the transfer switch to the Normal position.


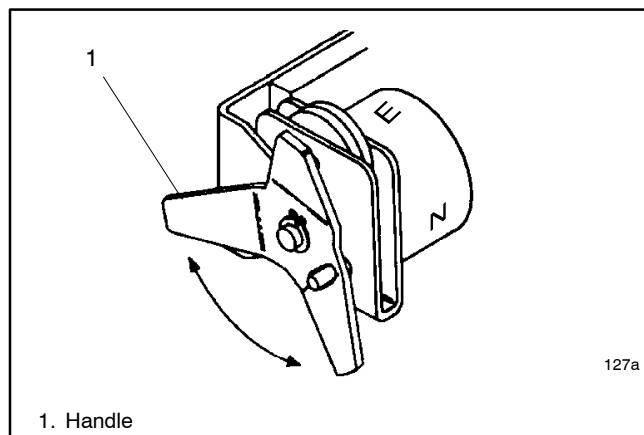


Figure 2-3 Manual Operation Handle

2.5 Controller

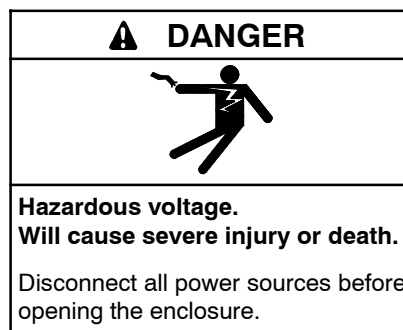

NOTICE

Electrostatic discharge damage. Electrostatic discharge (ESD) damages electronic circuit boards. Prevent electrostatic discharge damage by wearing an approved grounding wrist strap when handling electronic circuit boards or integrated circuits. An approved grounding wrist strap provides a high resistance (about 1 megohm), *not a direct short*, to ground.

The controller's logic board is mounted in a plastic housing on the inside of the transfer switch enclosure door.

2.5.1 Controller Connection

Verify that the contactor harness is connected to the controller (through the logic disconnect switch, if equipped). See the controller Operation manual. See list of Related Materials in the Introduction for document numbers.

Note: Verify that the power is disconnected before connecting or disconnecting the contactor harness.

2.5.2 Controller Ground

Verify that the grounding wire is connected from the controller to the stud on the door and to the inside of the enclosure. This connection provides proper grounding that does not rely upon the door hinges.

2.5.3 Other Connections

Refer to the transfer switch wiring diagram or the controller Operation Manual for the following controller and accessory connections.

- Inputs and outputs
- Communications connections

2.6 Electrical Wiring


All internal electrical connections are factory-wired and tested. Field installation includes connecting the sources, loads, generator start circuit(s), and auxiliary circuits, if used.

Refer to the wiring diagrams in Section 6. Observe all applicable national, state, and local electrical codes during installation.

Install DC, control, and communication system wiring in separate conduit from AC power wiring.

It is not necessary to remove pole covers from the transfer switch for cabling. If you do remove them, reinstall them carefully.

⚠ WARNING



Accidental starting.
Can cause severe injury or death.

Disconnect the battery cables before working on the generator set. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery.

Disabling the generator set. Accidental starting can cause severe injury or death. Before working on the generator set or equipment connected to the set, disable the generator set as follows: (1) Press the generator set off/reset button to shut down the generator set. (2) Disconnect the power to the battery charger, if equipped. (3) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent the starting of the generator set by the remote start/stop switch.

⚠ DANGER



Hazardous voltage.
Will cause severe injury or death.

Disconnect all power sources before opening the enclosure.

Making line or auxiliary connections. Hazardous voltage can cause severe injury or death. To prevent electrical shock deenergize the normal power source before making any line or auxiliary connections.

Grounding electrical equipment. Hazardous voltage can cause severe injury or death. Electrocutation is possible whenever electricity is present. Ensure you comply with all applicable codes and standards. Electrically ground the generator set and related equipment and electrical circuits. Turn off the main circuit breakers of all power sources before servicing the equipment. Never contact electrical leads or appliances when standing in water or on wet ground because these conditions increase the risk of electrocution.

NOTICE

Foreign material contamination. Cover the transfer switch during installation to keep dirt, grit, metal drill chips, and other debris out of the components. Cover the solenoid mechanism during installation. After installation, use the manual operating handle to cycle the contactor to verify that it operates freely. Do not use a screwdriver to force the contactor mechanism.

2.6.1 Source and Load Connections

Determine the cable size. Refer to the transfer switch dimension drawing in Section 6 to determine the cable size and number of cables required for the transfer switch. Make sure that the cables are suitable for use with the transfer switch lugs. Watertight conduit hubs may be required for outdoor use.

Drill the entry holes. Cover the transfer switch to protect it from metal chips and construction grit. Then drill entry holes for the conductors at the locations shown on the enclosure drawings. Remove debris from the enclosure with a vacuum cleaner. *Do not use compressed air to clean the switch because it can cause debris to lodge in the components and cause damage.*

Install and test the power cables. Leave sufficient slack in the power leads to reach all of the power connecting lugs on the power switching device. Test the power conductors before connecting them to the transfer switch. Installing power cables in conduit, cable troughs and ceiling-suspended hangers often requires considerable force. Pulling cables can damage insulation and stretch or break the conductor's strands. Test the cables after pulling them into position and *before* they are connected to verify that they are not defective and that they were not damaged during installation.

Install the cable spacers provided with the transfer switch as shown in Figure 2-4.

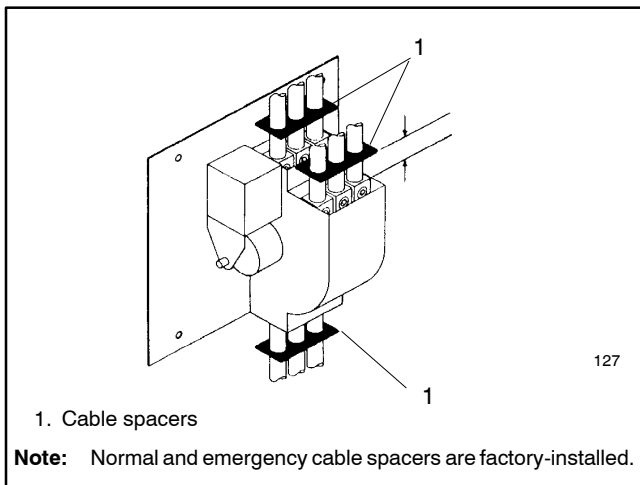


Figure 2-4 Cable Spacers

Connect the cables. Be careful when stripping insulation from the cables; avoid nicking or ringing the conductor. Clean cables with a wire brush to remove surface oxides before connecting them to the terminals. Apply joint compound to the connections of any aluminum conductors.

See Figure 2-5 and the drawings and diagrams in Section 6.

The connection points on the contactor are labeled Normal, Emergency, and Load. The normal and emergency source circuit breakers are factory-connected to the contactor lugs. It may be necessary to disconnect the emergency source cables at the contactor for access to the load connections. Reconnect the emergency source cables after connecting the load cables. Be sure to use the cable spacers shown in Figure 2-4.

Connect the normal (utility) source to the normal source circuit breaker. Connect the standby generator (s) to the emergency source circuit breaker(s).

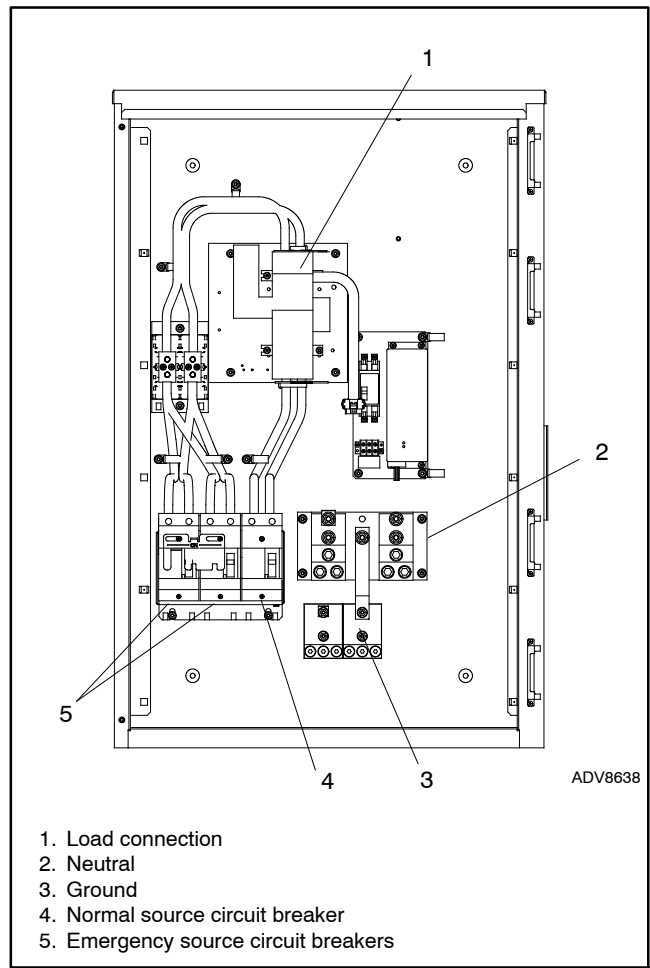


Figure 2-5 Connection Points (see the wiring diagram in Section 6)

Tighten the lugs. Verify that all connections are consistent with drawings before tightening the lugs. Tighten all cable lug connections to the torque values shown on the label on the switch. (See Figure 2-6 for a typical rating/torque label.) Carefully wipe off any excess joint compound after tightening the terminal lugs.


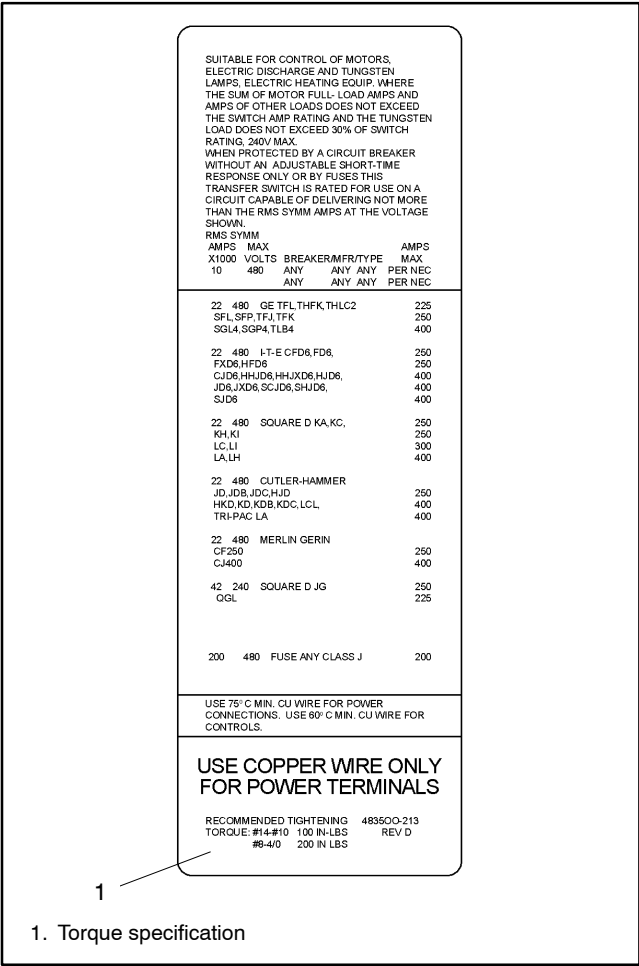


Figure 2-6 Typical Rating/Torque Label

2.6.2 Engine Start Connection

⚠ WARNING



Accidental starting.
Can cause severe injury or death.

Disconnect the battery cables before working on the generator set. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery.

Disabling the generator set. Accidental starting can cause severe injury or death. Before working on the generator set or equipment connected to the set, disable the generator set as follows: (1) Press the generator set off/reset button to shut down the generator set. (2) Disconnect the power to the battery charger, if equipped. (3) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent the starting of the generator set by the remote start/stop switch.

Prevent the generator set from starting by moving the generator set master switch to the OFF position; disconnecting power to the generator engine start battery charger, if installed; and disconnecting all generator engine start battery cables, negative (-) leads first.

Connect the generator set remote starting circuit to the engine start connections located on the transfer switch contactor assembly. The engine start terminals are labeled with a red decal. See Figure 2-7 for the location of the engine start contacts. Refer to the generator set installation manual for wire size specifications.

Engine Start Contacts	
Contact Rating	2 A @ 30 VDC/250 VAC

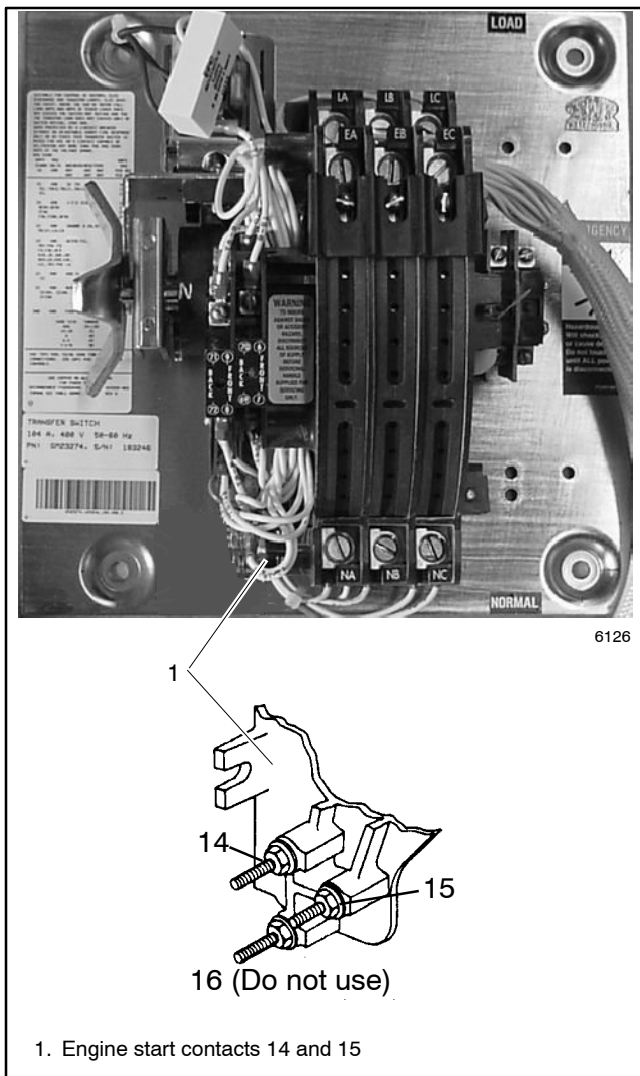


Figure 2-7 Engine Start Contacts

2.6.3 Auxiliary Contacts

The transfer switch is equipped with two sets of auxiliary contacts (two normal and two emergency). Connect the auxiliary contacts to customer-supplied alarms, remote indicators, or other devices. Auxiliary contacts provide contacts that close when the transfer switch is in the Normal position and contacts that close when the transfer switch is in the Emergency position. Refer to the schematic diagram provided with the transfer switch for auxiliary contact connection information.

Figure 2-8 shows the location of the auxiliary contacts.

Follow the wire size and tightening torque specifications shown on the decal on the transfer switch.

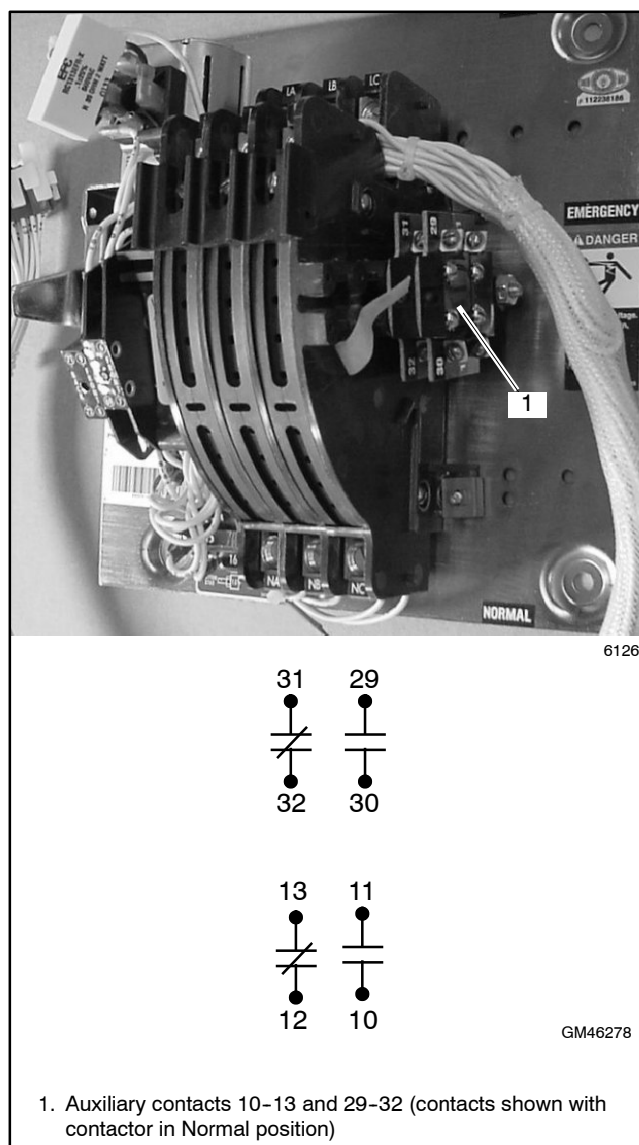


Figure 2-8 Auxiliary Contacts

2.6.4 Mobile Generator Connection

The transfer switch is equipped with two emergency source circuit breakers, which allow connection of two generator sets. Typically one generator set will be a permanently installed standby generator, and the other will be a mobile generator temporarily connected through a cam-lock box.

Check the system voltage and frequency. Compare the voltage and frequency shown on the transfer switch nameplate to the generator voltage and frequency. See Figure 2-2. Do not connect the generator to the transfer switch if the system voltage and frequency are different from the nominal normal (utility) source voltage and frequency or the transfer switch voltage and frequency shown on the ATS nameplate.

Use the optional cam-lock box to connect the mobile generator set. Refer to the documentation provided with the cam-lock box for instructions.

2.7 Functional Tests

Perform the functional tests described in Section 3 before putting the transfer switch into operation.

2.8 System Setup

Set the controller's current time and date. See the controller Operation Manual for instructions.

The transfer switch is factory-set with default settings for time delays and other parameters. See the controller Operation Manual for instructions to view and change settings, if necessary.

Note: Use caution when changing transfer switch settings. The source voltage and frequency settings must match the values shown on the transfer switch nameplate.

2.9 Exerciser Setup

Set the exerciser to start and run the generator set at least once a week. See the controller Operation Manual for instructions.

2.10 Startup Notification

Complete a Startup Notification Form and submit it to the manufacturer within 60 days of the initial startup date. The Startup Notification Form covers all equipment in the power system. Power systems not registered within 60 days of startup are automatically registered using the manufacturer's ship date as the startup date.

3.1 Introduction

Be sure to perform all of the functional tests described in this section before putting the transfer switch into operation.

The functional tests include the following checks:


- Manual Operation Test
- Voltage Checks
- Lamp Test
- Automatic Operation Test

Note: Perform these checks in the order presented to avoid damaging the ATS.

Read all instructions on the labels affixed to the automatic transfer switch before proceeding.

3.2 Manual Operation Test

If you have not already done so, test the contactor manual operation before proceeding to the voltage check and electrical operation test.

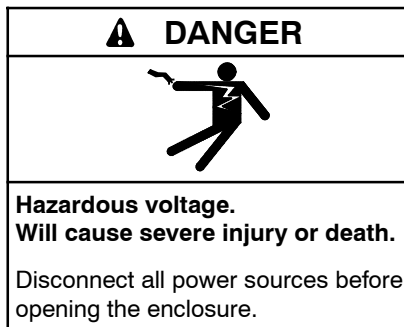

Note: Disable the generator set and disconnect the power by opening the circuit breakers or switches for both sources before manually operating the transfer switch.

Follow the instructions in Section 2.4 to check the transfer switch manual operation.

A contactor in normal and serviceable condition transfers smoothly without binding when operated manually. Do not place the transfer switch into service if the contactor does not operate smoothly without binding; contact an authorized distributor/dealer to service the contactor.

3.3 Voltage Check

The voltage, frequency, and phasing of the transfer switch and the power sources must be the same to avoid damage to loads and the transfer switch. Compare the voltage and frequency ratings of the utility source, transfer switch, and generator set, and verify that the ratings are all the same.

Use the voltage check procedure explained in this section to verify that the voltages and phasing of all power sources are compatible with the transfer switch before connecting the power switching device and controller wire harnesses together.


Follow the instructions provided with the generator set to prepare the generator set for operation.

Read and understand all instructions on installation drawings and labels on the switch. Note any optional accessories that have been furnished with the switch and review their operation.

Note: Source N is the source connected to the normal side of the contactor. Source E is the source connected to the emergency side of the contactor. Verify that the source leads are connected to the correct lugs before proceeding.

The voltage check procedure requires the following equipment:

- A digital voltmeter (DVM) with electrically insulated probes capable of measuring the rated voltage and frequency
- A phase rotation meter

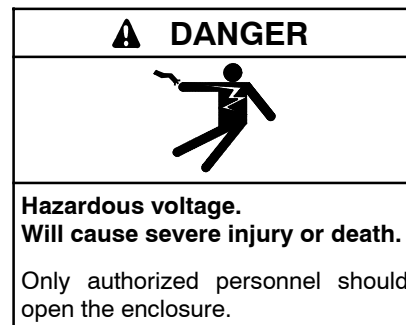

Testing live electrical circuits. Hazardous voltage or current can cause severe injury or death. Have trained and qualified personnel take diagnostic measurements of live circuits. Use adequately rated test equipment with electrically insulated probes and follow the instructions of the test equipment manufacturer when performing voltage tests. Observe the following precautions when performing voltage tests: (1) Remove all jewelry. (2) Stand on a dry, approved electrically insulated mat. (3) Do not touch the enclosure or components inside the enclosure. (4) Be prepared for the system to operate automatically.
(600 volts and under)

Voltage Check Procedure

1. If Source N is a generator set, move the generator set master switch to the RUN position. The generator set should start.
2. Close the Source N circuit breaker or switch.
3. Use a voltmeter to check the Source N (normal) phase-to-phase and phase-to-neutral (if applicable) terminal voltages and frequency.
 - a. If Source N is the utility and the measured input does not match the voltage and frequency shown on the transfer switch nameplate, **STOP!** Do not proceed further in installation because the transfer switch is not designed for the application—call your distributor/dealer to order the correct transfer switch.
 - b. If Source N is a generator set and the generator set output voltage and frequency do not match the nominal system voltage and frequency shown on the transfer switch nameplate, follow the manufacturer's instructions to adjust the generator set. The automatic transfer switch will only function with the rated system voltage and frequency specified on the nameplate.
4. Use a phase rotation meter to check the phase rotation at the Source N (normal) terminals. Rewire the transfer switch Source N terminals to obtain the correct phase sequence if necessary.

Note: The default setting for the phase rotation on the controller is ABC. If the application uses a phase rotation of BAC, use the Source Setup screen to change the phase rotation setting on the controller.

5. If the source is a generator set, stop the generator set by moving the master switch to the OFF position.
6. Disconnect Source N by opening upstream circuit breakers or switches.
7. Repeat steps 1 through 5 for Source E. Then proceed to step 8.
8. Disconnect both sources to the transfer switch by opening the circuit breakers or switches.
9. Close and lock the transfer switch enclosure door.
10. Reconnect both power sources by closing the circuit breakers or switches.
11. Move the generator set master switch to the AUTO position.

Note: If the engine cooldown time delay setting is not set to zero (default setting), the generator set may start and run until the Time Delay Engine Cooldown (TDEC) ends.

12. Perform the lamp test and then proceed to the automatic operation test.

3.4 Lamp Test

Refer to the controller Operation Manual for instructions to perform a lamp test. Verify that all controller LEDs or lamps light during the test.

3.5 Automatic Operation Test

Check the transfer switch's automatic control system immediately after the voltage check. Refer to the controller Operation Manual for instructions to run the automatic operation test.

Note: Close and lock the enclosure door before starting the test procedure.

This completes the functional tests.

Section 4 Surge Protection Device (SPD)

4.1 Surge Protective Device (SPD)

A surge protective device (SPD) is installed on the normal source side. The SPD protects the system from voltage surges, preventing damage to household loads. The SPD resets automatically.

SPD Specifications	
Surge current	160 kA per phase
Let-through voltage	430 V @ 3 kA 690 V @ 10 kA

Figure 4-1 SPD Specifications

4.1.1 Diagnostic LEDs

Red and green indicators on the surge protective device (SPD) indicate connected power and protected status. See Figure 4-2 and Figure 4-3.

Note: All wires must be connected and power applied for the LEDs to illuminate.

If the red indicator is on, the SPD no longer provides protection. Replace the SPD. See Section 4.3 for replacement instructions.

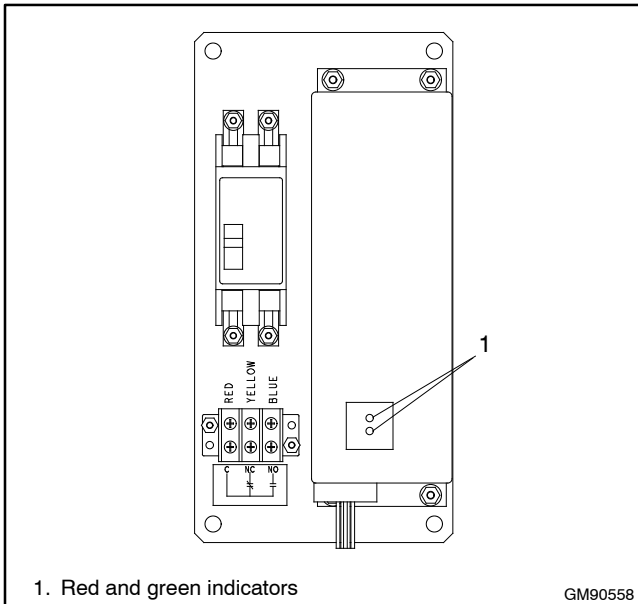


Figure 4-2 SPD Status Indicators


Green LED	Red LED	Status
ON	OFF	AC power is present and protection is provided.
OFF	ON	AC power is present but the SPD module needs replacement. The remote indication changes state. See Section 4.3 for SPD replacement instructions.
OFF	OFF	AC power or ground is missing: Verify that wire connections are correct. Make sure that circuit breaker is engaged. Check panel for power.

Figure 4-3 SPD Diagnostic Indication

4.1.2 Remote Indication

An indicator for the surge protective device (SPD) can also be connected to the accessory connection terminal block. The contact changes state to indicate that the SPD module needs replacement.

4.2 SPD Inspection

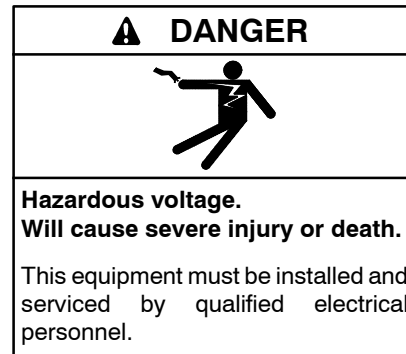


At intervals not exceeding two months, check the following items on the surge protective device (SPD):

- Status indication LEDs
- Condition of connecting leads

4.3 Surge Protective Device (SPD) Replacement

The green indicator light goes out if the SPD capability is exceeded or if there is an internal safety component failure in the SPD module. See Figure 4-3. Replace the module if the green indicator is off and the red indicator is on. Follow the replacement procedure in this section and see Figure 4-4.

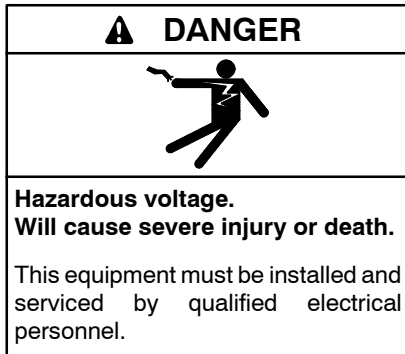

Servicing the transfer switch. Hazardous voltage can cause severe injury or death. Deenergize all power sources before servicing. Turn off the main circuit breakers of all transfer switch power sources and disable all generator sets as follows: (1) Move all generator set master controller switches to the OFF position. (2) Disconnect power to all battery chargers. (3) Disconnect all battery cables, negative (-) leads first. Reconnect negative (-) leads last when reconnecting the battery cables after servicing. Follow these precautions to prevent the starting of generator sets by an automatic transfer switch, remote start/stop switch, or engine start command from a remote computer. Before servicing any components inside the enclosure: (1) Remove all jewelry. (2) Stand on a dry, approved electrically insulated mat. (3) Test circuits with a voltmeter to verify that they are deenergized.

SPD Replacement Procedure

1. Disable the generator sets to prevent starting as follows:
 - a. Turn the generator sets OFF: Move the generator set master switch to the OFF position or press the OFF button on the generator set controller.
 - b. Disconnect power to the battery charger.
 - c. Disconnect the generator set engine starting battery, negative (-) lead first.
2. Open the ATS enclosure door.

3. Move all three source circuit breakers to the OFF (open) position.

Note: Voltage is still present at the inlet side of the normal source circuit breaker and may be present at the generator circuit breakers.

4. Remove the ATS enclosure's inner panel.
5. See Figure 4-4 and the service entrance switch wiring diagram in Section 6.
 - a. Turn the SPD circuit breaker OFF.
 - b. Note connections and disconnect the SPD leads to the SPD circuit breaker, ground, and neutral.
 - c. Disconnect the SPD red, yellow, and blue leads from the customer connection terminal block.

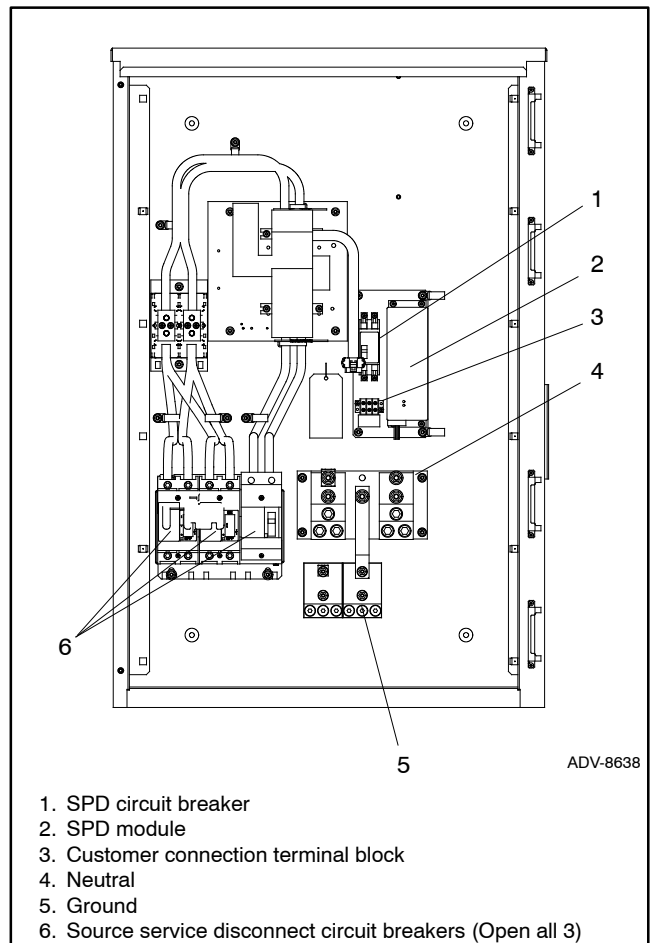


Figure 4-4 SPD Module Replacement

6. Remove the SPD mounting screws.
7. Install the new SPD and tighten the mounting screws to 3 Nm (26 in. lb.).
8. Connect the SPD leads. See the transfer switch wiring diagram in Section 6. Also see Figure 4-5.
9. Replace the enclosure's inner panel.
10. Close the Normal source service disconnect circuit breaker.
11. Reconnect the generator set engine starting battery, negative (-) lead last.
12. Reconnect power to the battery charger.
13. Close the ATS enclosure door.
14. Put the generator set into automatic (standby) mode: Move the generator set master switch to the AUTO position or press the AUTO button on the generator set controller.

SPD Lead	Connection
Black	SPD circuit breaker (to normal side of contactor)
Black	
White	Neutral lug
Green	Ground
Red	Customer connection terminal block C
Blue	Customer connection terminal block NO
Yellow	Customer connection terminal block NC

Figure 4-5 SPD Connections

Notes

Section 5 Source Circuit Breakers

5.1 Source Circuit Breakers

The transfer switch is equipped with one circuit breaker for the normal (utility) source and two emergency source circuit breakers, which allow connection of two generator sets to the transfer switch. A mechanical interlock allows only one of the emergency source circuit breakers to be closed (ON). Typically one generator set will be a permanently installed standby generator, and the other will be a mobile generator temporarily connected through a cam-lock box.

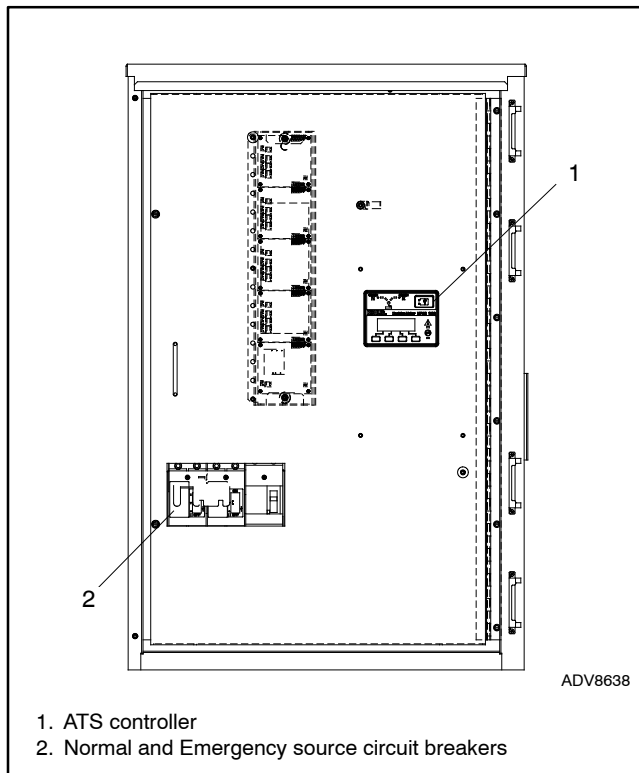


Figure 5-1 Source Circuit Breakers

5.2 Generator Selection Interlock

A mechanical interlock prevents connection of both generators to the load at the same time. The interlock allows only one of the two emergency source circuit breakers to be closed (ON). The other circuit breaker must be open (OFF).

Generator Selection Interlock Operation Procedure

To energize circuit breaker A:

1. Turn circuit breaker B to the OFF position.
2. Slide the mechanical interlock toward circuit breaker B.
3. Turn circuit breaker A to the ON position.

To energize circuit breaker B:

1. Turn circuit breaker A to the OFF position.
2. Slide the mechanical interlock toward circuit breaker A.
3. Turn circuit breaker B to the ON position.


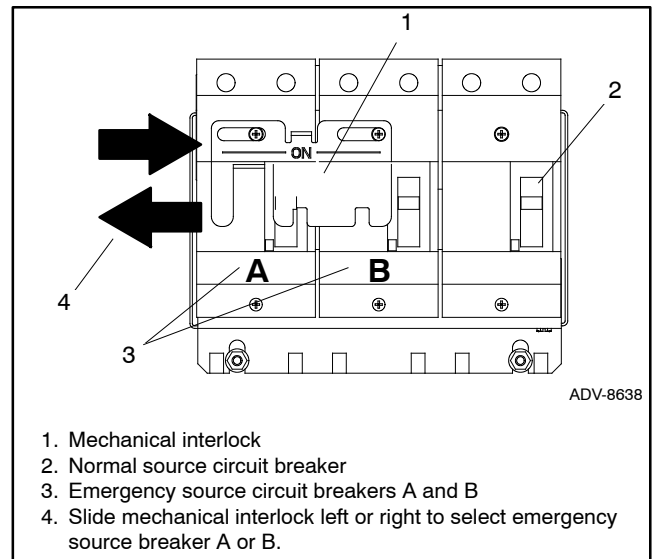


Figure 5-2 Generator Selection Interlock

5.3 Service Disconnect Procedure

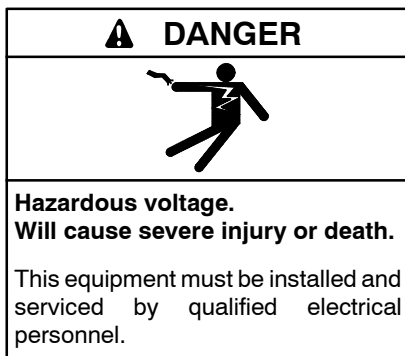

Use the following procedure to disconnect the utility source.

Note: Voltage is still present on the input side of the utility source circuit breaker after this procedure.

1. Prevent the emergency generator sets from starting:
 - a. Turn the generator sets OFF.
 - b. Disconnect power to the generator set battery charger. See the generator set instruction manuals if necessary.
 - c. Disconnect both generator set engine starting batteries, negative (-) lead first.
2. On the transfer switch, open the enclosure door. Do not open the inner panel.
3. Move the utility source circuit breaker to the OFF position.
4. Check the LEDs on the transfer switch controller's user interface. All LEDs should be off.

Note: Voltage is still present on the input side of the utility source circuit breaker. Do not remove the protective barrier around the utility source connection lugs.

5. To lock out the transfer switch, close and lock the enclosure door.

5.4 Source Circuit Breaker Reset

If the source circuit breaker trips due to an overcurrent condition, the transfer switch will issue an engine start signal and then transfer to the emergency source when it is available.

When the circuit breaker trips, the handle moves to an intermediate position. To reset a tripped circuit breaker, move the handle to the extreme OFF position and then to the ON position.

Section 6 Diagrams and Drawings

6.1 Drawing List

Drawings are arranged in alphanumeric order on the following pages.

Diagram or Drawing	Drawing Number	Page
Dimension Drawings		
Transfer Switch	ADV-8638	Sheet 1 28
		Sheet 2 29
Optional Cam-Lock Box	ADV-8657	30
Wiring Diagram and Schematic, Transfer Switches with Original MPAC™ 1500 Controller		
Schematic Diagram	GM92193	31
Wiring Diagram	GM92194	32
Wiring Diagram and Schematic, Transfer Switches with Decision-Maker® MPAC 1500 Controller		
Schematic Diagram	GM10250	33
Wiring Diagram	GM10251	34

6.2 Controller Identification

Transfer switches built before February 2, 2015 use the original MPAC™ 1500 transfer switch controller. Transfer switches built after February 2, 2015 use the Decision-Maker® MPAC 1500 controller. Compare the illustrations below to identify the controller.

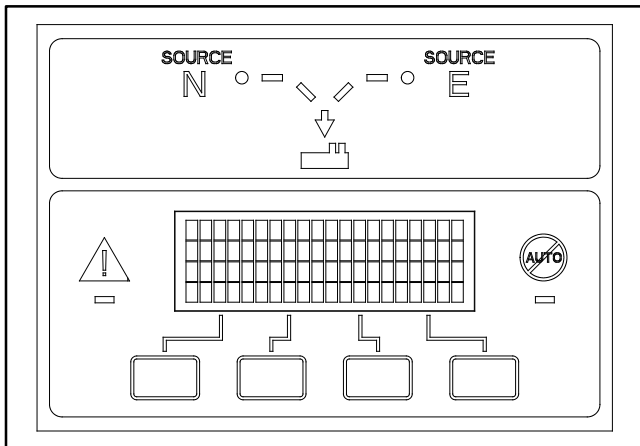


Figure 6-1 Original MPAC™ 1500 Controller



Figure 6-2 Decision-Maker® MPAC 1500 Controller

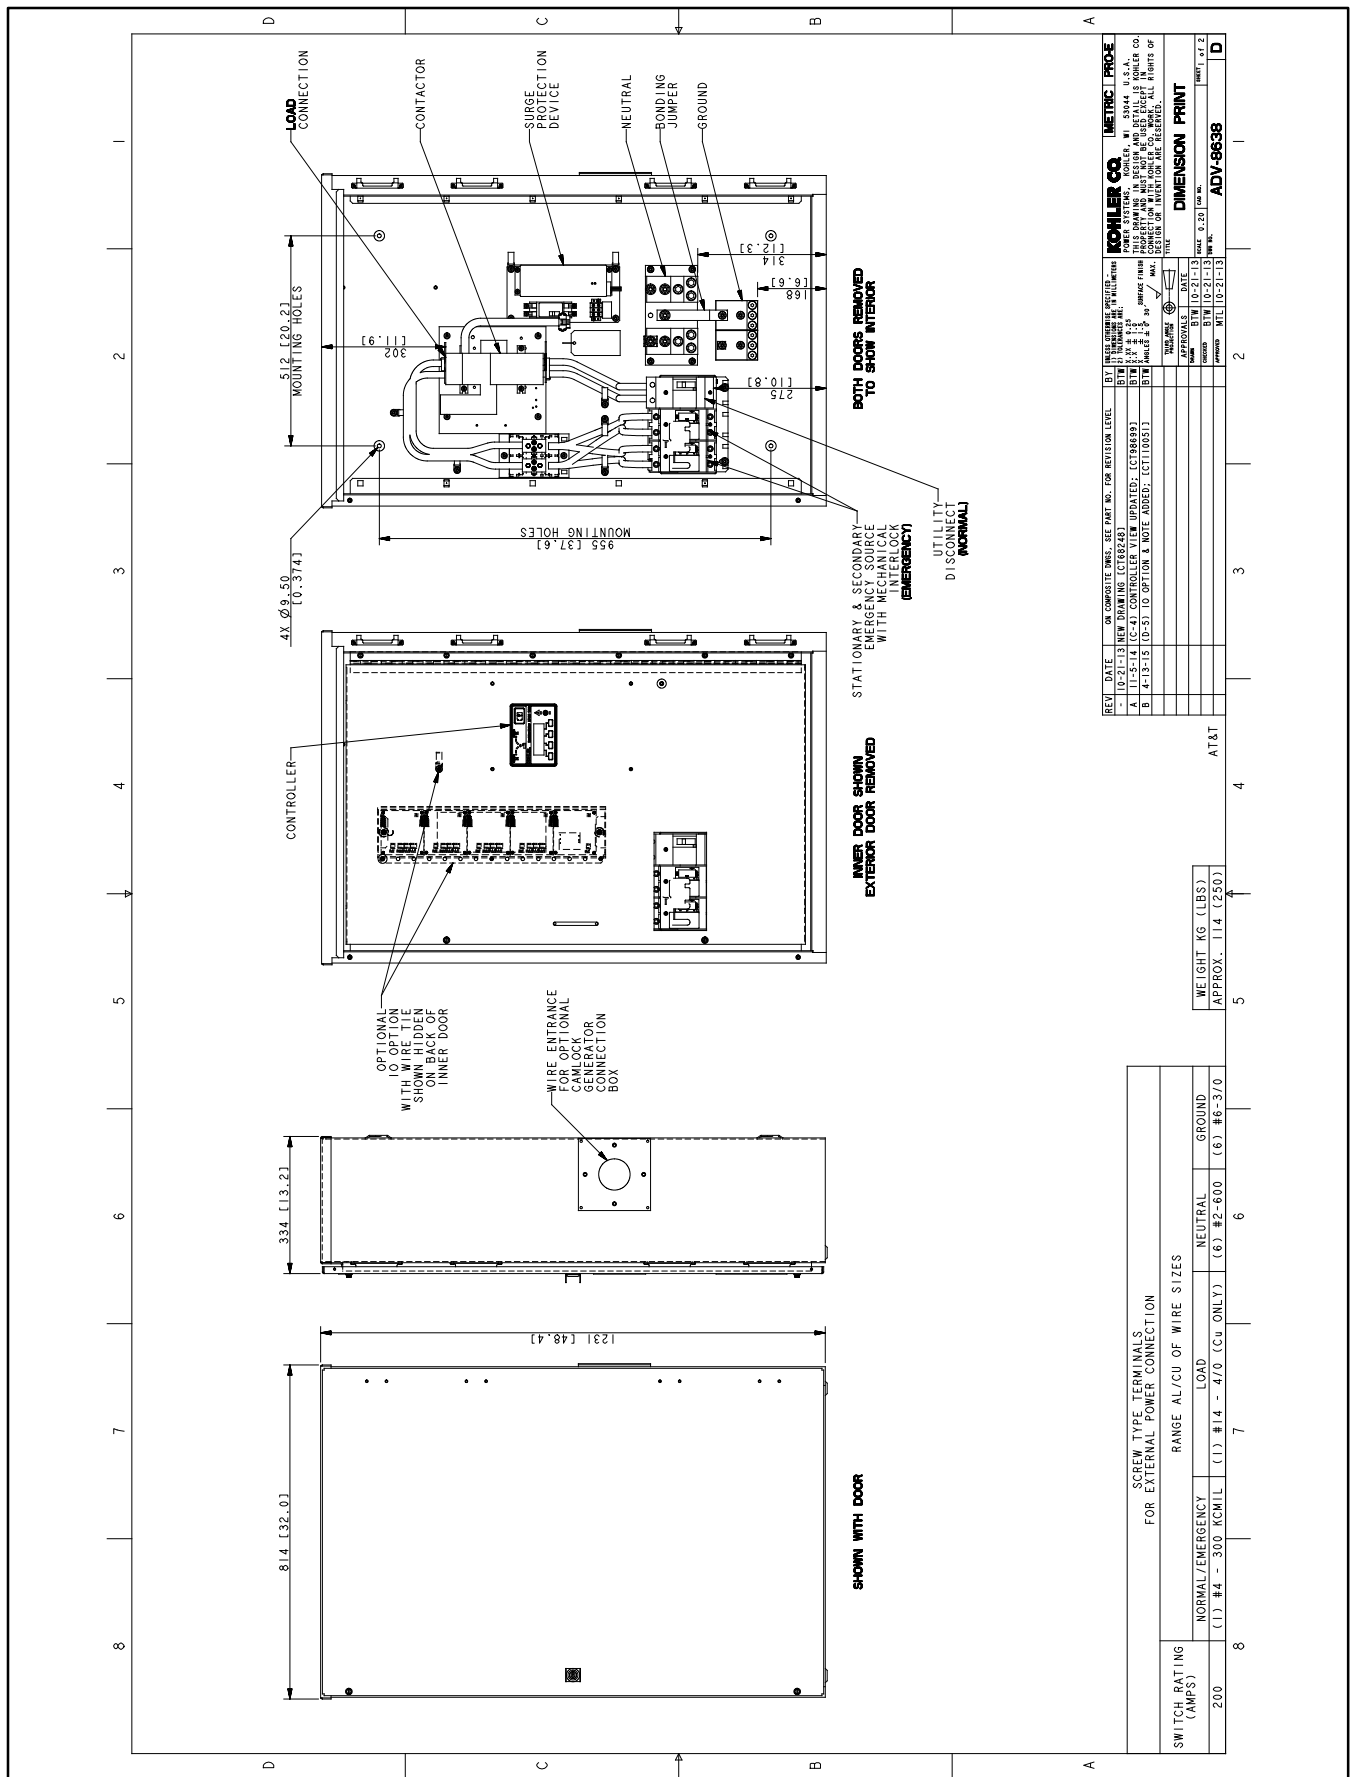


Figure 6-3 Transfer Switch Dimension Drawing, ADV-8638, Sheet 1

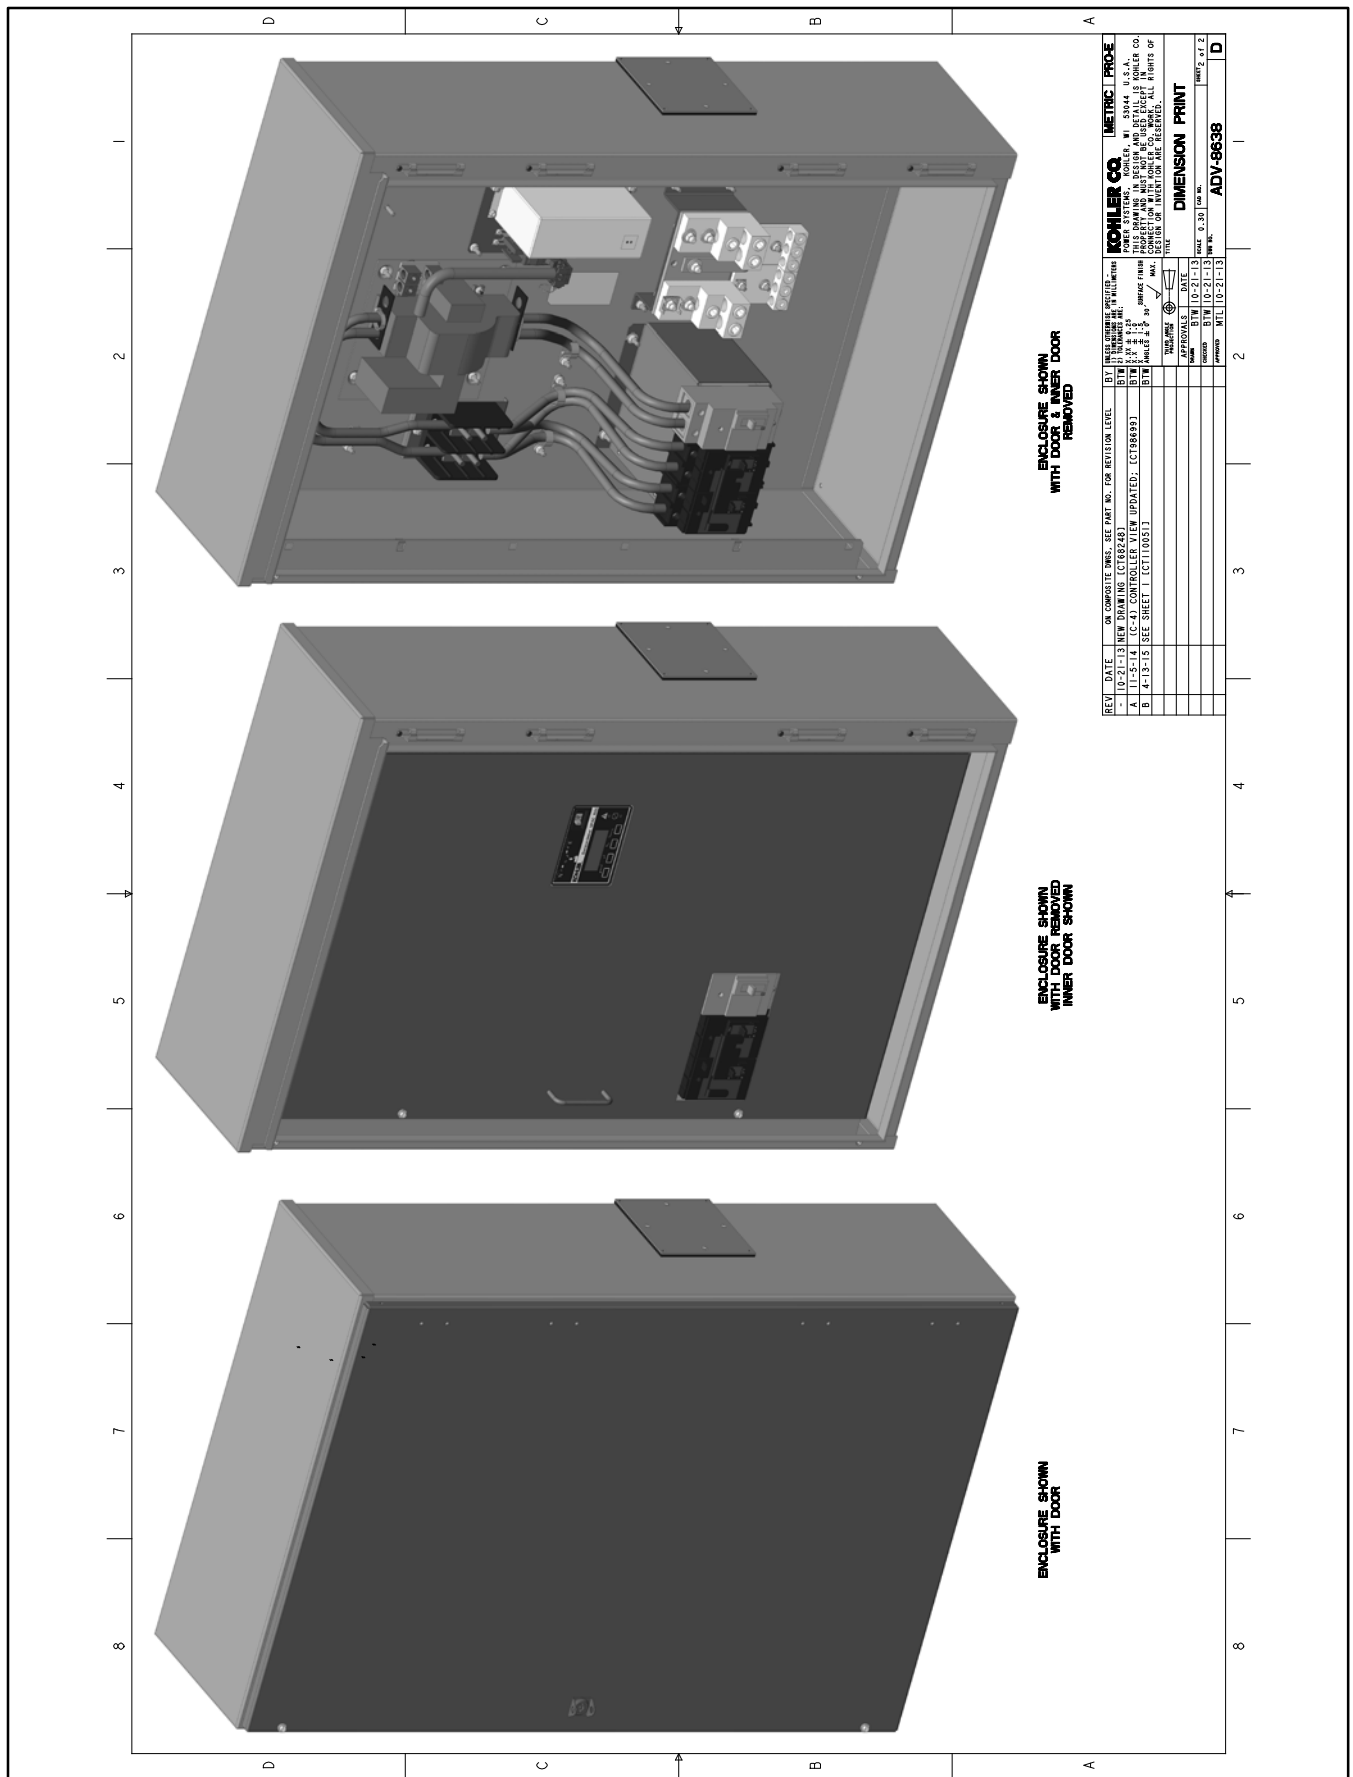


Figure 6-4 Transfer Switch Dimension Drawing, ADV-8638, Sheet 2



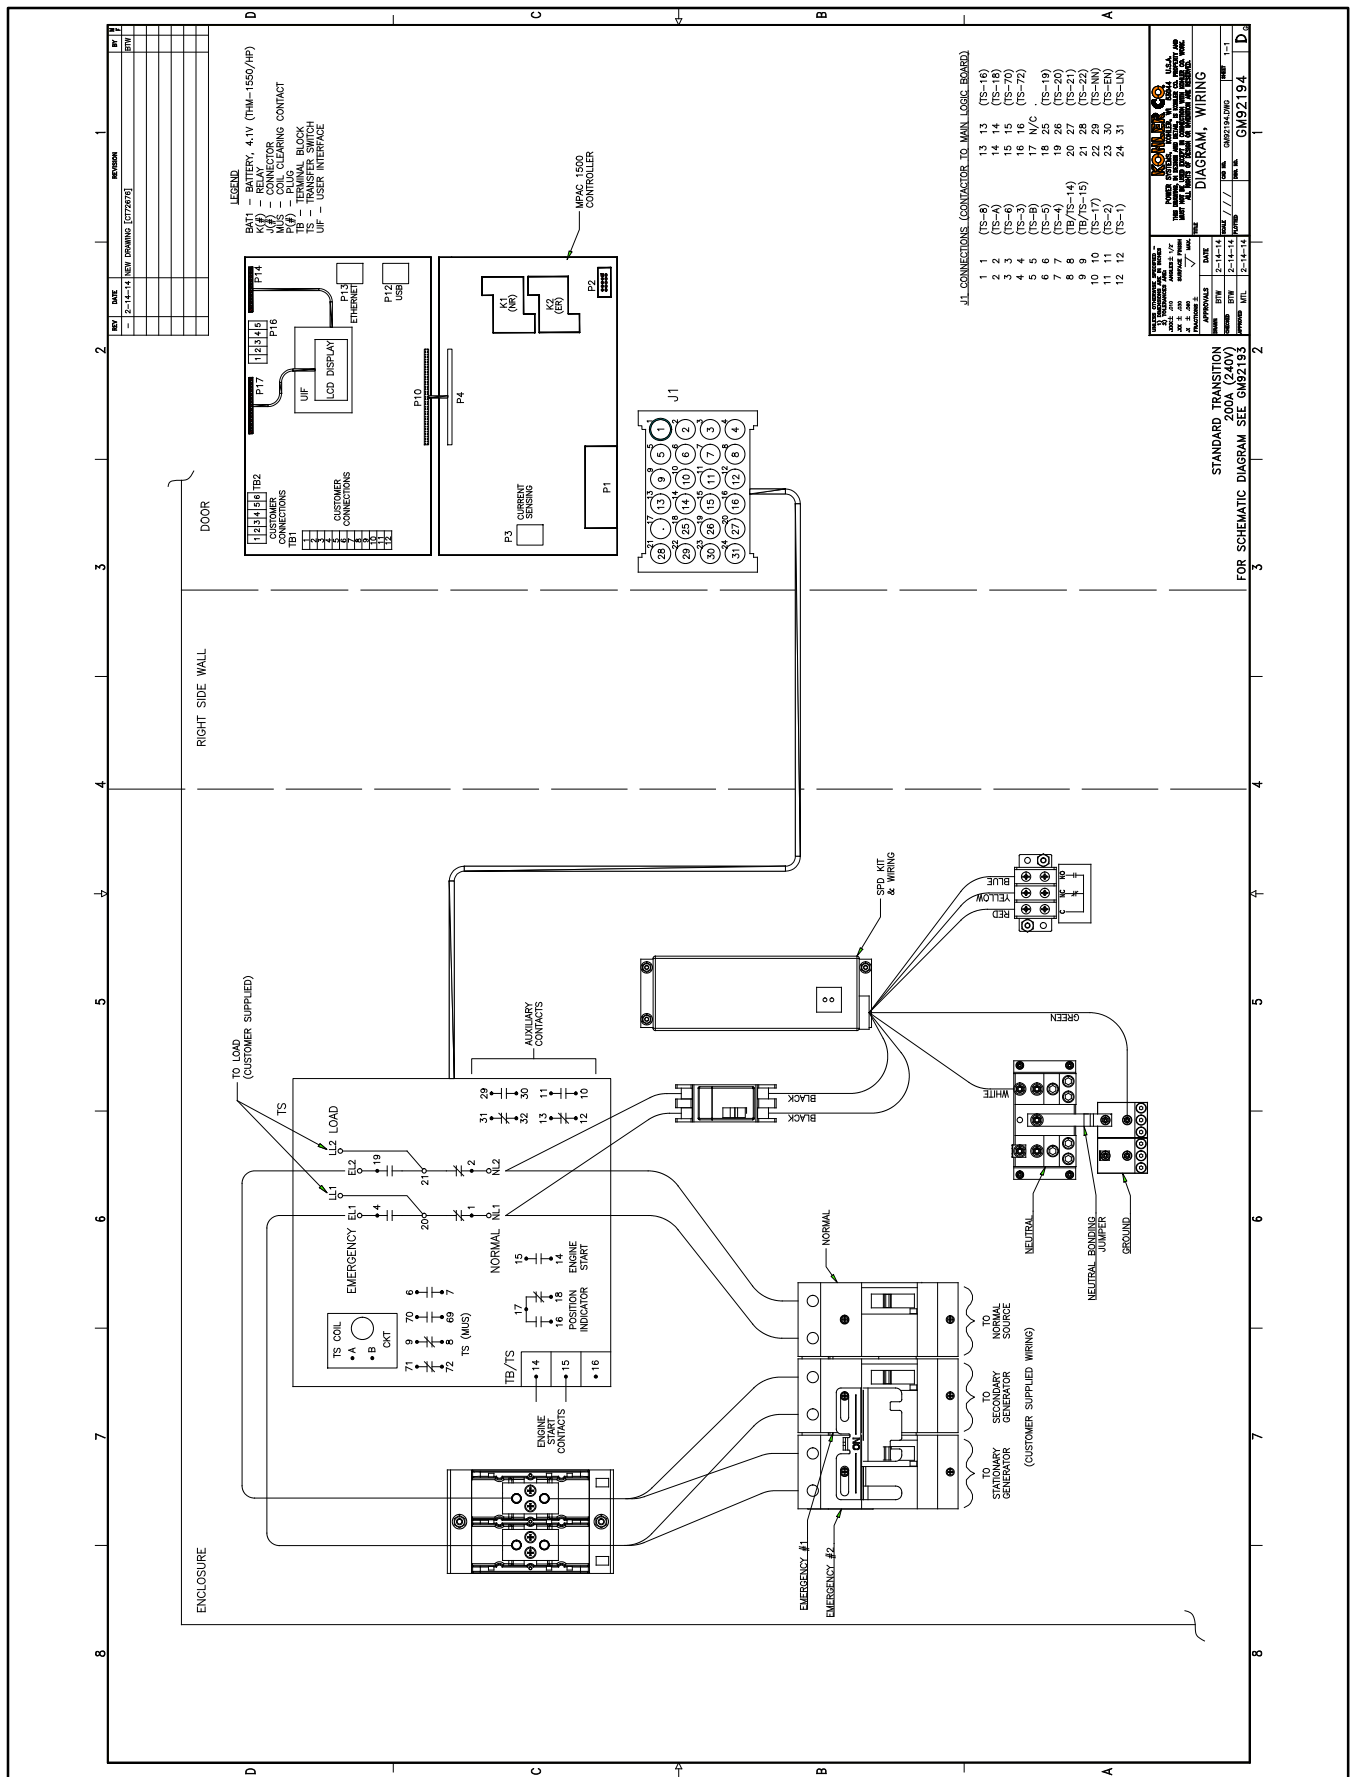


Figure 6-7 Wiring Diagram with Original MPAC™ 1500 Controller, GM92194



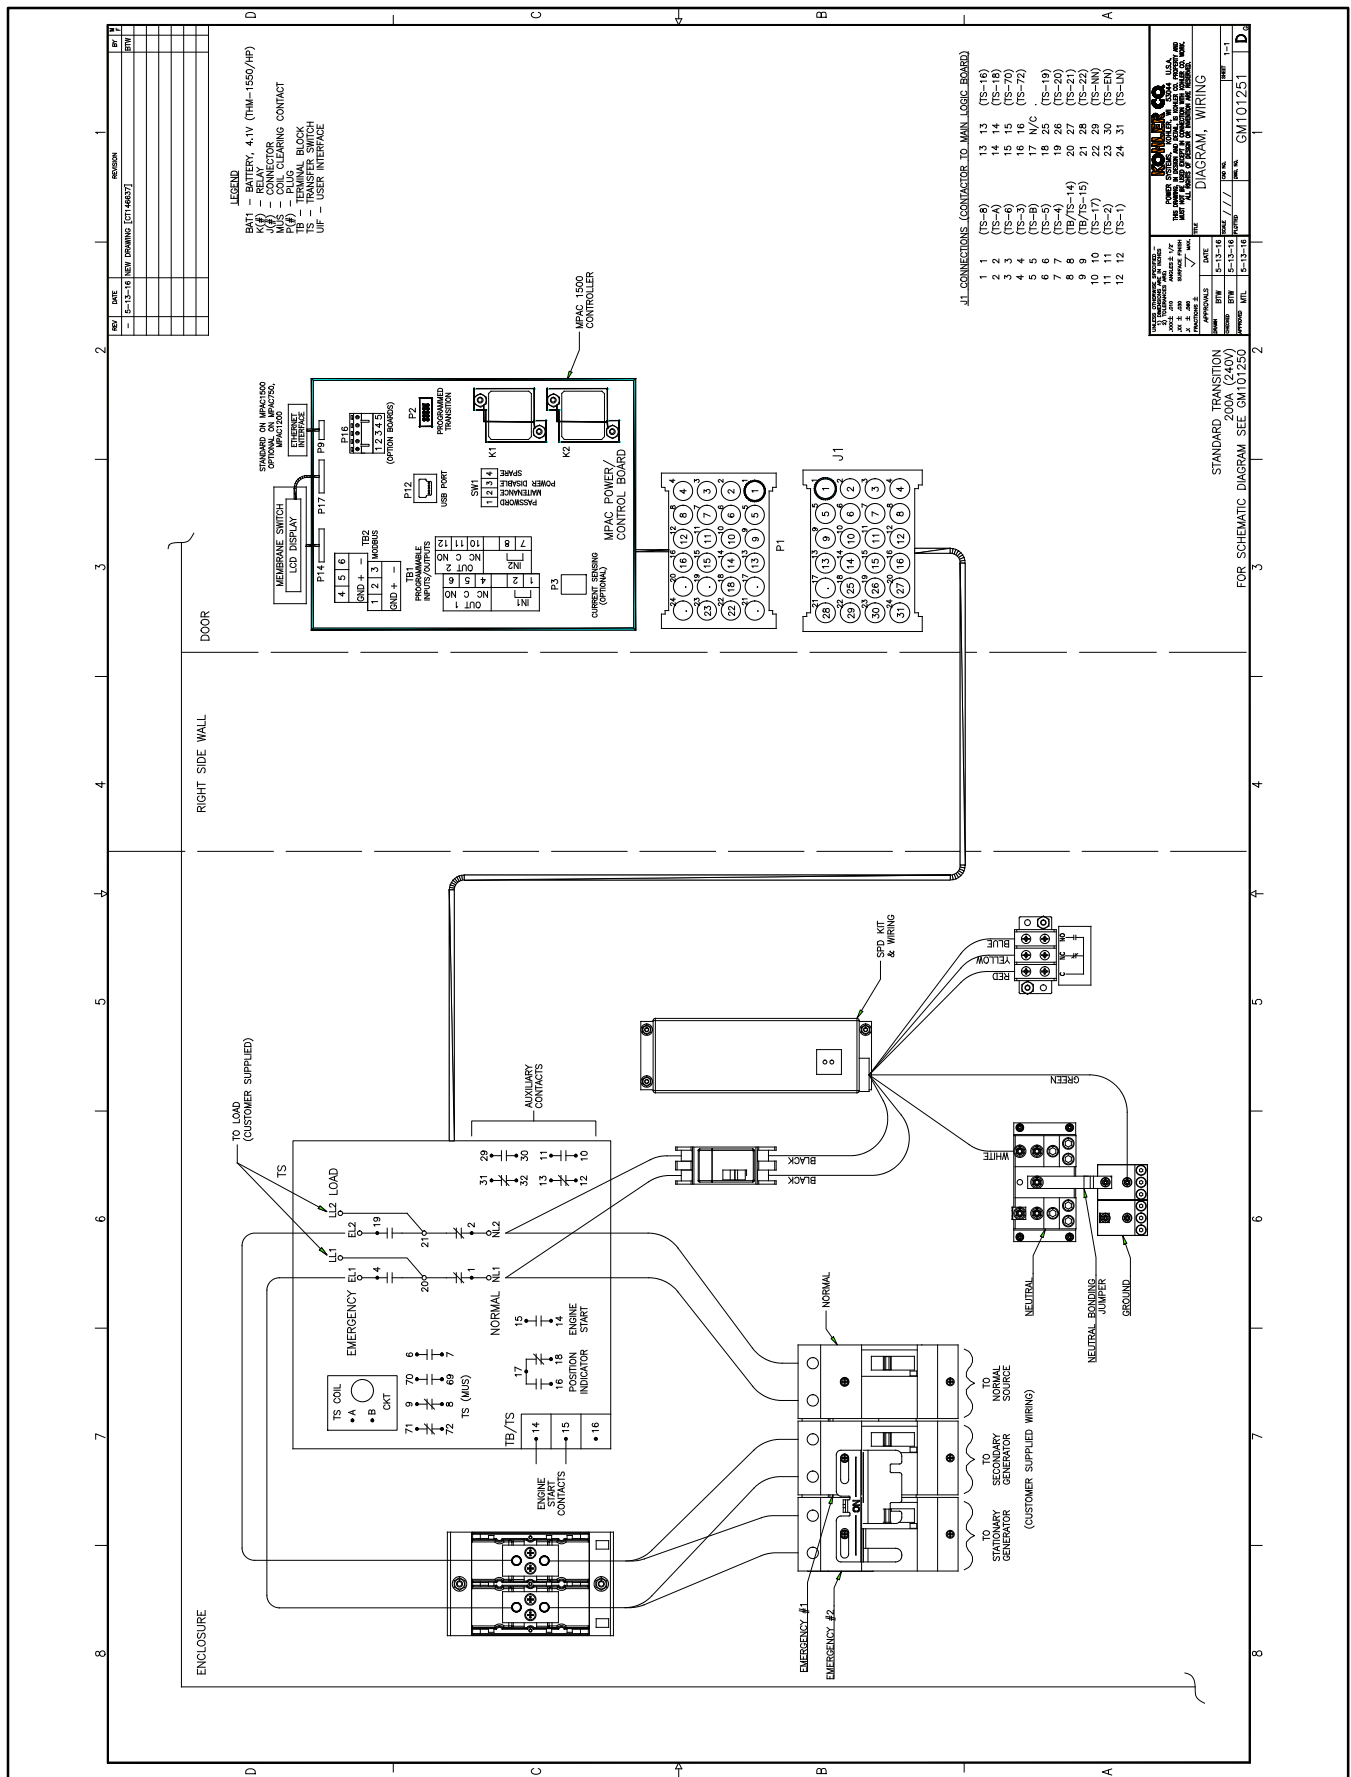


Figure 6-9 Wiring Diagram with Decision-Maker® MPAC 1500 Controller, GM101251

Appendix A Abbreviations

The following list contains abbreviations that may appear in this publication.

A, amp	ampere	cfm	cubic feet per minute	exh.	exhaust
ABDC	after bottom dead center	CG	center of gravity	ext.	external
AC	alternating current	CID	cubic inch displacement	F	Fahrenheit, female
A/D	analog to digital	CL	centerline	FHM	flat head machine (screw)
ADC	advanced digital control; analog to digital converter	cm	centimeter	fl. oz.	fluid ounce
adj.	adjust, adjustment	CMOS	complementary metal oxide substrate (semiconductor)	flex.	flexible
ADV	advertising dimensional drawing	com	communications (port)	freq.	frequency
Ah	amp-hour	coml	commercial	FS	full scale
AHWT	anticipatory high water temperature	Coml/Rec	Commercial/Recreational	ft.	foot, feet
AISI	American Iron and Steel Institute	conn.	connection	ft. lb.	foot pounds (torque)
ALOP	anticipatory low oil pressure	cont.	continued	ft./min.	feet per minute
alt.	alternator	CPVC	chlorinated polyvinyl chloride	ftp	file transfer protocol
Al	aluminum	crit.	critical	g	gram
ANSI	American National Standards Institute (formerly American Standards Association, ASA)	CSA	Canadian Standards Association	ga.	gauge (meters, wire size)
AO	anticipatory only	CT	current transformer	gal.	gallon
APDC	Air Pollution Control District	Cu	copper	gen.	generator
API	American Petroleum Institute	cUL	Canadian Underwriter's Laboratories	genset	generator set
approx.	approximate, approximately	CUL	Canadian Underwriter's Laboratories	GFI	ground fault interrupter
APU	Auxiliary Power Unit	cu. in.	cubic inch	GND, ⊕	ground
AQMD	Air Quality Management District	cw.	clockwise	gov.	governor
AR	as required, as requested	CWC	city water-cooled	gph	gallons per hour
AS	as supplied, as stated, as suggested	cyl.	cylinder	gpm	gallons per minute
ASE	American Society of Engineers	D/A	digital to analog	gr.	grade, gross
ASME	American Society of Mechanical Engineers	DAC	digital to analog converter	GRD	equipment ground
assy.	assembly	dB	decibel	gr. wt.	gross weight
ASTM	American Society for Testing Materials	dB(A)	decibel (A weighted)	H x W x D	height by width by depth
ATDC	after top dead center	DC	direct current	HC	hex cap
ATS	automatic transfer switch	DCR	direct current resistance	HCHT	high cylinder head temperature
auto.	automatic	deg., °	degree	HD	heavy duty
aux.	auxiliary	dept.	department	HET	high exhaust temp., high engine temp.
avg.	average	dia.	diameter	hex	hexagon
AVR	automatic voltage regulator	DI/EO	dual inlet/end outlet	Hg	mercury (element)
AWG	American Wire Gauge	DIN	Deutsches Institut für Normung e. V. (also Deutsche Industrie Normenausschuss)	HH	hex head
AWM	appliance wiring material	DIP	dual inline package	HHC	hex head cap
bat.	battery	DPDT	double-pole, double-throw	HP	horsepower
BBDC	before bottom dead center	DPST	double-pole, single-throw	hr.	hour
BC	battery charger, battery charging	DS	disconnect switch	HS	heat shrink
BCA	battery charging alternator	DVR	digital voltage regulator	hsg.	housing
BCI	Battery Council International	E ² PROM, EEPROM	electrically-erasable programmable read-only memory	HVAC	heating, ventilation, and air conditioning
BDC	before dead center	E, emer.	emergency (power source)	HWT	high water temperature
BHP	brake horsepower	ECM	electronic control module, engine control module	Hz	hertz (cycles per second)
blk.	black (paint color), block (engine)	EDI	electronic data interchange	IBC	International Building Code
blk. htr.	block heater	EFR	emergency frequency relay	IC	integrated circuit
BMEP	brake mean effective pressure	e.g.	for example (<i>exempli gratia</i>)	ID	inside diameter, identification
bps	bits per second	EG	electronic governor	IEC	International Electrotechnical Commission
br.	brass	EGSA	Electrical Generating Systems Association	IEEE	Institute of Electrical and Electronics Engineers
BTDC	before top dead center	EIA	Electronic Industries Association	IMS	improved motor starting
Btu	British thermal unit	EI/EO	end inlet/end outlet	in.	inch
Btu/min.	British thermal units per minute	EMI	electromagnetic interference	in. H ₂ O	inches of water
C	Celsius, centigrade	emiss.	emission	in. Hg	inches of mercury
cal.	calorie	eng.	engine	in. lb.	inch pounds
CAN	controller area network	EPA	Environmental Protection Agency	Inc.	incorporated
CARB	California Air Resources Board	EPS	emergency power system	ind.	industrial
CAT5	Category 5 (network cable)	ER	emergency relay	int.	internal
CB	circuit breaker	ES	engineering special, engineered special	int./ext.	internal/external
CC	crank cycle	ESD	electrostatic discharge	I/O	input/output
cc	cubic centimeter	est.	estimated	IP	internet protocol
CCA	cold cranking amps	E-Stop	emergency stop	ISO	International Organization for Standardization
ccw.	counterclockwise	etc.	et cetera (and so forth)	J	joule
CEC	Canadian Electrical Code			JIS	Japanese Industry Standard
cert.	certificate, certification, certified			k	kilo (1000)
cfh	cubic feet per hour			K	kelvin
				kA	kiloampere
				KB	kilobyte (2 ¹⁰ bytes)
				KBus	Kohler communication protocol
				kg	kilogram

kg/cm ²	kilograms per square centimeter	NBS	National Bureau of Standards	RTU	remote terminal unit
kgm	kilogram-meter	NC	normally closed	RTV	room temperature vulcanization
kg/m ³	kilograms per cubic meter	NEC	National Electrical Code	RW	read/write
kHz	kilohertz	NEMA	National Electrical Manufacturers Association	SAE	Society of Automotive Engineers
kJ	kilojoule	NFPA	National Fire Protection Association	scfm	standard cubic feet per minute
km	kilometer	Nm	newton meter	SCR	silicon controlled rectifier
kOhm, kΩ	kilo-ohm	NO	normally open	s, sec.	second
kPa	kilopascal	no., nos.	number, numbers	SI	<i>Système international d'unités</i> , International System of Units
kph	kilometers per hour	NPS	National Pipe, Straight	SI/EO	side in/end out
kV	kilovolt	NPSC	National Pipe, Straight-coupling	sil.	silencer
kVA	kilovolt ampere	NPT	National Standard taper pipe thread per general use	SMTP	simple mail transfer protocol
kVAR	kilovolt ampere reactive	NPTF	National Pipe, Taper-Fine	SN	serial number
kW	kilowatt	NR	not required, normal relay	SNMP	simple network management protocol
kWh	kilowatt-hour	ns	nanosecond	SPDT	single-pole, double-throw
kWm	kilowatt mechanical	OC	overcrank	SPST	single-pole, single-throw
kWth	kilowatt-thermal	OD	outside diameter	spec	specification
L	liter	OEM	original equipment manufacturer	specs	specification(s)
LAN	local area network	OF	overfrequency	sq.	square
L x W x H	length by width by height	opt.	option, optional	sq. cm	square centimeter
lb.	pound, pounds	OS	oversize, overspeed	sq. in.	square inch
lbm/ft ³	pounds mass per cubic feet	OSHA	Occupational Safety and Health Administration	SMS	short message service
LCB	line circuit breaker	OV	overvoltage	SS	stainless steel
LCD	liquid crystal display	oz.	ounce	std.	standard
LED	light emitting diode	p., pp.	page, pages	stl.	steel
Lph	liters per hour	PC	personal computer	tach.	tachometer
Lpm	liters per minute	PCB	printed circuit board	TB	terminal block
LOP	low oil pressure	pF	picofarad	TCP	transmission control protocol
LP	liquefied petroleum	PF	power factor	TD	time delay
LPG	liquefied petroleum gas	ph., ∅	phase	TDC	top dead center
LS	left side	PHC	Phillips® head Crimptite® (screw)	TDEC	time delay engine cooldown
L _{wa}	sound power level, A weighted	PHH	Phillips® hex head (screw)	TDEN	time delay emergency to normal
LWL	low water level	PHM	pan head machine (screw)	TDES	time delay engine start
LWT	low water temperature	PLC	programmable logic control	TDNE	time delay normal to emergency
m	meter, milli (1/1000)	PMG	permanent magnet generator	TDOE	time delay off to emergency
M	mega (10 ⁶ when used with SI units), male	pot	potentiometer, potential	TDON	time delay off to normal
m ³	cubic meter	ppm	parts per million	temp.	temperature
m ³ /hr.	cubic meters per hour	PROM	programmable read-only memory	term.	terminal
m ³ /min.	cubic meters per minute	psi	pounds per square inch	THD	total harmonic distortion
mA	milliampere	psig	pounds per square inch gauge	TIF	telephone influence factor
man.	manual	pt.	pint	tol.	tolerance
max.	maximum	PTC	positive temperature coefficient	turbo.	turbocharger
MB	megabyte (2 ²⁰ bytes)	PTO	power takeoff	typ.	typical (same in multiple locations)
MCCB	molded-case circuit breaker	PVC	polyvinyl chloride	UF	underfrequency
MCM	one thousand circular mils	qt.	quart, quarts	UHF	ultrahigh frequency
megggar	megohmmeter	qty.	quantity	UIF	user interface
MHz	megahertz	R	replacement (emergency)	UL	Underwriter's Laboratories, Inc.
mi.	mile	rad.	power source	UNC	unified coarse thread (was NC)
mil	one one-thousandth of an inch	RAM	radiator, radius	UNF	unified fine thread (was NF)
min.	minimum, minute	RDO	random access memory	univ.	universal
misc.	miscellaneous	ref.	relay driver output	URL	uniform resource locator (web address)
MJ	megajoule	rem.	reference	US	undersize, underspeed
mJ	millijoule	Res/Coml	remote	UV	ultraviolet, undervoltage
mm	millimeter	RFI	Residential/Commercial radio frequency interference	V	volt
mOhm, mΩ	milliohm	RH	round head	VAC	volts alternating current
MOhm, MΩ	megohm	RHM	round head machine (screw)	VAR	voltampere reactive
MOV	metal oxide varistor	rly.	relay	VDC	volts direct current
MPa	megapascal	rms	root mean square	VFD	vacuum fluorescent display
mpg	miles per gallon	rnd.	round	VGA	video graphics adapter
mph	miles per hour	RO	read only	VHF	very high frequency
MS	military standard	ROM	read only memory	W	watt
ms	millisecond	rot.	rotate, rotating	WCR	withstand and closing rating
m/sec.	meters per second	rpm	revolutions per minute	w/	with
mtg.	mounting	RS	right side	WO	write only
MTU	Motoren-und Turbinen-Union	RTDs	Resistance Temperature Detectors	w/o	without
MW	megawatt			wt.	weight
mW	milliwatt			xfrm	transformer
μF	microfarad				
N, norm.	normal (power source)				
NA	not available, not applicable				
nat. gas	natural gas				

Notes

Notes

TP-6941 6/16a

© 2014 and 2016 by Kohler Co. All rights reserved.

KOHLER® Power Systems

KOHLER CO. Kohler, Wisconsin 53044
Phone 920-457-4441, Fax 920-459-1646
For the nearest sales/service outlet in the
US and Canada, phone 1-800-544-2444
KOHLERPower.com

Kohler Power Systems
Asia Pacific Headquarters
7 Jurong Pier Road
Singapore 619159
Phone (65) 6264-6422, Fax (65) 6264-6455